

[Manuals.plus](#) /

› [TROIZO](#) /

› TROIZO VC005 Handheld Cordless Vacuum Cleaner User Manual

TROIZO VC005

TROIZO VC005 Handheld Cordless Vacuum Cleaner User Manual

Model: VC005

1. INTRODUCTION

Thank you for choosing the TROIZO VC005 Handheld Cordless Vacuum Cleaner. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read it thoroughly before use and retain it for future reference.



Image: The TROIZO VC005 Handheld Cordless Vacuum Cleaner, showcasing its compact and ergonomic design in blue.

2. SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, please observe the following safety precautions:


- Read all instructions before using this appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material, such as chlorine bleach, ammonia, or drain cleaner.
- Do not use without dust cup and filter in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.

3. PACKAGE CONTENTS

Carefully unpack your TROIZO VC005 Handheld Cordless Vacuum Cleaner and check that all items are present and in good condition. If any items are missing or damaged, please contact customer support.

- 1 x Vacuum Cleaner Unit
- 1 x Small Brush Nozzle
- 1 x 2-in-1 Crevice Nozzle
- 1 x Hose Connector
- 1 x 30cm Corrugated Hose
- 1 x Type-C Charging Cable
- 1 x Stainless Steel Filter (pre-installed)
- 2 x HEPA Filters (one pre-installed, one spare)
- 1 x User Manual

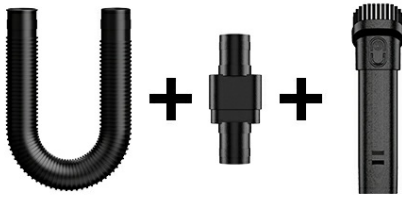

Assemble Accessories

You can assemble the 2 in 1 crevice nozzle with the hose nozzle to extend the length and clean you car more easily.



Image: A visual representation of all items included in the TROILO VC005 Handheld Vacuum package, including the main unit, various nozzles, hose, charging cable, and filters.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your TROILO VC005 Handheld Cordless Vacuum Cleaner.

Dual-Layer Filtration Technology

Efficiently capture 99.99% of all particles



Image: An exploded view of the vacuum's filtration system, showing the dust cup, stainless steel filter, and HEPA filter components.

Key Components:

- **Main Unit:** Contains the motor, battery, and control buttons.
- **Dust Cup:** Transparent container for collecting debris. Capacity: 0.34 Liters.
- **Stainless Steel Filter:** First layer of filtration for larger particles.
- **HEPA Filter:** Second layer of filtration for fine dust particles.
- **Power Button:** To turn the vacuum on/off and adjust suction modes.
- **Dust Cup Release Button:** To detach the dust cup for emptying.

Attachments:

- **Crevice Nozzle:** Ideal for narrow gaps, corners, and hard-to-reach areas like car seats or sofa crevices.
- **Brush Nozzle:** Suitable for cleaning carpets, upholstery, keyboards, and removing pet or human hair.
- **Corrugated Hose:** Provides extended reach and flexibility for cleaning awkward spaces.

- **Hose Connector:** Used to attach the hose to the vacuum and other nozzles.



Brush Nozzle

The dust brush tool is perfect for cleaning the keyboard, carpets, car interior, pet or human hair, clean off the dust with ease.



Image: The TROIZO VC005 Handheld Vacuum shown with its crevice nozzle, brush nozzle, and corrugated hose, highlighting their multi-functional use.

5. SETUP

5.1 Charging the Vacuum

Before first use, fully charge the vacuum cleaner. Connect the Type-C charging cable to the vacuum's charging port and plug the other end into a compatible USB power adapter (5V adapter recommended, not included) or a USB port. The charging indicator light will show the charging status. A full charge takes approximately 4-4.5 hours.



Image: The TROIZO VC005 Handheld Vacuum connected to a wall adapter via its Type-C charging cable, illustrating the charging process.

5.2 Attaching Accessories

Select the appropriate nozzle for your cleaning task and firmly attach it to the vacuum's suction inlet. For extended reach, you can combine the hose with other nozzles.

1. **Direct Attachment:** Simply push the desired nozzle (crevice or brush) onto the vacuum's suction opening until it clicks securely.
2. **Using the Corrugated Hose:**
 - Detach the hose connector from the hose if it's already attached.
 - Connect the larger end of the hose connector to the vacuum's suction inlet.
 - Connect the smaller end of the hose connector to the corrugated hose.
 - Attach the desired nozzle (crevice or brush) to the other end of the corrugated hose.



Image: A step-by-step guide demonstrating how to connect the 2-in-1 crevice nozzle with the corrugated hose and attach it to the vacuum for extended reach.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off and Suction Modes

Press the power button located on the top of the vacuum to cycle through the suction modes:

- **First Press:** Turns on the vacuum in Standard Suction mode (9000PA), providing approximately 25 minutes of runtime.
- **Second Press:** Switches to Max Suction mode (14500PA), providing approximately 13 minutes of runtime.
- **Third Press:** Turns off the vacuum.



Packing List

- 1 x Vacuum Cleaner
- 1 x Small Brush
- 1 x 2 in 1 Crevice Nozzle
- 1 x Hose Connector
- 1 x 30cm Corrugated Hose
- 1 x Type-c Charging Cable
- 1 x Stainless Steel Filter
- 2 x Hepa Filter
- 1 x User Manual

Image: The TROIZO VC005 Handheld Vacuum demonstrating its two suction levels: 9000PA (Standard) and 14500PA (Max), effectively cleaning various debris.

6.2 Using Attachments

- **Crevice Nozzle:** Use for tight spaces, corners, and edges.
- **Brush Nozzle:** Ideal for delicate surfaces, pet hair on upholstery, or dusting keyboards.
- **Corrugated Hose:** Attach for reaching under furniture, inside car interiors, or other difficult angles.



Image: The crevice nozzle attached to the TROIZO VC005 Handheld Vacuum, effectively cleaning crumbs from a sofa cushion.



Image: The brush nozzle attached to the TROIZO VC005 Handheld Vacuum, cleaning dust and debris from a carpeted floor.



Image: The corrugated hose attached to the TROIZO VC005 Handheld Vacuum, reaching under a sofa to clean a confined space.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1 Emptying the Dust Cup

Empty the dust cup when debris reaches the MAX fill line or after each use.

1. Ensure the vacuum is turned off.
2. Press the dust cup release button to detach the dust cup from the main unit.
3. Hold the dust cup over a trash bin and empty its contents.



Image: A visual guide showing how to press the release button and empty the dust cup of the TROIZO VC005 Handheld Vacuum into a trash bin.

7.2 Cleaning the Filters

The stainless steel filter and HEPA filter are washable and reusable. Clean them regularly to maintain suction power.

1. After emptying the dust cup, twist and separate the stainless steel filter from the HEPA filter.
2. Rinse both filters and the inside of the dust cup under running water.
3. Ensure all components are completely air-dried before reassembling. Do not use a dryer or direct heat.
4. Reassemble the filters and dust cup, then attach them back to the vacuum unit.

Dual-Layer Filtration Technology

Efficiently capture 99.99% of all particles



Image: An exploded view of the TROIZO VC005 filtration system, showing the detachable dust cup, stainless steel filter, and HEPA filter, ready for cleaning.

8. TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the vacuum fully.
Low suction power.	Dust cup is full. Filters are clogged. Obstruction in nozzle/hose.	Empty the dust cup. Clean or replace filters. Check for and remove any blockages.

Problem	Possible Cause	Solution
Vacuum turns off unexpectedly.	Battery is low. Overheating due to prolonged use or blockage.	Recharge the battery. Turn off the vacuum, clear any blockages, and allow it to cool down before resuming use.
Dust escapes from the vacuum.	Filters are not properly installed or damaged. Dust cup not securely attached.	Ensure filters are correctly installed. Securely attach the dust cup. Replace damaged filters.

9. SPECIFICATIONS

Feature	Detail
Brand	TROIZO
Model Name	VC005
Suction Power	14500PA (Max), 9000PA (Standard)
Motor Type	Brushless Motor
Battery Type	3 x 2000mAh Lithium Ion batteries (included)
Battery Life	Up to 25 minutes (Standard mode), 13 minutes (Max mode)
Charging Time	4-4.5 hours
Dust Cup Capacity	0.34 Liters
Filter Type	Stainless Steel Filter, HEPA Filter (Washable)
Product Dimensions	14.7"L x 3.7"W x 4.4"H
Item Weight	1.37 pounds
Connectivity Technology	USB (Type-C charging)
Control Method	Touch Button

10. WARRANTY AND SUPPORT

The TROIZO VC005 Handheld Cordless Vacuum Cleaner comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover:

- Damage caused by accident, abuse, misuse, or improper maintenance.
- Unauthorized repair or modification.
- Normal wear and tear, including filters and accessories.

For warranty claims or technical support, please contact TROIZO customer service through your original purchase platform or the contact information provided with your product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question