

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Veqotya](#) /

› [Veqotya Vecb001 MP3 Player User Manual](#)

## Veqotya Vecb001

# Veqotya Vecb001 MP3 Player User Manual

Model: Vecb001

## INTRODUCTION

This manual provides comprehensive instructions for the Veqotya Vecb001 MP3 Player. Please read this manual carefully before using the device to ensure proper operation and to maximize its features.

The Veqotya Vecb001 is a versatile MP3 player equipped with Bluetooth 5.2, a built-in speaker, FM radio, voice recorder, and e-book reader functionalities. It offers 144GB of storage (16GB internal + 128GB TF card) for your music, audiobooks, and other files.

## PACKAGE CONTENTS

Upon opening the package, please verify that all items are present and in good condition:

- Veqotya Vecb001 MP3 Player
- Earphones
- USB Charging Cable
- User Manual (this document)



Image: The Veqoty Veb001 MP3 Player, showing its sleek black design, screen, control buttons, and the included wired earphones and a 128GB Micro SD card.

## PRODUCT OVERVIEW

Familiarize yourself with the various components and controls of your MP3 player.

# SIMPLE RECORDING FUNCTION

Turn on the radio for a nice private leisure time



Image: A detailed diagram illustrating the front and side views of the Veqoty Vecb001 MP3 Player, with labels for the screen, control buttons (menu, volume up/down, next/previous song, play/pause, return/undo), headphone plug, USB port, ON/OFF switch, TF card socket, and REC button. Dimensions are also indicated: 40cm width and 95cm height.

## Controls and Ports:

- **Screen:** Displays menus, music information, and e-book content.
- **Menu Button (U-turn icon):** Accesses the main menu or returns to the previous screen.
- **Volume Up / Menu Up (Triangle pointing up):** Increases volume or navigates up in menus.
- **Volume Down / Menu Down (Triangle pointing down):** Decreases volume or navigates down in menus.
- **Next Song / Forward (Double arrow pointing right):** Skips to the next track or fast forwards.
- **Previous Song / Retire (Double arrow pointing left):** Skips to the previous track or rewinds.
- **Play/Pause Button (Vertical bars/triangle):** Plays or pauses audio/video.
- **Headphone Plug:** 3.5mm jack for connecting earphones.
- **USB Port:** For charging and data transfer.
- **ON/OFF Switch:** Powers the device on or off.
- **TF Card Socket:** Slot for inserting a Micro SD (TF) card for expanded storage.
- **REC Button:** Initiates voice recording.

## SETUP

---

### 1. Charging the Device

Before first use, fully charge the MP3 player. Connect the USB charging cable to the device's USB port and the other end to a computer's USB port or a compatible USB wall adapter (not included).

The battery indicator on the screen will show charging status. A full charge typically takes 2-3 hours.

### 2. Inserting a TF Card (Optional)

The device comes with 16GB internal memory and supports up to 128GB via a TF (Micro SD) card. To expand storage:

1. Locate the TF card socket on the side of the player.
2. Gently insert the TF card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, gently push the card inward until it clicks, then release. The card will spring out.

### 3. Transferring Music and Files

Connect the MP3 player to your computer using the USB cable. The device will appear as a removable disk drive.

- **For Music:** Drag and drop your MP3, WAV, WMA, FLAC, APE audio files into the "Music" folder on the device or TF card.
- **For E-books:** Place TXT format files into the "E-book" folder.
- **For Videos:** Place compatible video files into the "Video" folder.

*Note: Ensure audio files are in a supported format (MP3, WAV, WMA, FLAC, APE). Some users have reported issues with certain MP3 encoding settings; if files do not play, try re-encoding them to a standard MP3 format (e.g., 44.1 kHz, 128-320 kbps CBR).*

## OPERATING INSTRUCTIONS

---

### Power On/Off

Slide the ON/OFF switch to the "ON" position to power on the device. Slide it to "OFF" to power off.

### Navigation

Use the directional buttons (up/down triangles, left/right double arrows) to navigate through menus and lists. The Play/Pause button often acts as a selection button, and the Menu button (U-turn icon) acts as a back/return button.

### Music Playback

1. From the main menu, select "Music".
2. Browse by Artist, Album, Song, or Folder.

3. Select a song and press the Play/Pause button to begin playback.
4. Use the Volume Up/Down buttons to adjust volume.
5. Use the Next/Previous Song buttons to skip tracks.

## SIMPLE RECORDING FUNCTION

Clear recording can be achieved in single person or multi person classroom situations, making it your personal recording assistant



Image: A person smiling and listening to music through wired earphones connected to the Veqoty MP3 player, demonstrating the device's use for enjoying audio.

### Bluetooth Connectivity

The MP3 player supports Bluetooth 5.2 for wireless audio streaming to compatible headphones or speakers.

1. From the main menu, navigate to "Settings" then "Bluetooth".
2. Turn Bluetooth "On".
3. The player will scan for available devices. Select your Bluetooth headphones/speaker from the list to pair.
4. Once paired, audio will be routed through the Bluetooth device.

### FM Radio

To use the FM radio, ensure earphones are plugged in as they act as the antenna.

1. From the main menu, select "FM Radio".

2. Use the navigation buttons to scan for stations or manually tune.

## HIFI SOUND QUALITY

Sound balance and clarity provide you with a more comfortable music player



DAC audio  
decoder chip



Layer noise  
depth filter



MP3 WAV WMA  
FLAC  
APE Supported



Optimize the  
AMP  
amplification



Image: The Veqoty MP3 player screen showing the FM radio interface, tuned to 87.50 MHz, with a signal strength indicator. This illustrates the device's radio functionality.

### Voice Recorder

The device features a built-in voice recorder.

1. Press the dedicated "REC" button on the side of the device, or navigate to "Recorder" from the main menu.
2. Press the Play/Pause button to start recording. Press again to pause/stop.
3. Recordings are saved in WAV format.

# Product parameters



Image: A group of people in a meeting setting, with the Veqotyta MP3 player prominently displayed in the foreground, showing its screen with a recording interface (REC0008.WAV, 1:16:22:32). This image highlights the device's voice recording capability for personal or classroom use.

## E-Book Reader

View TXT format e-books on the device.

1. From the main menu, select "E-book".
2. Select the desired TXT file to open.
3. Use navigation buttons to scroll through pages.

## Other Functions

The Veqotyta Vecb001 also includes features such as Alarm, Video playback, Folder browsing, and A-B Repeat for audio. Explore these options through the main menu.

# POWERFUL FUNCTIONS

Immerse oneself in the world of music in one second



Alarm



Record



Video



Music



Folder



E-book



FM Radio



A-B Repeat



Image: A graphic showing the Veqoty MP3 player and a user, with icons representing its various functions: Alarm, Record, Video, Music, Folder, E-book, FM Radio, and A-B Repeat. This visually summarizes the device's multifunctional capabilities.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use liquid cleaners or aerosols.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.
- **Avoid Drops:** Protect the device from drops and impacts, which can damage internal components or the screen.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Battery is depleted.	Charge the device for at least 30 minutes.
"File not supported" error for music.	Audio file format is not compatible or encoding issue.	Ensure files are MP3, WAV, WMA, FLAC, or APE. Try re-encoding problematic MP3s to a standard bitrate (e.g., 128-320 kbps CBR) and sample rate (44.1 kHz).
Bluetooth connection issues.	Device is out of range, target device not in pairing mode, or interference.	Ensure both devices are within 10 meters. Put the receiving device into pairing mode. Turn off and on Bluetooth on the MP3 player.
FM Radio not working.	Earphones not plugged in (acting as antenna).	Plug in the wired earphones firmly into the headphone jack.
Device freezes or becomes unresponsive.	Software glitch or temporary error.	Slide the ON/OFF switch to "OFF" for 10 seconds, then slide back to "ON" to restart.

## SPECIFICATIONS

- **Model:** Vecb001
- **Brand:** Veqoty
- **Storage Capacity:** 16GB Internal, expandable up to 128GB via TF card (144GB total with included card)
- **Connectivity:** Bluetooth 5.2, USB
- **Screen Size:** 1.54 inches
- **Display Technology:** LCD
- **Supported Audio Formats:** MP3, WAV, WMA, FLAC, APE
- **Supported E-book Format:** TXT
- **Supported Video Format:** (Specific format not provided, assume common small screen formats like AMV/AVI)
- **Functions:** Music Player, FM Radio, Voice Recorder, E-book Reader, Alarm, Video Player
- **Dimensions:** Approximately 95mm x 40mm (3.74 x 1.57 inches)
- **Weight:** Approximately 2.99 ounces (85 grams)
- **Included Components:** MP3 Player, Earphones, USB Cable

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the contact details provided by Veqotyia at the point of purchase or visit the official Veqotyia website.

Keep your purchase receipt as proof of purchase for warranty claims.