

## EAKKOR T10

# EAKKOR T10 Voice Activated Recorder User Manual

Model: T10

## 1. PRODUCT OVERVIEW

---

The EAKKOR T10 is a compact and portable voice activated digital audio recorder designed for high-quality sound capture. It features 68GB of storage, 1536Kbps HD audio recording, noise cancellation, and a long-lasting battery, making it suitable for conferences, lectures, and personal notes.

# Ultra-Light MP3 Player with Clip-On Design Free your hand ideal for fitness



*Image 1.1: Front view of the EAKKOR T10 Voice Activated Recorder, showcasing its compact design and display.*

## 2. PACKAGE CONTENTS

Before using your EAKKOR T10 recorder, please ensure all items are present in the package:

- 1 x EAKKOR T10 Voice Activated Recorder
- 1 x Earphone
- 1 x USB Cable
- 1 x User Manual (this document)
- 1 x Screen Protector
- 1 x Type-C Adaptor

# PACKING LIST

- ✓ MICROPHONE
- ✓ TAPE-C ADAPTOR
- ✓ WIRED EARPHONES
- ✓ USER MANUAL
- ✓ SCREEN PROTECTOR
- ✓ MP3 VOICE RECORDER
- ✓ CHARGING CABLE



Image 2.1: All components included in the EAKKOR T10 Voice Activated Recorder package, laid out for inspection.

## 3. SETUP

### 3.1 Charging the Device

The EAKKOR T10 recorder has a built-in rechargeable battery. For optimal performance, fully charge the device before first use. A full charge provides approximately 45 hours of continuous recording.

1. Connect the provided USB cable to the recorder's charging port.
2. Connect the other end of the USB cable to a USB power adapter (not included) or a computer's USB port.
3. The device display will indicate charging status.
4. Once fully charged, disconnect the USB cable.

### 3.2 Power On/Off

- To power on: Press and hold the Power button until the screen illuminates.
- To power off: Press and hold the Power button until the device shuts down.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Basic Recording

The EAKKOR T10 simplifies recording with a dedicated slide button.

1. Ensure the device is powered on.
2. Slide the recording button to the 'Record' position to start recording. The screen will display the recording status.
3. To stop recording, slide the button back to the 'Save' position. The recording will be automatically saved.

### 4.2 Voice Activated Recording (VAR)

This feature conserves battery and storage by only recording when sound is detected.

1. Navigate to the VAR settings in the device menu.
2. Enable Voice Activated Recording and adjust sensitivity levels as needed.
3. Start recording as usual. The device will pause recording during silence and resume when sound is detected.

### 4.3 Playback

You can play back recordings directly on the device using the built-in speaker or connected earphones.

1. From the main menu, navigate to the 'Recordings' or 'Files' section.
2. Select the desired audio file using the navigation buttons or touch screen.
3. Press the 'Play' button to begin playback.
4. Use the volume controls to adjust the audio level.



## **SENSITIVE FULL-SCREEN TOUCH USER-FRIENDLY**

simple and intuitive design for quick start and smooth  
function switching



*Image 4.1: The EAKKOR T10's sensitive full-screen touch interface, showing various application icons for user-friendly navigation.*

### **4.4 File Transfer to Computer**

Transferring files to your computer allows for backup, editing, and management of your recordings.

1. Connect the EAKKOR T10 to your computer using the provided USB cable.
2. The device will appear as a removable storage drive on your computer (compatible with Mac/Windows).
3. Open the device folder and locate your audio files.
4. Drag and drop files to your computer's desired location.

# Ultimate Sound Experience support multiple formats:

MP3,WMA,WAV,APE,FLAC,TXT

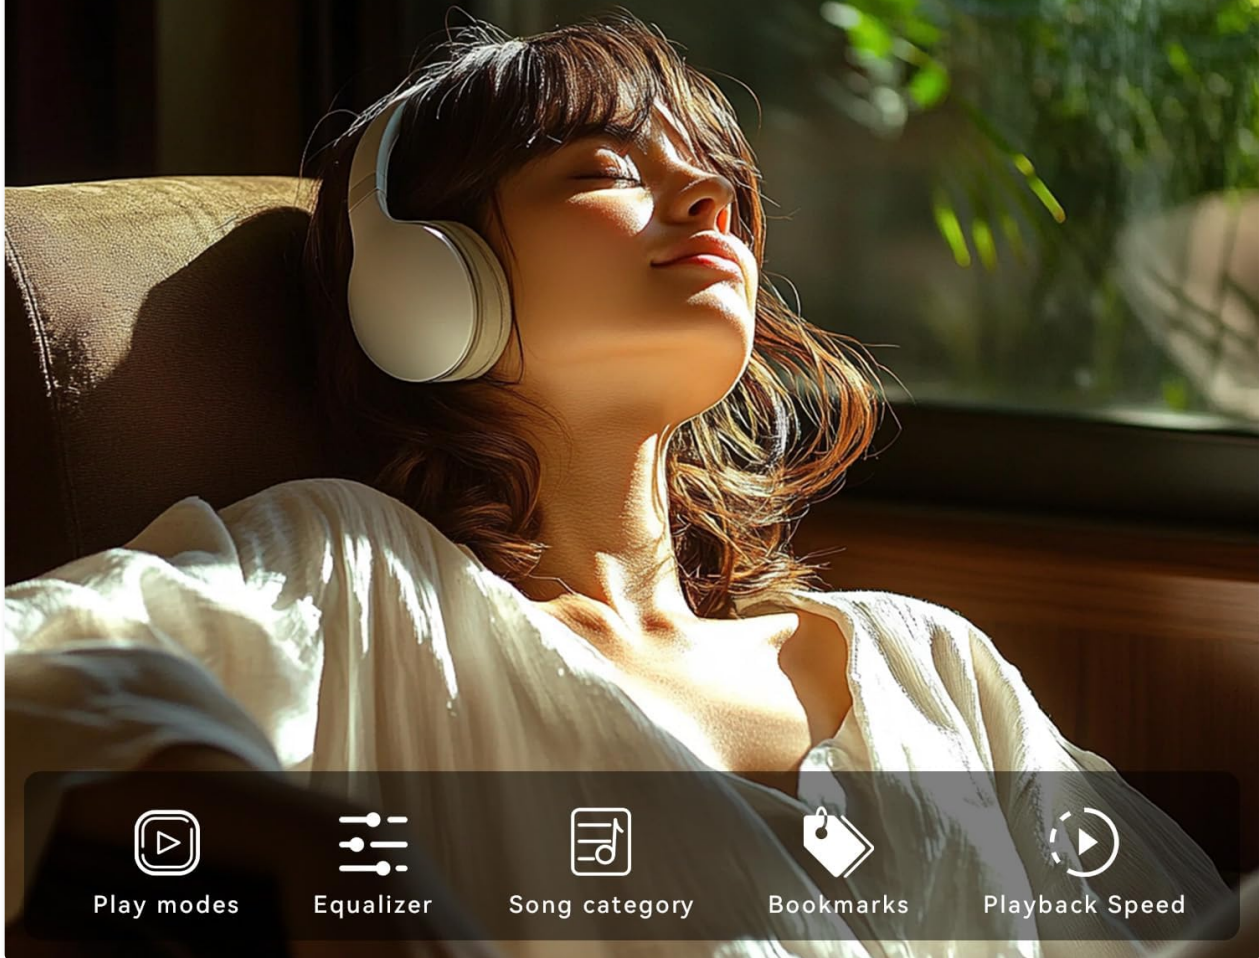


Image 4.2: The EAKKOR T10 connected to a laptop via USB-C, illustrating the fast data transfer capability for music, recordings, or e-books.

## 4.5 Line-In Recording

The device supports direct recording from other audio sources via its line-in port.

1. Connect an audio cable (not included) from the output of another audio device (e.g., phone, computer) to the line-in port on the EAKKOR T10.
2. Start recording on the T10. The audio from the connected device will be captured.

## 4.6 Password Protection

To protect your recordings from unauthorized access, you can set a password for the device.

1. Navigate to 'Settings' on the device.
2. Select 'Password' or 'Security' option.
3. Follow the on-screen prompts to set your desired password. Remember your password, as EAKKOR cannot recover it.

## 5. MAINTENANCE

## 5.1 Cleaning

- Use a soft, dry cloth to clean the device's exterior.
- Avoid using liquid cleaners or solvents, as they may damage the device.

## 5.2 Storage

- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- If storing for an extended period, ensure the battery is partially charged (around 50%) to prolong its lifespan.

## 5.3 Firmware Updates

Periodically check the EAKKOR official website for any available firmware updates to ensure optimal performance and access to new features.

## 6. TROUBLESHOOTING

- **Device not turning on:** Ensure the battery is charged. Connect the device to a power source and try again. If the issue persists, perform a hard reset (refer to the device's specific reset procedure in the full manual, if available).
- **Poor recording quality:** Check microphone placement. Ensure the device is not covered. Reduce background noise. Verify that noise cancellation settings are configured appropriately.
- **Cannot transfer files to computer:** Ensure the USB cable is securely connected to both the recorder and the computer. Try a different USB port or cable. Restart both the recorder and the computer. Ensure your computer's operating system is up to date.
- **Device freezes or becomes unresponsive:** Press and hold the Power button for 10-15 seconds to force a restart.
- **Short battery life:** Ensure the device is fully charged. Reduce screen brightness. Disable unnecessary features like continuous backlight.

## 7. SPECIFICATIONS

Feature	Specification
Model Number	T10
Memory Storage Capacity	68GB (internal) / 16GB (as per specifications, actual product may vary)
Recording Quality	Up to 1536Kbps HD
Battery Life	Up to 45 hours (recording)
Product Dimensions	1.02 x 3.81 x 4.83 cm
Item Weight	45.36 g (0.1 Pounds)
Screen Size	1.9 Inches
Compatible Devices	Personal Computer

Supported Media Type	Micro SD (for expansion, if applicable)
Display Technology	LCD

## 8. WARRANTY AND SUPPORT

---

All EAKKOR products come with a **1-year warranty** from the date of purchase. If you encounter any problems or have questions regarding your EAKKOR T10 Voice Activated Recorder, please contact our support team through the Amazon platform. Our team is committed to addressing your concerns within 12 hours and continuously improving our products and customer experience.