

TELEFUNKEN TE32750S38YXD

TELEFUNKEN TE32750S38YXD 32-inch HD LED TV User Manual

Model: TE32750S38YXD

INTRODUCTION

Thank you for purchasing the TELEFUNKEN TE32750S38YXD 32-inch HD LED TV. This manual provides essential information for the safe and efficient operation of your television. Please read it thoroughly before using the product and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- Do not expose the TV to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation. Do not block ventilation openings.
- Place the TV on a stable, level surface to prevent it from falling.
- Keep the TV away from direct sunlight, heat sources, and strong magnetic fields.
- Unplug the power cord during lightning storms or when unused for long periods.
- Do not open the TV casing. Refer all servicing to qualified personnel.

PACKAGE CONTENTS

Verify that all items are present in the box:

- TELEFUNKEN TE32750S38YXD 32-inch HD LED TV
- Remote Control
- Power Cord
- TV Stand (Base and Screws)
- User Manual

SETUP

Unpacking

Carefully remove the TV from its packaging. It is recommended to keep the original packaging for future transport or servicing.

Attaching the Stand

1. Place the TV face down on a soft, clean surface to prevent screen damage.
2. Align the stand base with the mounting holes on the bottom of the TV.
3. Secure the stand using the provided screws. Do not overtighten.
4. Carefully lift the TV to its upright position on a stable surface.

Wall Mounting

This TV supports wall mounting. A VESA-compatible wall mount (not included) is required. Refer to the wall mount manufacturer's instructions for installation. Ensure the wall can support the weight of the TV.

Connecting Peripherals

- **HDMI:** Connect external devices like Blu-ray players or game consoles to the HDMI ports.
- **USB:** Insert a USB drive into the USB port for media playback.
- **Antenna/Cable:** Connect your antenna or cable TV signal to the ANT IN port.
- **Audio Out:** Use the 3.5mm audio jack or RCA ports for external audio systems.

First Time Power On

1. Plug the power cord into the TV and then into a wall outlet.
2. Press the power button on the remote control or on the TV.
3. Follow the on-screen instructions to complete the initial setup, including language selection, country, and channel scanning.



This image displays the TELEFUNKEN TE32750S38YXD 32-inch HD LED TV from the front, showcasing its slim bezel and the stand. The screen shows a colorful, high-definition image, highlighting its display capabilities. The bottom bezel features the 'TELEFUNKEN' logo.

OPERATING YOUR TV

Remote Control Overview

The remote control allows you to access all TV functions. It typically includes buttons for power, volume, channel selection, input source, menu navigation, and specific function keys.

Basic Functions

- **Power:** Press to turn the TV on or off.
- **Volume:** Use the VOL +/- buttons to adjust the sound level.
- **Channel:** Use the CH +/- buttons to change channels.
- **Mute:** Press to temporarily turn off the sound.

Input Selection

Press the 'Source' or 'Input' button on your remote to cycle through available input sources (HDMI1, HDMI2, USB, DTV, ATV, etc.). Select the desired input for your connected device.

Menu Navigation

Press the 'Menu' button to access the TV's main menu. Use the arrow keys to navigate through options and 'OK' or 'Enter' to confirm selections. 'Exit' or 'Back' will return you to the previous screen or exit the menu.

Tuner Setup (DVB-T2/C/S2)

Your TV supports DVB-T2 (terrestrial), DVB-C (cable), and DVB-S2 (satellite) digital tuners. To scan for channels:

1. Go to the 'Channel' or 'Setup' menu.
2. Select 'Auto Scan' or 'Manual Scan'.
3. Choose the tuner type (Antenna, Cable, or Satellite) and follow the on-screen prompts to start scanning.

MAINTENANCE

Cleaning the Screen

Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, slightly dampen the cloth with water or a specialized screen cleaner. Never spray liquid directly onto the screen.

General Care

- Dust the TV casing regularly with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents.
- Ensure adequate airflow around the TV to prevent overheating.

TROUBLESHOOTING

Problem	Possible Solution
No power	Check if the power cord is securely plugged into the TV and the wall outlet. Test the outlet with another device.
No picture, but sound is present	Ensure the correct input source is selected. Check cable connections to external devices.
No sound, but picture is present	Check the volume level and ensure the TV is not muted. Verify audio cable connections if using external speakers.

Problem	Possible Solution
Remote control not working	Replace the batteries. Ensure there are no obstructions between the remote and the TV's IR sensor.
Poor picture quality	Check antenna or cable connections. Adjust picture settings in the TV menu. If using an external device, check its output resolution.







SPECIFICATIONS

Feature	Specification
Model Number	TE32750S38YXD
Screen Size	32 inches (81.3 cm)
Display Resolution	1366 x 768 pixels (HD Ready)
Display Type	LED-LCD, Direct-LED backlight
Aspect Ratio	16:9
Brightness	250 cd/m ²
Response Time	8 ms
Contrast Ratio	3000:1
Digital Tuner	DVB-C, DVB-S2, DVB-T2 (H.265/HEVC)
Hardware Interface	HDMI, USB
Total USB Ports	1
Audio Input	HDMI, RCA, 3.5 mm
Audio Output Mode	Stereo
Surround Configuration	2.1
Voltage	230 Volts
Installation Type	Wall mount, Table mount
Item Weight	8.5 Kilograms
Color	Black

WARRANTY AND SUPPORT

Your TELEFUNKEN TV comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or warranty claims, please contact your retailer or the official TELEFUNKEN customer service in your region. Keep your purchase receipt as proof of purchase.

Related Documents - TE32750S38YXD

	<p>Instrukcja Obsługi Telewizora TELEFUNKEN TFL-40BPF1000</p> <p>Szczegółowa instrukcja obsługi telewizora kolorowego TELEFUNKEN TFL-40BPF1000, zawierająca informacje o bezpieczeństwie, podłączeniach, obsłudze pilota, funkcjach, konfiguracji, odtwarzaniu multimediów, nagrywaniu, rozwiązywaniu problemów i specyfikacjach technicznych.</p>
	<p>TELEFUNKEN TE50292S26Y2P Operating Instructions and Specifications</p> <p>Comprehensive operating instructions, safety information, features, connectivity options, troubleshooting, and technical specifications for the TELEFUNKEN TE50292S26Y2P colour television. Includes VESA mount details and product fiche information.</p>
	<p>TELEFUNKEN TFL-32BPH1000 Instrukcja Użytkowania Telewizora</p> <p>Kompletna instrukcja obsługi telewizora TELEFUNKEN TFL-32BPH1000, zawierająca informacje o instalacji, funkcjach, zdalnym sterowaniu i rozwiązywaniu problemów.</p>
	<p>TELEFUNKEN TFL-43VPU1000 Upute za uporabu</p> <p>Ovo je priručnik za uporabu za TELEFUNKEN TFL-43VPU1000 televizor, koji pokriva instalaciju, postavljanje, značajke i rješavanje problema.</p>
	<p>Telefunken D43F750X2CW LED TV User Manual</p> <p>Comprehensive user manual for the Telefunken D43F750X2CW LED TV, covering setup, operation, features, troubleshooting, and safety information.</p>
	<p>TELEFUNKEN TF-LED32S92T2S LCD TV Instruction Manual</p> <p>This document provides comprehensive instructions for the TELEFUNKEN TF-LED32S92T2S LCD TV with LED backlight. It covers setup, operation, troubleshooting, and technical specifications.</p>

