

Fabater Fabater7a86s9dbze

Fabater Sports Camera 1080P HD Video Recorder User Manual

Model: Fabater7a86s9dbze

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your Fabater Sports Camera. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. This camera is designed for capturing high-definition video and photos in various outdoor and indoor environments.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Fabater HD Camera
- 1 x Charging Cable
- 1 x Card Reader
- 1 x Ejection Pin
- 1 x Installation Buckle Strap
- 1 x Installation Base
- 1 x User Manual



Image: Fabater Sports Camera and its included accessories, such as the charging cable, card reader, and various mounting components.

3. PRODUCT OVERVIEW

The Fabater Sports Camera is a compact and versatile video recorder featuring 1080P HD resolution. It includes a 180-degree rotating lens and a 120-degree ultra-wide angle for flexible recording. The device is equipped with a magnetic clip for easy attachment and a powerful LED flashlight for low-light conditions.





Image: Main view of the Fabater Sports Camera, showing the front screen, control buttons, and the rotatable lens at the top.



Image: A close-up of the top part of the camera, highlighting the lens and the integrated LED lights.



Image: A close-up view of the side of the camera, showing a control button and a small indicator light.



Image: A close-up of the bottom section of the camera, revealing the speaker grilles and a USB charging port.

4. SETUP

To begin using your Fabater Sports Camera, follow these basic setup steps:

1. **Charge the Battery:** Before first use, fully charge the camera's built-in 1300mAh lithium battery using the provided charging cable. Connect the cable to the camera's USB port and a power source.
2. **Insert Memory Card:** The camera supports up to a 256GB Micro Memory Card (not included). Carefully insert the memory card into the designated slot. Ensure it is inserted correctly to avoid damage.
3. **Power On:** Press and hold the power button to turn on the camera. The device will typically enter standby mode.

5. OPERATING INSTRUCTIONS

The camera supports video recording, photo taking, and voice recording functions.

- **Video Recording:** In standby mode, press the video recording button to start recording. Press the button again to stop and save the recording.
- **Photo Taking:** In standby mode, short press the photo button to capture a still image.
- **Voice Recording:** The camera also supports voice recording. Refer to the on-screen interface or specific button for this function. Short press to save the recording.

Support your outdoor / sport recording

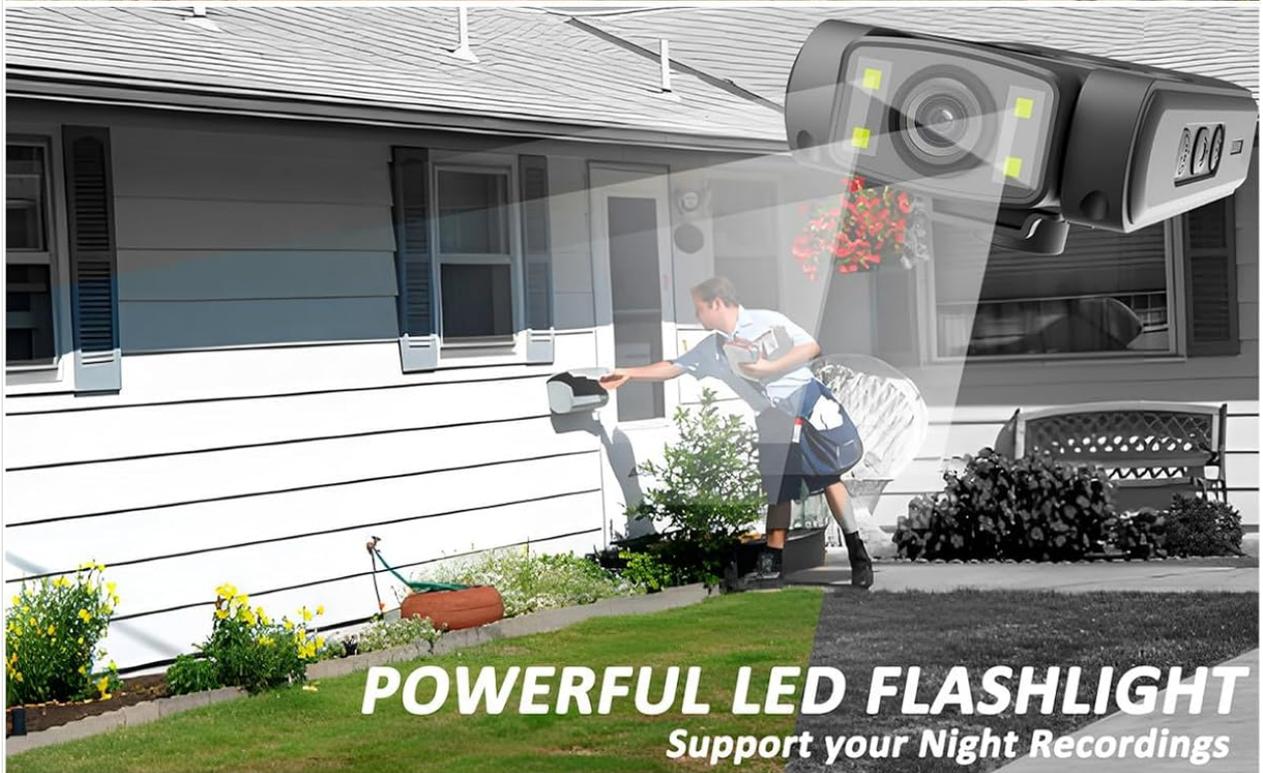


Image: The camera demonstrating its three recording angles (180-degree and 60-degree options) and two interchangeable clips, along with an illustration of the powerful LED flashlight in use.



High Power Led Flashlight

Support your night recording

Image: The camera's high-power LED flashlight feature, shown illuminating a dark outdoor scene.

6. MOBILE APP CONTROL

The Fabater Sports Camera can be controlled via a mobile application. This allows for real-time synchronization of the camera screen, live viewing, and downloading of videos. The app also provides functions for photo capture, video recording, playback, and file deletion.

THREE WAYS FOR CAMERA RECOGNIZING



•SUPPORT PC / PHONE / PAD VIEW & REPLAY •BUILT IN Memory CARD AND CARD READER



Image: Illustrates three methods for accessing camera data: direct USB connection to a computer, using a card reader, and wireless transfer via a mobile application.

7. MAGNETIC CLIP USAGE

The camera features a magnetic suction clip for convenient attachment. This clip allows the camera to be securely fixed to various surfaces, such as a backpack strap or clothing, providing stable recording during activities.

8. CHARGING AND BATTERY LIFE

The camera is equipped with a built-in 1300mAh high-capacity lithium battery, providing approximately 5 hours of continuous recording time. It supports recording while charging, allowing for extended use when connected to a power source.



5 Hours Long Time Recording
Supports up to 256GB Micro
Memory Card

Image: Highlights the camera's 5-hour recording capability and support for up to 256GB Micro Memory Cards, with an abstract background depicting power and storage.

9. MEMORY CARD

The camera supports Micro Memory Card expansion up to 256GB (memory card not included). A high-speed memory card is recommended for optimal performance, especially when recording 1080P HD video. Ensure the memory card is formatted correctly before use.

10. APPLICABLE SCENARIOS

This sports camera is designed for use in a variety of situations, including:

- Hiking
- Cycling
- Travel
- Meetings
- Outdoor Activities

- Law Enforcement
- Individual or Professional Use

11. SPECIFICATIONS

Feature	Specification
Video Resolution	1920x1080P
Main Functions	Video Recording, Photo Taking, Voice Recording
Card Slot Type	Supports up to 256GB Micro Memory Card (not included)
Battery Type	Built-in 1300mAh Lithium Battery
Item Weight	5 ounces
Package Dimensions	5.51 x 3.54 x 1.57 inches
Model Name	Fabater7a86s9dbze
Manufacturer	Fabater
Connectivity Technology	Ethernet (for data transfer, likely via USB)
Special Feature	Adjustable (180-degree rotating lens)

12. TROUBLESHOOTING

If you encounter issues with your Fabater Sports Camera, consider the following common solutions:

- **Camera Not Turning On:** Ensure the battery is fully charged. Connect the camera to a power source and try again.
- **Recording Issues:** Check if a memory card is inserted and has sufficient free space. Ensure the memory card is formatted correctly.
- **Poor Video Quality:** Verify that the lens is clean and free from smudges. Ensure adequate lighting for recording.
- **App Connectivity Problems:** Ensure the camera's Wi-Fi is enabled and your mobile device is connected to the camera's Wi-Fi network. Restart both the camera and the mobile app.
- **Device Unresponsive:** If the camera becomes unresponsive, try performing a soft reset by pressing and holding the power button for an extended period (e.g., 10-15 seconds) until it powers off, then restart.

13. MAINTENANCE

Proper care and maintenance will extend the life of your camera:

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution to avoid scratches.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For long-term storage, charge the battery to about 50% to maintain its health. Avoid fully

discharging the battery for extended periods.

- **Water Exposure:** This camera is not specified as waterproof. Avoid exposing it to water or high humidity.

14. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Fabater customer service directly. Keep your purchase receipt as proof of purchase.