

## ONN 100133520

# ONN Android TV Full HD Streaming Device User Manual

Model: 100133520

## INTRODUCTION

---

This manual provides comprehensive instructions for setting up, operating, and maintaining your ONN Android TV Full HD Streaming Device (Model 100133520). Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your entertainment experience.

## WHAT'S IN THE BOX

---

- ONN Android TV Full HD Streaming Device
- Remote Control (requires 2 AA batteries, included)
- Power Adapter
- HDMI Cable (may be included, check packaging)
- Quick Start Guide

onn.™

Google TV

Hey Google



NETFLIX

YouTube

Disney+

hulu

YouTubeTV

ESPN

peacock

STARZ

Paramount+

BET+

AMC+

+ Thousands more!

Image: The ONN Android TV streaming device (a black dongle) and its white remote control, laid out on a surface.

## SETUP

### 1. Connect the Device

Plug the ONN Android TV streaming device directly into an available HDMI port on your television. If the device

does not fit directly, you may use an HDMI extender (not included) if necessary.

## 2. **Connect Power**

Connect the provided power adapter to the Micro USB port on the streaming device, then plug the adapter into a wall outlet. The device will power on automatically.

## 3. **Select HDMI Input**

Using your TV's remote control, select the corresponding HDMI input where the ONN device is connected. The ONN Android TV setup screen should appear.

## 4. **Pair the Remote Control**

Follow the on-screen instructions to pair your remote control. This typically involves pressing and holding specific buttons on the remote until it connects to the device. Ensure the included AA batteries are correctly inserted.

## 5. **Complete On-Screen Setup**

Follow the remaining on-screen prompts to:

- Select your language and region.
- Connect to your Wi-Fi network.
- Sign in with your Google Account. This is required to access the Google Play Store and other Google services.
- Install recommended apps and customize settings.

# OPERATING THE DEVICE

---

## Navigation and Interface

The ONN Android TV device features the Google TV interface, designed for intuitive navigation and content discovery. Use the directional pad on your remote to move through menus and select items. The Home button returns you to the main screen, while the Back button navigates to the previous screen.

## The entertainment you love. With a little help from Google.

Google TV™ brings together movies, shows, live TV and more from across your apps and subscriptions and organizes them just for you. Browse 700,000+ movies and TV episodes across 10,000+ apps, and discover more than 800 free TV channels, all in one place.

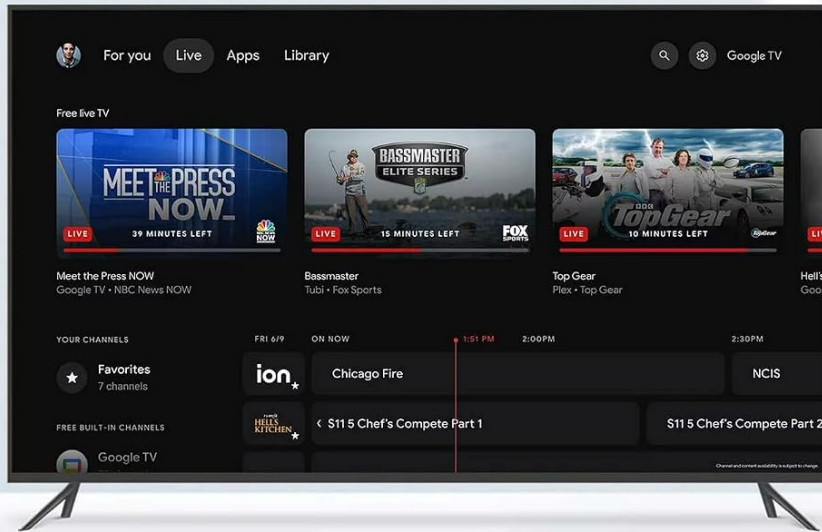


Image: A television displaying the Google TV interface, showing various streaming content options and live TV channels.

### Voice Control with Google Assistant

The remote control includes a dedicated Google Assistant button. Press this button and speak into the remote to use voice commands. You can search for content, open apps, control playback, get weather updates, and manage compatible smart home devices.



Your TV is more helpful than ever. Ask Google to find movies, stream apps, play music, and control the TV - all with your voice. Even get answers, control smart home devices, and more. Press the Google Assistant button on the remote to get started.

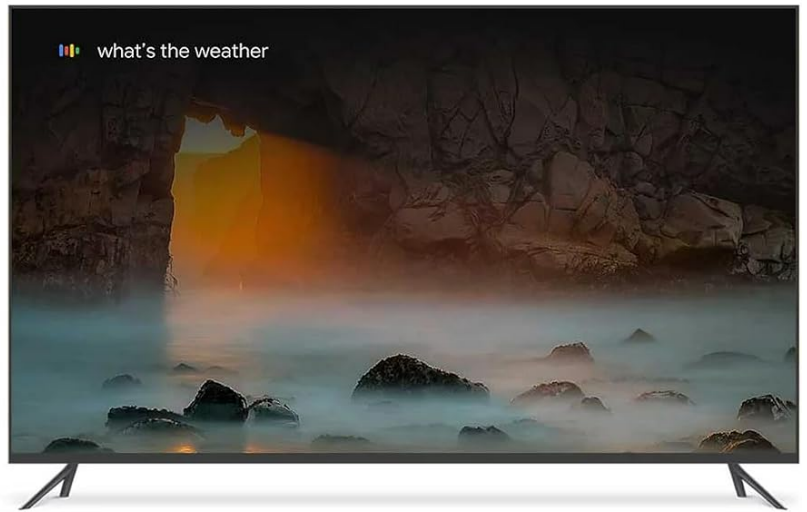



Image: The ONN remote control with the Google Assistant button highlighted, next to a TV screen displaying a weather forecast.

## Streaming Applications

Access thousands of apps through the Google Play Store, including popular streaming services like Netflix, YouTube, Prime Video, Disney+, Hulu, and many more. You can download and install apps directly from the device.

## Chromecast Built-in

The device features Chromecast built-in, allowing you to cast movies, TV shows, music, games, and other content directly from your phone, tablet, or computer to your television. Ensure your mobile device and the streaming device are on the same Wi-Fi network.

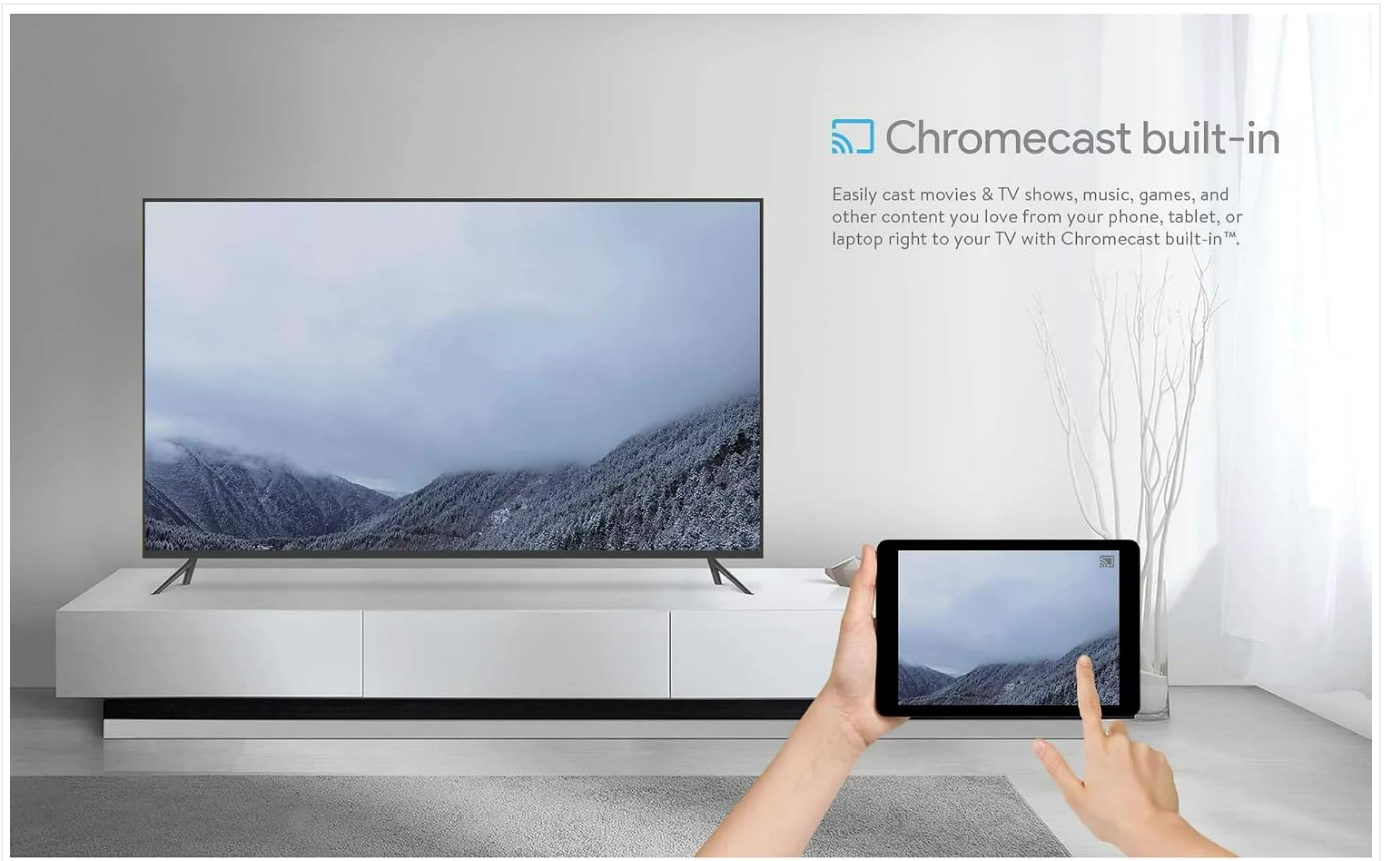

## Chromecast built-in

Easily cast movies & TV shows, music, games, and other content you love from your phone, tablet, or laptop right to your TV with Chromecast built-in™.

Image: A person holding a tablet displaying a video, with the same video mirrored on a large television screen, demonstrating Chromecast functionality.

## Watchlist Feature

Google TV allows you to create a unified watchlist for all your discoveries across different streaming services. Add shows and movies to your watchlist from your TV, phone, laptop, or through Google Search, and pick up where you left off on the big screen.

## One list for all your discoveries.

Keep all your shows and movies in a single watchlist, no matter which app its on. Add to your watchlist from your TV, phone, laptop, or through Google Search on any browser and pick right up on the big screen later.

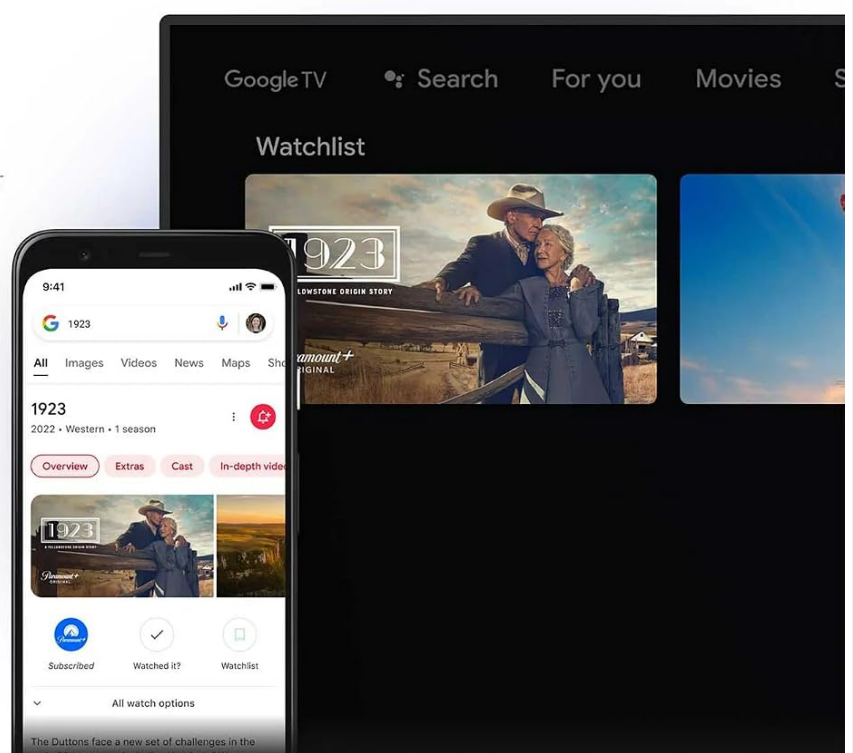


Image: A television displaying the Google TV Watchlist with movie posters, and a smartphone showing a search result for a movie with an option to add to watchlist.

## Family Profiles

Create kids' profiles with customized apps and entertainment options, ensuring a safe and tailored viewing experience for younger users.



Image: A television screen showing the Google TV interface with a "Hello, Charlie!" greeting and various children's app icons like YouTube Kids and Noggin.

## Control with Your Phone

You can use the Google TV app on your mobile device to control your ONN Android TV streaming device. This is useful if you misplace your remote or prefer using your smartphone for navigation and text input.

# Control Your TV with Your Phone

Never worry about losing your remote again! Use the Google TV app to control your TV right from your mobile device.



Image: A smartphone screen showing the Google TV remote app interface, with a television in the background displaying the Google TV home screen.

## MAINTENANCE

- **Cleaning:** Gently wipe the device and remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** When not in use for extended periods, store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Software Updates:** The device will periodically receive software updates. Ensure your device is connected to the internet to receive these updates, which improve performance and add new features.

## TROUBLESHOOTING

| Problem                        | Possible Solution                                                                                                                                                                                                                                                                                     |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| No Power/Device Not Turning On | Ensure the power adapter is securely connected to the device and a working power outlet.<br>Try a different power outlet.                                                                                                                                                                             |
| No Signal on TV Screen         | Verify the device is plugged into the correct HDMI input on your TV.<br>Ensure your TV is set to the correct HDMI input source.<br>Try a different HDMI port on your TV.<br>Restart the device by unplugging and re-plugging the power adapter.                                                       |
| Remote Control Not Responding  | Check if the batteries are correctly inserted and have sufficient charge. Replace if necessary.<br>Re-pair the remote control by following the on-screen instructions during initial setup or by checking the device settings.<br>Ensure there are no obstructions between the remote and the device. |

| Problem                      | Possible Solution                                                                                                                                                                                                                                                          |
|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Wi-Fi Connection Issues      | Ensure your Wi-Fi router is on and functioning correctly.                                                                                                                                                                                                                  |
|                              | Restart your Wi-Fi router.                                                                                                                                                                                                                                                 |
|                              | Check Wi-Fi password for accuracy.                                                                                                                                                                                                                                         |
|                              | Move the device closer to the Wi-Fi router if possible.                                                                                                                                                                                                                    |
| "Region Not Supported" Error | <p>This device is primarily intended for use in the United States and Puerto Rico. If you encounter this error outside these regions, some features or content may be restricted.</p> <p>Consult ONN support for potential workarounds or region-specific information.</p> |

## SPECIFICATIONS

| Feature                        | Detail                                            |
|--------------------------------|---------------------------------------------------|
| Brand                          | ONN                                               |
| Model Number                   | 100133520                                         |
| Operating System               | Android TV (Google TV interface)                  |
| Video Output Resolution        | Full HD (1080p)                                   |
| RAM Memory                     | 1.5 GB                                            |
| Connectivity Technology        | Bluetooth, Wi-Fi, USB, HDMI                       |
| Connector Type                 | Micro USB, HDMI                                   |
| Special Features               | Android TV, Chromecast built-in, Google Assistant |
| Color                          | Black                                             |
| Item Weight                    | 10.2 ounces                                       |
| Product Dimensions (L x W x H) | 3.54 x 0.51 x 1.18 inches                         |
| Batteries Required             | 2 AA batteries (included for remote)              |
| First Available Date           | June 20, 2024                                     |



## Brilliant 2K Full HD

2K and HDR screens provide a wider range of brightness and colors that making the video more realistic.



Image: A split screen showing a landscape, with one side labeled "2K" and the other "HDR", illustrating enhanced brightness and color range.

## WARRANTY AND SUPPORT

### Warranty Information

For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official ONN support website. Warranty terms and conditions may vary by region and purchase date.

### Customer Support

If you encounter issues not covered in this manual or require further assistance, please contact ONN customer support. Support contact details can typically be found on the product packaging, the quick start guide, or the official ONN website. For online resources, you may visit the [ONN official brand page](#) (Note: ONN is a Walmart brand).

© 2023 ONN. All rights reserved. Information in this manual is subject to change without notice.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

#### Answered questions about this manual

**Why does the screen turn off or go blank on my ONN Android TV Streaming Device after selecting the region during a factory reset?**

If your screen goes blank after selecting the region during the setup of your ONN Android TV Streaming Device (Model 100133520), it often indicates a power supply issue, an HDMI handshake error, or a...

[Read full answer](#)