

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Maxell](#) /

› [Maxell OWS Pro Bluetooth Open Earhooks Instruction Manual](#)

Maxell 197318

Maxell OWS Pro Bluetooth Open Earhooks

Instruction Manual

PRODUCT OVERVIEW

The Maxell OWS Pro Earhooks feature an open-ear design that rests gently and securely on the outer ear. This design allows users to maintain awareness of their surroundings while experiencing high-quality audio. The earhooks deliver crisp highs and soft lows for a balanced listening experience.

The device offers up to 6 hours of playback per charge, with an additional 3 charges provided by the charging case, totaling 18 hours of listening time. It supports fast charging and connects wirelessly via Bluetooth.

Designed for comfort and security, the earhooks distribute weight evenly across the ear, conforming to the natural curve. They are suitable for various activities including exercise, sports, travel, meetings, and home office use.

WHAT'S IN THE Box

- Maxell OWS Pro Bluetooth Open Earhooks
- Charging Case
- User Manual
- Ear Cushions
- Charging Cable (USB Type-C)

Wireless Sound Unleashed



Immersive Sound



Open Ear Design



Hear the World
Around You

Image: Maxell OWS Pro Earhooks shown with their transparent charging case, highlighting the open-ear design and vibrant color options.

SETUP

Initial Pairing

1. Ensure the earhooks are charged (refer to the Charging section).
2. Open the charging case. The earhooks will automatically enter pairing mode.
3. On your device (smartphone, tablet, etc.), navigate to the Bluetooth settings.
4. Select "Maxell OWS Pro" from the list of available devices.
5. Once connected, a confirmation sound may play, and the device will show as paired.

Wearing the Earhooks

The Maxell OWS Pro Earhooks are designed to rest on the outer ear. Gently place each earhook over your ear, ensuring the speaker portion is positioned comfortably near your ear canal without entering it. The flexible earhook should conform to the natural curve of your ear for a secure fit.



Image: A woman wearing the Maxell OWS Pro Earhooks, demonstrating the secure and comfortable fit on the outer ear.

OPERATING INSTRUCTIONS

Basic Controls

The Maxell OWS Pro Earhooks feature intuitive controls for managing audio playback and calls. Specific touch or button controls will be detailed in the Quick Start Guide included in your package. Generally, controls include:

- **Play/Pause:** Single tap on either earhook.
- **Next Track:** Double tap on the right earhook.
- **Previous Track:** Double tap on the left earhook.
- **Answer/End Call:** Single tap on either earhook.
- **Reject Call:** Press and hold either earhook for 2 seconds.
- **Volume Adjustment:** Refer to the Quick Start Guide for specific volume control gestures or buttons.

Environmental Awareness

The open-ear design allows you to hear ambient sounds while listening to audio. This feature is beneficial for activities where situational awareness is important, such as exercising outdoors or in busy environments.



Image: A person wearing the Maxell OWS Pro Earhooks, illustrating the ability to hear ambient sounds while enjoying music.

CHARGING AND BATTERY

The Maxell OWS Pro Earhooks provide up to 6 hours of playback on a single charge. The included charging case offers an additional 3 full charges, extending the total listening time to 18 hours.

- **Charging the Earhooks:** Place the earhooks into their respective slots in the charging case. Ensure they are properly seated. The indicator lights on the earhooks or case will show charging status.
- **Charging the Case:** Connect the provided USB Type-C charging cable to the charging port on the case and to a compatible USB power source. The case's indicator lights will show its charging progress.
- **Fast Charging:** The device supports fast charging for quick power replenishment.



Image: The Maxell OWS Pro charging case connected via USB-C, illustrating the 18-hour total playtime capability.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the earhooks and charging case regularly. Avoid using harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the earhooks in their charging case to protect them and keep them charged.
- **Avoid Extreme Conditions:** Do not expose the device to extreme temperatures, humidity, or liquids.

TROUBLESHOOTING

| Problem | Solution |
|----------------------|---|
| Earhooks not pairing | Ensure earhooks are charged. Turn off and on Bluetooth on your device. Try resetting the earhooks (refer to Quick Start Guide for reset procedure). |
| No sound | Check device volume and earhook volume. Ensure earhooks are properly connected to your device. |
| Uncomfortable fit | Adjust the position of the earhooks on your outer ear until a comfortable and secure fit is achieved. |

SPECIFICATIONS

- **Model Name:** OWS Pro, Bluetooth Open Earhooks
- **Model Number:** 197318
- **Connectivity Technology:** Wireless (Bluetooth)

- **Battery Life:** 6 Hours (per charge), 18 Hours (with charging case)
- **Earpiece Shape:** Open Ear Hooks
- **Special Feature:** Fast Charging
- **Material:** Plastic, Thermoplastic Elastomer (TPE)
- **Item Weight:** 2.99 ounces (approx. 0.09 Kilograms)
- **Package Dimensions:** 6.54 x 3.07 x 1.54 inches
- **UPC:** 025215516573

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included in your product packaging or visit the official Maxell website. Keep your purchase receipt for warranty claims.

Manufacturer: Maxell

PRODUCT VIDEOS

Maxell OWS Pro Open Earhooks Overview

Your browser does not support the video tag.

Video Description: An official seller video showcasing the key features and design of the Maxell OWS Pro Open Earhooks, including their open-ear design, sound quality, battery life, and comfortable fit. The video highlights the product's versatility for various activities.

Maxell OWS Pro Open Earhooks Features

Your browser does not support the video tag.

Video Description: A detailed look at the Maxell OWS Pro Open Earhooks, emphasizing their open-ear design for environmental awareness, crisp audio, fast charging, and ergonomic fit. It also showcases the available color options.