

## Madesa Cancun

# Madesa Cancun TV Stand Instruction Manual

Model: Cancun | Brand: Madesa

## 1. INTRODUCTION

---

Thank you for choosing the Madesa Cancun TV Stand. This manual provides essential information for the safe and correct assembly, installation, and maintenance of your new furniture. Please read all instructions carefully before beginning assembly and keep this manual for future reference.

The Madesa Cancun TV Stand is designed to accommodate televisions up to 65 inches, offering a stylish and functional solution for your entertainment area with ample storage space.

## 2. SAFETY INFORMATION

---

- **Two-Person Assembly:** For safety and ease of assembly, it is highly recommended that two adults assemble this TV stand.
- **Weight Limits:** Do not exceed the maximum weight capacity of the TV stand. Ensure your television and other items placed on the stand do not exceed its structural limits.
- **Stable Placement:** Always place the TV stand on a flat, level, and stable surface to prevent tipping.
- **Anti-Tip Kit:** If an anti-tip kit is included, it is strongly recommended to install it to secure the furniture to the wall, especially in homes with children or pets.
- **Hardware:** Use only the provided hardware. Do not substitute parts unless explicitly instructed.
- **Children Safety:** Keep small parts and packaging materials away from children during assembly. Do not allow children to climb on or play with the assembled furniture.
- **Ventilation:** Ensure adequate ventilation around electronic devices placed on the stand to prevent overheating.

## 3. PACKAGE CONTENTS

---

Before starting assembly, verify that all components and hardware are present. If any parts are missing or damaged, please contact Madesa customer support.

- All necessary wooden panels for the TV stand structure.

- Sliding door panel and associated hardware.
- Assembly hardware (screws, dowels, cam locks, etc.).
- Feet/base supports.
- Instruction manual.

## 4. ASSEMBLY INSTRUCTIONS

Follow these steps carefully for proper assembly. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.



*Figure 4.1: Fully assembled Madesa Cancun TV Stand, showcasing its design and capacity for a television and various media accessories.*

1. **Prepare the Area:** Clear a spacious area for assembly. Lay down a blanket or cardboard to protect the furniture pieces and your floor.
2. **Identify Components:** Unpack all components and identify them using the parts list in your included manual. Separate hardware into distinct groups.
3. **Assemble Base and Side Panels:** Attach the feet or base supports to the bottom panel. Then, connect the side panels

to the base and top panels using the provided hardware (e.g., dowels, screws, cam locks). Ensure all connections are secure.

4. **Install Shelves:** Insert the fixed or adjustable shelves into their designated slots or attach them with hardware.
5. **Assemble Sliding Door Mechanism:** Attach the sliding door tracks to the designated areas of the TV stand. Install the rollers or glides onto the sliding door panel.
6. **Attach Sliding Door:** Carefully insert the sliding door panel into the tracks. Test its movement to ensure it slides smoothly.
7. **Final Checks:** Once assembled, gently lift and move the stand to its desired location. Double-check all connections to ensure they are tight and secure.



Figure 4.2: Key dimensions of the TV stand, showing a width of 180 cm, a height of 50 cm, and a depth of 32 cm.



Figure 4.3: The TV stand is designed to support televisions up to a maximum size of 65 inches.



Figure 4.4: Illustration of the sliding door feature, indicating its movement along the track to reveal or conceal compartments.



**ALTURA MODELO  
FEMININO: 165cm**


**ALTURA DO  
RACK: 50cm**

*Figure 4.5: A visual comparison showing the TV stand's height (50 cm) relative to an average person (165 cm).*



Produto com  
madeira de  
**Florestas**  
**Renováveis**

*Figure 4.6: This product is manufactured using wood sourced from sustainably managed, renewable forests.*

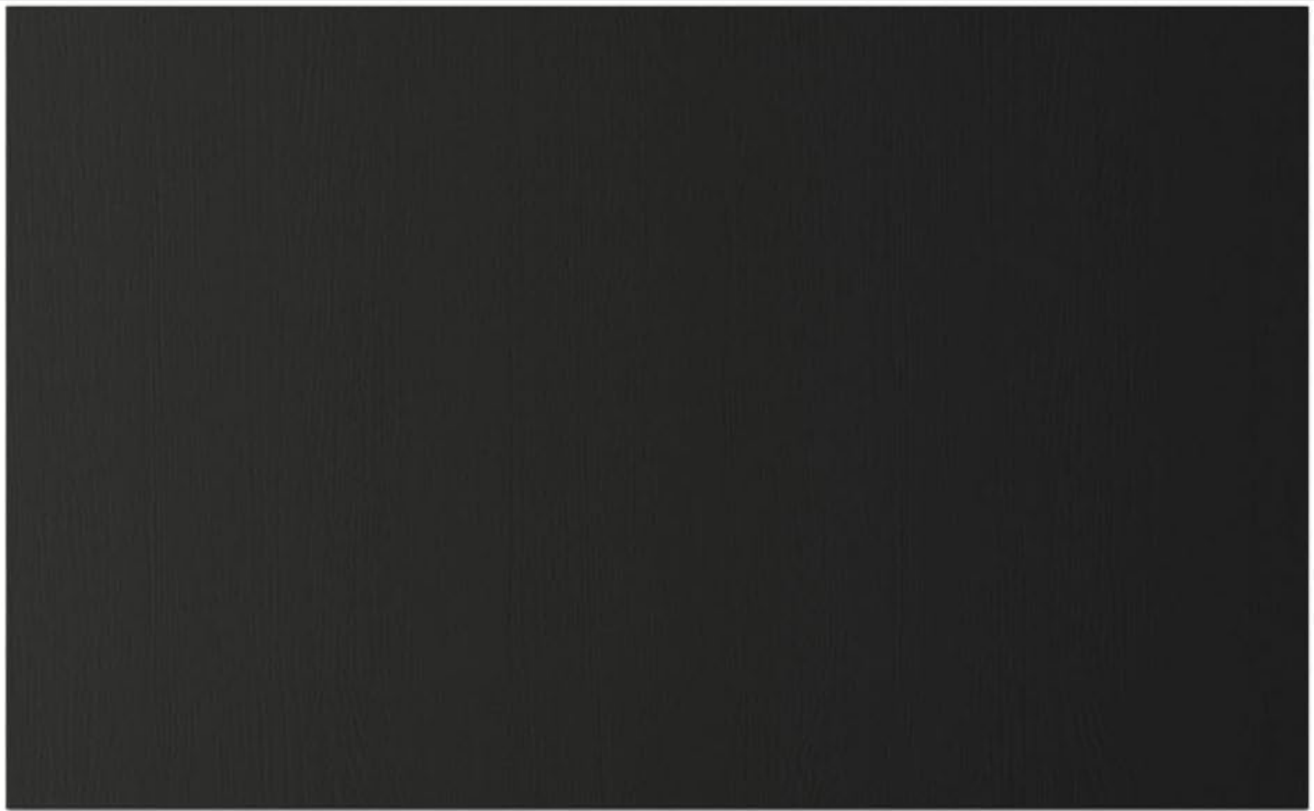

## PINTURA POLIÉSTER COM TEXTURA PRETO

*Figure 4.7: Detail of the black textured polyester paint finish, providing a durable and aesthetic surface.*



*Figure 4.8: Front view of the TV stand, illustrating the open compartments and the functionality of the sliding door.*

## 5. SETUP

---

- **Placement:** Position the TV stand in its final desired location, ensuring it is on a level surface. Use shims if necessary to prevent wobbling.
- **Cable Management:** Utilize the open back design or any designated cable openings to route and organize your TV and media device cables. This helps maintain a tidy appearance and prevents tripping hazards.
- **TV Placement:** Carefully place your television on the top surface of the stand. Ensure it is centered and stable. Do not exceed the recommended TV size of 65 inches or the weight capacity of the stand.
- **Media Devices:** Place your media players, gaming consoles, and other accessories in the open shelves or behind the sliding door.

## 6. OPERATING THE TV STAND

---

The Madesa Cancun TV Stand features a convenient sliding door for flexible storage and display options.

- **Sliding Door:** Gently slide the door left or right along its track to reveal or conceal the internal compartments. Avoid forcing the door if it encounters resistance.
- **Storage:** Use the open shelves for displaying decorative items or storing frequently accessed media. The compartments behind the sliding door are ideal for concealing less aesthetically pleasing items or for dust protection.

## 7. MAINTENANCE

---

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or polishes that may damage the finish. Dry immediately with a clean cloth.
- **Dusting:** Regularly dust the stand with a dry, soft cloth to prevent dust buildup.
- **Hardware Check:** Periodically check all screws and fasteners to ensure they remain tight. Retighten if necessary to maintain stability.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the finish.
- **Avoid Moisture:** Protect the furniture from excessive moisture and spills. Wipe up any liquids immediately.

## 8. TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Stand is wobbly or unstable.	Loose hardware or uneven floor.	Check and tighten all screws and fasteners. Ensure the stand is on a level surface; use shims if needed.
Sliding door does not move smoothly.	Debris in the track or misaligned rollers.	Clean the sliding tracks of any dust or debris. Check that the rollers are properly seated and aligned.
Missing parts or damaged components.	Packaging error or shipping damage.	Do not proceed with assembly. Contact Madesa customer support immediately for assistance.

## 9. SPECIFICATIONS

---

- **Brand:** Madesa
- **Model:** Cancun
- **Color:** Black
- **Material Type:** Wood composite with metal hardware
- **Maximum TV Size:** Up to 65 inches
- **Dimensions (Approximate):**
  - Width: 180 cm (70.8 inches)
  - Height: 50 cm (19.7 inches)
  - Depth: 32 cm (12.6 inches)
- **Assembly Required:** Yes
- **Assembly Instructions:** Easy-to-follow instructions and hardware included.

## 10. WARRANTY AND SUPPORT

---

Madesa products are manufactured with quality and durability in mind. For specific warranty information, please refer to the documentation included with your purchase or visit the official Madesa website.

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact Madesa customer support through their official channels. Please have your product model (Cancun) and purchase details ready when contacting support.

You can visit the [Madesa Store on Amazon](#) for more information.