

[Manuals.plus](#) /

› [Lasko](#) /

› Lasko MyHeat Max CD09101 Portable Ceramic Space Heater User Manual

Lasko CD09101

Lasko MyHeat Max CD09101 Portable Ceramic Space Heater User Manual

Model: CD09101 | Brand: Lasko

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Lasko MyHeat Max CD09101 Portable Ceramic Space Heater. Please read all instructions carefully before use and retain this manual for future reference.

The Lasko MyHeat Max CD09101 is a compact, digital ceramic space heater designed for indoor use in areas such as offices, homes, and bedrooms. It features electronic controls, two heat settings (1500W high, 900W low), an adjustable thermostat, and a 12-hour auto-off timer. Safety features include a tip-over switch, 2x overheat protection, and cool-touch housing.

Precision Heat Control

MyHeat Max delivers instant, powerful heat and personalized temperature at the touch of a button.



Figure 1: Lasko MyHeat Max CD09101 Portable Ceramic Space Heater, front view, showcasing its compact design.

SETUP

1. **Unpacking:** Carefully remove the heater from its packaging. Ensure all packing materials are removed before use.
2. **Placement:** Place the heater on a firm, level surface. Ensure it is at least 3 feet (0.9 meters) away from walls, furniture, and other objects. Do not place it on soft surfaces like beds or rugs where openings may be blocked.
3. **Power Connection:** Plug the 6-foot power cord directly into a 120V AC wall outlet. Do not use extension cords or power strips.
4. **Initial Inspection:** Before first use, inspect the heater for any signs of damage. If damaged, do not operate.

BETTER AIR STARTS HERE.

Lasko®



Figure 2: Proper placement of the heater on a stable surface, demonstrating heat distribution.

OPERATING INSTRUCTIONS

The MyHeat Max features electronic controls for easy operation. Refer to the control panel image below for button identification.

Maximum Heat Made Simple

MyHeat Max combines strength and style,
providing effective heat in a sleek form.



Figure 3: Detailed view of the heater's control panel and digital display.

Control Panel Functions:

- **Power Button ():** Press to turn the heater ON or OFF.
- **Heat Settings (H/L):** Press the 'H' or 'L' button to cycle between High (1500W) and Low (900W) heat modes. The selected mode will be indicated on the digital display.
- **Adjustable Thermostat (+/-):** Use the '+' and '-' buttons to set your desired temperature. The heater will cycle ON and OFF to maintain the set temperature, optimizing energy consumption in AutoEco Mode. The temperature range is typically 40°F to 90°F (4°C to 32°C).
- **Timer Button ():** Press to activate the auto-off timer. Each press will increase the timer setting by one hour, up to a maximum of 12 hours. The heater will automatically shut off after the set time expires.

Safety Features:

- **Tip-Over Switch:** The heater is equipped with an internal safety switch that automatically turns the unit off if it is accidentally tipped over. Once upright, the heater can be restarted.
- **Overheat Protection:** The heater has 2x overheat protection. If the internal temperature reaches an unsafe level, the

- heater will automatically shut off. Unplug the unit, allow it to cool for 10 minutes, and then plug it back in to reset.
- **Cool-Touch Housing:** The exterior housing is designed to remain cool to the touch during operation, reducing the risk of accidental burns.



Figure 4: Visual representation of the heater's built-in safety features.

MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your heater.

1. **Cleaning:**

- Always unplug the heater before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces. Do not use abrasive cleaners or solvents.
- Use a vacuum cleaner with a brush attachment to remove dust from the air intake and exhaust grilles.
- Ensure no water enters the interior of the heater.

2. **Storage:** When not in use, store the heater in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.
3. **Cord Care:** Never pull or tug on the power cord. Avoid wrapping the cord tightly around the heater, as this can damage the insulation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Heater does not turn on.	• Not plugged in securely. • Power outlet not functioning. • Tip-over switch activated. • Overheat protection activated.	• Ensure the power cord is firmly plugged into a 120V AC outlet. • Test the outlet with another appliance. • Place the heater on a firm, level surface. • Unplug the heater, wait 10 minutes for it to cool, then plug it back in.
Heater turns off unexpectedly.	• Tip-over switch activated. • Overheat protection activated. • Timer has expired.	• Ensure the heater is on a stable, level surface. • Unplug the heater, wait 10 minutes for it to cool, then plug it back in. • Check the timer setting and reset if necessary.
Insufficient heat output.	• Low heat setting selected. • Thermostat set too low. • Air intake/exhaust blocked.	• Select the High heat setting (1500W). • Increase the thermostat setting. • Ensure grilles are clear of obstructions and clean as per maintenance instructions.

SPECIFICATIONS

Feature	Detail
Brand	Lasko
Model Number	CD09101
Power Source	Corded Electric
Heating Method	Forced Air
Heating Element	Ceramic
Heat Output	1500 Watts (High), 900 Watts (Low)
Voltage	120 Volts
Amperage	12.5 Amps
Number of Heat Settings	2
Adjustable Thermostat	Yes
Timer	12-Hour Auto-Off
Safety Features	Tip Over Safety Protection, 2x Overheat Protection, Cool-Touch Housing
Indoor/Outdoor Usage	Indoor

Feature	Detail
Recommended Uses	Desk, Home, Office
Mounting Type	Tabletop Mount
Heating Coverage	Up to 100 sq. ft.
Color	Black
Item Dimensions (D x W x H)	7"D x 3.5"W x 9.35"H
Item Weight	2 Pounds
UPC	046013771926

WARRANTY INFORMATION

The Lasko MyHeat Max CD09101 Portable Ceramic Space Heater comes with a **3-year limited warranty** from the date of purchase. This warranty covers manufacturing defects in materials and workmanship under normal household use. It does not cover damage resulting from accident, misuse, abuse, alteration, or improper installation. For specific terms and conditions, please refer to the warranty card included with your product or contact Lasko customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance, or need to make a warranty claim, please contact Lasko customer support. Have your model number (CD09101) and purchase date ready when contacting support. For the most up-to-date contact information, please visit the official Lasko website or refer to the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question