



[Manuals.plus](#) /

> [Acupress](#) /

> Acupress Replacement Quick Clean Pod for Philips Norelco Series 7000 and 9000 Shavers Instruction Manual

Acupress Series 7000 and 9000

Acupress Replacement Quick Clean Pod Instruction Manual

For Philips Norelco 2nd Generation Series 7000 and Series 9000 Shavers

1. INTRODUCTION

This manual provides essential instructions for the proper setup, operation, and maintenance of your Acupress Replacement Quick Clean Pod. This product is designed to maintain the cleanliness and performance of compatible Philips Norelco 2nd Generation Series 7000 and Series 9000 electric shavers. Please read this manual thoroughly before using the Quick Clean Pod to ensure optimal results and product longevity.

2. PRODUCT OVERVIEW

The Acupress Quick Clean Pod is a compact and efficient cleaning system for your electric shaver. It helps keep your shaver clean, smooth, and sharp by circulating cleaning fluid through the shaver heads. Regular use, approximately twice a month, contributes to a more effective and hygienic shaving experience.



A black cylindrical Quick Clean Pod, designed for cleaning Philips Norelco electric shavers.



Replace quick clean pods

Available only for certain Philips Norelco models :S5579, S5586, S5588, S7782, S7783, S7788, S9502, S9982, S9985, S9987

A man shaves with an electric shaver, alongside the Acupress Quick Clean Pod. Text indicates compatibility with Philips Norelco S5579, S5586, S5588, S7782, S7783, S7788, S9502, S9982, S9985, S9987 models.

3. SETUP

1. **Prepare the Pod:** Unscrew the top cover of the Quick Clean Pod.
2. **Add Cleaning Solution:** Pour the appropriate cleaning liquid (sold separately) into the internal compartment of the pod. Ensure not to overfill.
3. **Secure the Cover:** Replace the top cover and turn it until it clicks securely into place.



A top-down view of the Acupress Quick Clean Pod, showing the internal compartment where cleaning solution is added.



Put the cleaning solution into the cleaning compartment

Unscrew the wireless cleaning hatch cover. Put the cleaning liquid in the cabin and turn it back to clean the hatch cover until it clicks.

Clean the razor

Place the shaver in the wireless cleaning compartment and press the shaver body button to start cleaning immediately.




Two sequential images show how to add cleaning solution to the Quick Clean Pod and then place an electric shaver into the pod for cleaning.

4. OPERATING INSTRUCTIONS

1. **Place Shaver:** After shaving, place your Philips Norelco shaver into the wireless cleaning compartment of the Quick Clean Pod. Ensure it is seated correctly.
2. **Start Cleaning:** Press the power button on your shaver to initiate the cleaning cycle. The pod will circulate the cleaning fluid through the shaver heads. The cleaning process typically takes approximately one minute for a thorough clean.
3. **Completion:** Once the cleaning cycle is complete, the shaver will stop automatically.



A detailed view of an electric shaver correctly positioned within the Acupress Quick Clean Pod, ready for a cleaning cycle.

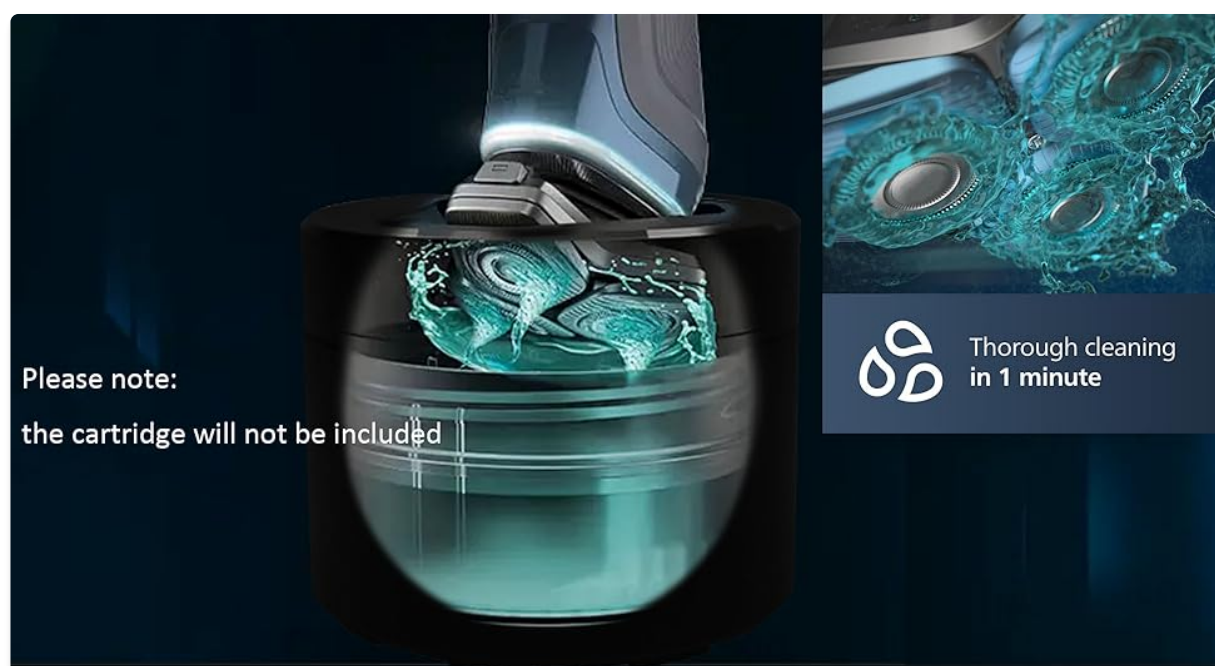

Please note:
the cartridge will not be included



Thorough cleaning
in 1 minute

Small body, can be easily stored and carried, fits for the most models

An image showing a Philips Norelco shaver docked in the Acupress Quick Clean Pod, with text emphasizing its ability to perform a deep clean in just one minute.

Your browser does not support the video tag.

This video provides a visual overview of the Acupress Quick Clean Pod, showing its design and how it functions with compatible Philips Norelco shavers.

5. MAINTENANCE

- **Cleaning Frequency:** For best results, use the Quick Clean Pod approximately twice a month.
- **Shaver Air-Drying:** After a cleaning cycle, allow the shaver to air-dry completely within the Quick Clean Pod before storing it or using it again.
- **Fluid Replacement:** Replace the cleaning fluid in the pod as needed, or when it appears dirty. Cleaning fluid is not included with the pod and must be purchased separately.



An image depicting a shaver left to air-dry completely within the Quick Clean Pod after a cleaning cycle, as recommended for proper maintenance.

6. TROUBLESHOOTING

- **Shaver Not Sensing Pod:** Some shaver models may not automatically detect the Quick Clean Pod. In such cases, manually start and stop the cleaning cycle by pressing the shaver's power button. This does not affect the cleaning performance of the pod.
- **Ineffective Cleaning:** Ensure the cleaning fluid level is adequate and that the fluid is not expired or overly contaminated. Replace the cleaning fluid if necessary.
- **Pod Not Closing Securely:** Check for any obstructions around the lid or threads. Ensure the lid is aligned correctly before twisting to close.

7. SPECIFICATIONS

- **Item Model Number:** Series 7000 and 9000
- **Manufacturer:** Acupress
- **Package Dimensions:** 6.89 x 5.75 x 3.46 inches
- **Item Weight:** 1.26 Pounds

8. WARRANTY AND SUPPORT

Acupress is committed to customer satisfaction. For any quality issues with your Quick Clean Pod, you may request a replacement or a refund. Our after-sales service team is available to assist you. For questions or support, please contact us via email, and we will endeavor to resolve your concerns promptly.