

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SnowVoice](#) /

› [SnowVoice Handheld Sewing Machine User Manual](#)

SnowVoice Clotho III

SnowVoice Handheld Sewing Machine User Manual

Model: Clotho III

INTRODUCTION

Thank you for choosing the SnowVoice Handheld Sewing Machine, Model Clotho III. This compact and portable sewing machine is designed for quick repairs, DIY projects, and on-the-go sewing needs. Please read this manual thoroughly before operating the machine to ensure safe and efficient use. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always disconnect the machine from the power source when not in use, before cleaning, or when changing accessories.
- Keep fingers away from all moving parts, especially the needle.
- Do not operate the machine if it has a damaged cord or plug, or if it is not working properly.
- Use only accessories recommended by the manufacturer.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The machine features a protective shell design to secure all moving parts inside, enhancing safety during operation.



Figure 1: The protective shell design ensures all moving parts are secured inside for user safety.

PACKAGE CONTENTS

Upon opening your package, please verify that all the following items are included:

- SnowVoice Handheld Sewing Machine (Clotho III)
- Multiple Thread Bobbins
- Measuring Tape
- Needle Threader
- Scissors
- Safety Pins
- Thimble
- Tweezers



Figure 2: The SnowVoice Handheld Sewing Machine and its complete set of accessories.

PRODUCT OVERVIEW

Familiarize yourself with the main components of your handheld sewing machine:

- **Needle:** For stitching fabric.
- **Presser Foot:** Holds fabric in place during sewing.
- **Thread Spool Pin:** Holds the thread spool.
- **Tension Dial:** Adjusts thread tension.
- **Power Button/Switch:** To turn the machine on/off.
- **Speed Adjustment Button:** Toggles between fast and slow sewing speeds.
- **Curved Grip:** Ergonomically designed handle for comfortable operation.



Figure 3: The curved grip enhances ease of operation.

SETUP

Powering the Machine

The SnowVoice Handheld Sewing Machine offers two power options:

1. **AA Batteries:** Insert four (4) AA batteries into the battery compartment, ensuring correct polarity.
2. **USB Power:** Connect the machine to a USB power source using a compatible USB cable (not always included, check package contents).



Figure 4: Powering options: AA batteries or USB connection.

Threading the Machine

1. Place a thread spool onto the spool pin.
2. Guide the thread through the tension disc.
3. Thread the needle from front to back using the provided needle threader for ease.

Preparing to Sew

1. Lift the presser foot.
2. Place the fabric under the presser foot.
3. Lower the presser foot onto the fabric.

OPERATING INSTRUCTIONS

Starting and Stopping

Press the power button/switch to start the machine. Press it again to stop.

Adjusting Sewing Speed

The machine features two speed settings: Fast and Slow.

- **Slow Gear:** Ideal for intricate work, such as sewing in fabric corners, allowing for greater accuracy.
- **Fast Gear:** Suitable for sewing long, straight lines, helping to save time on larger projects.



Figure 5: Speed settings for different sewing needs.

Sewing Techniques

- Gently guide the fabric as the machine stitches. Do not pull or push the fabric forcefully.
- For straight seams, maintain a consistent distance from the fabric edge.
- For corners, stop the machine with the needle down in the fabric, lift the presser foot, pivot the fabric, lower the presser foot, and continue sewing.

MAINTENANCE

Cleaning

- Regularly clean lint and thread scraps from the needle area and under the presser foot using a small brush or tweezers.
- Wipe the exterior of the machine with a soft, dry cloth. Do not use liquid cleaners.

Storage

Store the machine in a dry place, away from direct sunlight and extreme temperatures. It is recommended to keep it in its original packaging or a protective case when not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Machine not starting	No power; batteries dead or incorrectly inserted; USB cable not connected.	Check power source, replace batteries, ensure USB connection is secure.
Skipped stitches	Incorrect threading; needle bent or dull; wrong needle for fabric.	Re-thread the machine carefully; replace needle; use appropriate needle.
Thread breaking	Thread tension too high; poor quality thread; burr on needle or machine parts.	Adjust tension dial; use good quality thread; inspect needle and thread path for damage.
Fabric not feeding	Presser foot not lowered; fabric too thick.	Lower the presser foot; ensure fabric is suitable for the machine.

SPECIFICATIONS

- **Model:** Clotho III
- **Product Dimensions:** 8.86 x 4.72 x 2.56 inches
- **Item Weight:** 14 ounces
- **Power Source:** 4 x AA Batteries or USB
- **Brand:** SnowVoice
- **UPC:** 797999890803

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official SnowVoice website. Keep your purchase receipt as proof of purchase for any warranty claims. For further assistance, you may contact SnowVoice customer service through their official channels. Please have your model number (Clotho III) and UPC (797999890803) ready when contacting support.