

[Manuals.plus](#) /

› [Lamshaw](#) /

› Instruction Manual for Lamshaw Smart Watch Bands

Lamshaw Compatible for DEKELIFE C28, AK57, G39 Pro, Bambooinn C28

Instruction Manual for Lamshaw Smart Watch Bands

Model Compatibility: DEKELIFE C28, AK57, G39 Pro, Bambooinn C28

PRODUCT OVERVIEW

These Lamshaw silicone watch bands are designed as replacement wristbands for various military smartwatches, including the DEKELIFE C28, AK57, G39 Pro, and Bambooinn C28 models. Crafted from soft, durable, and flexible silicone, they offer a comfortable fit for daily wear and sports activities. The bands feature a standard buckle clasp for secure fastening and are available in a 22mm size.



This image displays a two-pack of silicone watch bands, one in black and one in white, designed for smartwatches. Each band features a textured surface and a metal buckle clasp, ready for attachment to a compatible smartwatch.

SETUP AND INSTALLATION

The watch bands are designed for easy installation and removal. They utilize a quick-release pin mechanism, allowing you to attach or detach the band from your compatible smartwatch without the need for special tools.

1. **Prepare Your Watch:** Ensure your smartwatch is powered off before beginning the installation process.
2. **Remove Old Band (if applicable):** Locate the quick-release pins on the underside of your current watch band. Slide the pin inward to release one side of the band, then gently pull the band away from the watch lug. Repeat for the other side.
3. **Attach New Band:** Insert one end of the new band's quick-release pin into the lug hole on one side of your smartwatch. While holding that end in place, slide the quick-release pin lever to retract the pin, align the other end with the opposite lug hole, and release the lever. The pin should snap into place. Gently tug on the band to ensure it is securely fastened.
4. **Repeat for Second Half:** Follow the same steps to attach the second half of the watch band.

Your browser does not support the video tag.

This video showcases the silicone watch band in different colors (black, white, gray, blue, red) as it is worn on a wrist, demonstrating its fit and appearance. It highlights how the band looks when attached to a smartwatch and worn by a user.

OPERATING AND WEARING

Once installed, the band is ready for use. To wear your smartwatch with the new band:

- **Adjusting the Fit:** The band features multiple holes and a traditional buckle clasp, allowing for easy adjustment to fit various wrist sizes. It is designed to fit wrists measuring between 5.51 inches (140mm) and 8.46 inches (215mm). Adjust the band so it is snug but comfortable on your wrist, allowing for proper sensor function if your smartwatch has health tracking features.
- **Secure Fastening:** Thread the end of the band through the buckle and secure the pin into one of the adjustment holes. Use the two loops to tuck away any excess band, ensuring a neat and secure fit.

MAINTENANCE AND CARE

To ensure the longevity and appearance of your silicone watch band, follow these maintenance guidelines:

- **Cleaning:** Regularly clean the band with mild soap and water. Use a soft cloth to gently wipe away dirt, sweat, or oils. Rinse thoroughly with clean water and dry completely before reattaching to your smartwatch.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, solvents, or strong detergents, as these can damage the silicone material and affect its color.
- **Storage:** When not in use, store the band in a cool, dry place away from direct sunlight to prevent discoloration or material degradation.
- **Avoid Sharp Objects:** Keep the band away from sharp objects that could scratch or puncture the silicone.

TROUBLESHOOTING

If you encounter any issues with your watch band, consider the following:

- **Band Not Attaching Securely:**
 - Ensure the quick-release pins are fully retracted and properly aligned with the lug holes on your smartwatch.
 - Verify that the band size (22mm) is compatible with your specific smartwatch model.
 - Check for any obstructions in the lug holes or on the quick-release pins.
- **Discomfort or Skin Irritation:**
 - Ensure the band is not too tight. Adjust it to a comfortable fit that allows for some movement without being loose.
 - Regularly clean the band and your wrist to prevent buildup of sweat, dirt, or soap residue, which can cause irritation.
 - If irritation persists, discontinue use and consult a healthcare professional.
- **Band Discoloration:**
 - Silicone can sometimes absorb dyes from clothing or other materials. Clean the band regularly as described in the Maintenance section.
 - Avoid prolonged exposure to direct sunlight or harsh chemicals.

SPECIFICATIONS

Feature	Detail
Material	Soft Silicone
Band Width	22mm
Wrist Size Compatibility	5.51" - 8.46" (140mm - 215mm)
Clasp Type	Buckle
Compatible Models	DEKELIFE C28, AK57, G39 Pro, Bambooinn C28

Feature	Detail
Package Contents	Watch band ONLY (Watch not included)

WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the product listing on the retailer's website or contact the seller directly. Keep your purchase receipt as proof of purchase.

For further assistance, you may visit the [Lamshaw brand page on Amazon](#).

© 2024 Lamshaw. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question