

[Manuals.plus](#) /

> [Keenstone](#) /

> Keenstone Smart Touch Screen Toaster 2 Slice, Retro Wide Slot Stainless Steel Toaster with 6 Browning Levels, Reheat & Defrost, for Bagel, Toast, Bread, Removable Crumb Tray, Blue Extra Wide Slot Blue

Keenstone TA01321A-UL

Keenstone Smart Touch Screen Toaster

Model: TA01321A-UL

User Instruction Manual

1. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before operating the toaster.
- Do not touch hot surfaces. Always use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or toaster in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use appliance for other than intended use.
- Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may create a fire or risk of electric shock.
- A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Always unplug the toaster from the outlet before attempting to remove food.
- The crumb tray must be in place during operation.

2. PRODUCT OVERVIEW

Familiarize yourself with the components of your Keenstone Smart Touch Screen Toaster.



Figure 2.1: Overall view of the Keenstone Smart Touch Screen Toaster.

SENSITIVE TOUCH CONTROL TOASTER



Touch Control



Digital Display



6 Brown Setting



3 Modes



Figure 2.2: Sensitive Touch Control Panel with digital display and function buttons.

1.5" EXTRA WIDE SLOT

Suitable for different kinds of bread



Figure 2.3: Extra-wide 1.5-inch slots for various bread types.

EVEN HEAT DISTRIBUTION SYSTEM



Even heating



Figure 2.4: Internal heating elements for even heat distribution.

Key Components:

- **Touch Screen Display:** Digital interface for time and settings.
- **Browning Level Selectors:** Six touch-sensitive buttons for desired toast shade.
- **Bagel Function Button:** Toasts one side of the bagel.
- **Defrost Function Button:** Defrosts and toasts frozen bread.
- **Reheat Function Button:** Warms toast without additional browning.
- **Cancel Button:** Stops the toasting cycle immediately.
- **Toast Lever:** Lowers and raises the bread carriage.
- **Extra-Wide Slots:** Accommodates various bread thicknesses.
- **Removable Crumb Tray:** Collects crumbs for easy cleaning.

3. SETUP

1. **Unpack:** Carefully remove the toaster and all packaging materials from the box.
2. **Placement:** Place the toaster on a stable, flat, heat-resistant surface, away from flammable materials such as curtains or walls. Ensure there is adequate ventilation around the toaster.
3. **Initial Cleaning:** Wipe the exterior of the toaster with a damp cloth. Ensure the crumb tray is empty and properly inserted.
4. **First Use (Burn-off):** Before first use, operate the toaster without bread on the highest browning setting (Level 6) for one cycle. This will burn off any manufacturing residues and odors. A slight smoke or odor is normal during this initial use. Ensure the area is well-ventilated.
5. **Plug In:** Insert the power plug into a standard 120V AC electrical outlet.

4. OPERATING INSTRUCTIONS

Follow these steps for optimal toasting results.

4.1 Basic Toasting

1. **Insert Bread:** Place one slice of bread into each toasting slot. The extra-wide slots accommodate various bread types and thicknesses.
2. **Lower Lever:** Push the toast lever down until it locks into place. The digital display will illuminate, showing a default toasting time.
3. **Select Browning Level:** Use the touch-sensitive browning level buttons (1-6) on the control panel to select your desired shade. The digital display will adjust the time accordingly. Refer to the browning guide below for reference.



Figure 4.1: 6 Adjustable Browning Levels and approximate times.

4. **Toasting Cycle:** The toaster will begin toasting, and the digital display will count down the remaining time.
5. **Ejection:** Once the cycle is complete, the toast will automatically pop up, and the lever will return to its original position.

4.2 Special Functions

Your Keenstone toaster includes specialized functions for different needs:

4 FUNCTIONS IN 1 TOASTER



Figure 4.2: Overview of Bagel, Defrost, Reheat, and Cancel functions.

- **Bagel Function:** Press the **Bagel** button after lowering the lever. This function toasts the cut side of the bagel while gently warming the outer side.
- **Defrost Function:** Press the **Defrost** button after lowering the lever. This function is ideal for frozen bread, adding extra time to thaw before toasting to your selected browning level.
- **Reheat Function:** Press the **Reheat** button after lowering the lever. This function warms already toasted bread without further browning.
- **Cancel Function:** Press the **Cancel** button at any time to stop the toasting cycle and immediately eject the bread.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your toaster.

1. **Unplug:** Always unplug the toaster from the power outlet and allow it to cool completely before cleaning.
2. **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or metal

scouring pads, as they may scratch the stainless steel finish.

3. Crumb Tray Cleaning:

- Locate the removable crumb tray at the bottom of the toaster.
- Pull out the crumb tray to remove it.
- Discard accumulated crumbs.
- Wipe the tray with a damp cloth and dry thoroughly before reinserting.
- Ensure the crumb tray is fully pushed back into place before using the toaster.

4. **Internal Cleaning:** Do not attempt to clean inside the toaster with any sharp objects or metal utensils. If food becomes lodged, unplug the toaster and carefully remove the food after it has cooled.

5. **Storage:** When not in use, store the toaster in a clean, dry place.

6. TROUBLESHOOTING

If you encounter issues with your toaster, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Toaster does not turn on.	Not plugged in or power outlet issue.	Ensure the toaster is securely plugged into a working electrical outlet. Check the circuit breaker.
Bread is not toasting evenly.	Inconsistent bread thickness or moisture.	Ensure bread slices are of uniform thickness. Adjust browning level as needed.
Bread is stuck in the toaster.	Oversized bread or malfunction.	Unplug the toaster immediately. Once cooled, carefully remove the bread using non-metallic tongs.
Smoke or burning smell.	Crumbs accumulated in the tray or food lodged inside.	Unplug the toaster. Allow to cool. Remove and clean the crumb tray. If food is lodged, carefully remove it.
Digital display not responding.	Temporary electronic glitch.	Unplug the toaster for a few minutes, then plug it back in to reset the system.

7. SPECIFICATIONS

- **Brand:** Keenstone
- **Model:** TA01321A-UL
- **Power:** 800 Watts
- **Voltage:** 120V
- **Material:** Stainless Steel
- **Product Dimensions:** 6.9"D x 7.2"W x 11.6"H
- **Number of Slices:** 2
- **Special Features:** Smart Touch Screen Control, 6 Browning Levels, Bagel Function, Defrost Function, Reheat Function, Removable Crumb Tray, Extra-Wide Slots.

8. WARRANTY AND SUPPORT

Your Keenstone Smart Touch Screen Toaster is designed for durability and performance. For specific warranty details, please refer to the warranty card or documentation included with your purchase. In case of any issues or for technical

support, please contact Keenstone customer service through the contact information provided in your product packaging or on the official Keenstone website.

Please retain your proof of purchase for warranty claims.

© 2025 Keenstone. All rights reserved.