

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [PRESENCE](#) /

› PRESENCE 7.3FT Inflatable Halloween Black Cat Photo Frame Arch Instruction Manual

PRESENCE F-1210

PRESENCE 7.3FT Inflatable Halloween Black Cat Photo Frame Arch Instruction Manual

Model: F-1210

INTRODUCTION

Thank you for choosing the PRESENCE 7.3FT Inflatable Halloween Black Cat Photo Frame Arch. This product is designed to enhance your outdoor Halloween decorations with its eye-catching design and built-in LED lights. This manual provides essential information for safe setup, operation, and maintenance of your inflatable decoration.

SAFETY INFORMATION

- **Weather Conditions:** This inflatable is made of waterproof polyester fabric and can be used in light rain or snow. However, it is not designed for use in storms, heavy winds, or severe weather conditions. Prolonged exposure to heavy rain or strong winds may damage the product and its electrical components.
- **Anchoring:** Always ensure proper anchoring using the provided ropes and ground stakes, especially in windy conditions, to prevent the inflatable from being blown away or damaged.
- **Electrical Safety:** Ensure the power plug and electrical connections are protected from moisture. Do not operate if the cord or plug is damaged.
- **Placement:** Place the inflatable on a flat, clear surface, away from sharp objects, heat sources, and open flames. Ensure there is enough space for full inflation without obstruction.
- **Supervision:** Keep children and pets away from the inflatable during inflation and deflation to prevent entanglement or injury.

PACKAGE CONTENTS

Please verify that all components are present before proceeding with setup:

- 1 x Inflatable Black Cat Photo Frame Arch
- 1 x Built-in Air Blower
- 1 x Power Adapter (Plug)
- 4 x Ground Stakes

- 1 x Rope
- 1 x Water Bag (for additional stability)
- 1 x Storage Bag
- 1 x Instruction Manual (this document)



Image: Package contents for the inflatable decoration.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove the inflatable and all accessories from the storage bag.
2. **Position:** Choose a flat, clear, and dry outdoor location for your inflatable. Ensure there are no sharp objects that could puncture the material.
3. **Unfold:** Lay the inflatable flat on the ground, spreading it out completely. Ensure the built-in air blower is facing upwards and is free from obstructions.
4. **Secure Base:** If desired, fill the provided water bag and place it inside the inflatable's base for additional stability.

Ensure the bottom zipper of the inflatable is securely closed to prevent air leakage.

5. **Connect Power:** Plug the power adapter into a suitable outdoor-rated electrical outlet. The built-in fan will begin to inflate the decoration automatically.
6. **Inflate:** Allow the inflatable to fully expand. This process should be quick.
7. **Anchor:** Once fully inflated, use the provided ground stakes and rope to secure the inflatable to the ground. Attach the ropes to the designated loops on the inflatable and secure them with stakes. Adjust tension as needed to keep the inflatable stable and upright.



Image: The 7.3FT inflatable arch fully set up, illustrating its size.

OPERATING INSTRUCTIONS

- **Power On:** Once plugged in, the inflatable will automatically inflate, and the built-in LED lights will illuminate.
- **Power Off:** To turn off the inflatable, simply unplug the power adapter from the electrical outlet. The inflatable will begin to deflate.

- **Photo Frame Feature:** The arch design allows for individuals to stand within the opening for photo opportunities.



Image: Family enjoying the inflatable as a photo frame.

MAINTENANCE

- **Cleaning:** To clean the inflatable, wipe it with a damp cloth and mild soap. Do not use harsh chemicals or abrasive cleaners. Ensure the inflatable is completely dry before storing.
- **Storage:** After use, unplug the inflatable and open the bottom zipper to allow for quick deflation. Once fully deflated, fold it neatly and place it back into the provided storage bag. Store in a cool, dry place away from direct sunlight and pests.
- **Inspection:** Periodically inspect the inflatable for any tears, punctures, or damage to the fabric, stitching, or electrical components. Repair small tears with a patch kit (not included) if necessary.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Inflatable does not inflate.	<ul style="list-style-type: none"> Power not connected. Bottom zipper open. Air blower obstructed. Tear in fabric. 	<ul style="list-style-type: none"> Ensure power adapter is securely plugged into a working outlet. Close the bottom zipper completely. Clear any debris from the air blower intake. Inspect for tears and repair if possible.
Inflatable does not stand upright.	<ul style="list-style-type: none"> Insufficient anchoring. Uneven ground. Strong winds. 	<ul style="list-style-type: none"> Re-position ground stakes and ropes for better stability. Add water bag for extra weight. Move to a more sheltered location or deflate during strong winds.
LED lights are not working.	<ul style="list-style-type: none"> Power issue. Damaged LED component. 	<ul style="list-style-type: none"> Check power connection. If power is connected and fan works, but lights do not, contact customer support.
Fan stops working after getting wet.	<ul style="list-style-type: none"> Water damage to the fan motor. 	<ul style="list-style-type: none"> Unplug immediately. Allow the fan to dry completely in a well-ventilated area. If it still does not work, the fan may be permanently damaged and require replacement. Avoid using in heavy rain.

SPECIFICATIONS

- **Brand:** PRESENCE
- **Model Number:** F-1210
- **Theme:** Halloween
- **Material:** Polyester
- **Dimensions (L x W x H):** 45.6 x 85.2 x 88.8 inches (approximately 3.8 ft x 7.1 ft x 7.4 ft)
- **Item Weight:** 3.61 pounds
- **Light Color:** Bright White (Built-in LEDs)
- **Special Features:** Easy Setup, Lightweight, Portable, Built-in Fan, Built-in LEDs
- **UPC:** 810046828830

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available data. For any product inquiries, technical support, or warranty claims, please contact PRESENCE customer service through your retailer or the official brand website.



© 2025 PRESENCE. All rights reserved.