## Manuals+

Q & A | Deep Search | Upload

## manuals.plus /

- WUBEN /
- > WUBEN E1 Rechargeable LED Phone Light User Manual

## **WUBEN E1-M04**

## WUBEN E1 Rechargeable LED Phone Light User Manual

Model: E1-M04

## 1. Introduction

The WUBEN E1 is a versatile, rechargeable LED phone light designed to enhance your mobile photography and videography. Featuring a magnetic attachment, adjustable color temperature, and stepless dimming, it provides optimal lighting for various scenarios, including selfies, vlogs, video calls, and product photography. Its compact and portable design makes it an ideal everyday carry accessory.



Image 1.1: The WUBEN E1 Rechargeable LED Phone Light, showcasing its compact design and magnetic attachment capability.

## 2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- WUBEN E1 LED Phone Light
- USB Type-C Charging Cable
- Magnetic Suction Ring (for non-MagSafe compatible phones/cases)
- · Carrying Case
- User Manual

## 3. PRODUCT OVERVIEW

The WUBEN E1 features a circular LED array, a control dial, and a magnetic base with a flexible hinge. Understanding these components is key to its operation.



Image 3.1: Diagram highlighting key features of the WUBEN E1, including Max 300 Lumens, MagSafe Compatibility, 3-Color Temperature, Stepless Dimming, IP65 Waterproofing, Type-C Rechargeable, and Adjustable Phone Stand.

## **Key Components:**

- LED Array: Provides illumination with adjustable color temperature and brightness.
- Control Dial: Used for power, brightness adjustment, and color temperature selection.
- Magnetic Base: Allows secure attachment to MagSafe compatible devices or surfaces.
- Flexible Hinge: Enables adjustment of the light's angle for optimal positioning.
- **USB Type-C Port:** For charging the internal battery.

## 4. SETUP

## 4.1 Attaching to a Phone

The WUBEN E1 is designed for easy attachment to smartphones.

For MagSafe Compatible Phones (iPhone 12 series and above) or Cases: Simply align the magnetic base
of the WUBEN E1 with the MagSafe area on the back of your phone or case. The strong N54 magnets will

securely attach the light.

2. For Non-MagSafe Phones or Cases: Use the included magnetic suction ring. Peel off the adhesive backing from the magnetic ring and firmly press it onto the center of the back of your phone or phone case. Ensure the surface is clean and dry before application for optimal adhesion. Once the ring is attached, the WUBEN E1 can be magnetically secured to it.



Image 4.1: Illustration of the WUBEN E1 magnetically attaching to a phone, demonstrating the strong N54 magnet design for secure device attachment.



Image 4.2: Visual guide to WUBEN E1 compatibility, showing direct use with iPhone 12 and above, use with MagSafe cases, and use with non-MagSafe phones via a metal plate.

## 5. OPERATING INSTRUCTIONS

## 5.1 Power On/Off

- To Power On: Press and hold the control dial for approximately 1-2 seconds. The light will illuminate with the last used settings.
- To Power Off: Press and hold the control dial for approximately 1-2 seconds. The light will turn off.

## 5.2 Adjusting Brightness (Stepless Dimming)

Once the light is on, rotate the control dial to adjust the brightness level. Rotate clockwise to increase brightness and counter-clockwise to decrease brightness. The brightness can be adjusted steplessly from 10% to 100%.

## **5.3 Changing Color Temperature**

The WUBEN E1 offers three distinct color temperature modes: Warm Tone, Natural Tone, and Cool Tone.

• **To Change Mode:** While the light is on, quickly press the control dial once. Each press will cycle through the modes: Warm Tone (3000-3500K), Natural Tone (3500-5000K), and Cool Tone (5000-6000K).

## **MULTIPLE LIGHT MODES**

You can freely adjust the color temperature and brightness according to your preferences



















Image 5.1: Visual representation of the WUBEN E1's multiple light modes, demonstrating Warm Tone (3000-3500K), Natural Tone (3500-5000K), and Cool Tone (5000-6000K), along with infinitely adjustable brightness from 10%-100%.

## 5.4 Using as a Phone Stand

The flexible hinge allows the WUBEN E1 to function as a phone stand. Simply fold out the light to the desired angle to prop up your phone for hands-free viewing or recording.

## ADJUSTABLE MOBILE PHONE HOLDER

With a 360-degree rotation feature, this stand can effortlessly adjust the viewing angle to suit your preferences.



Image 5.2: Various configurations of the WUBEN E1 acting as an adjustable mobile phone holder, showcasing its 360-degree rotation feature for effortless viewing angle adjustments.

## 5.5 Flexible Angle Adjustment

The light features a flip design that allows for more than 270 degrees of rotation. This enables you to direct the light precisely where needed, whether for front-facing selfies or illuminating subjects from behind the phone.

# Flip angle > 270° Flip angle > 270°



Image 5.3: The WUBEN E1 demonstrating its flexible flip design, allowing for over 270 degrees of angle adjustment to achieve optimal lighting for photos.

## 6. CHARGING

The WUBEN E1 is equipped with a USB Type-C port for convenient and fast charging.

- 1. Connect the provided USB Type-C cable to the charging port on the WUBEN E1.
- 2. Connect the other end of the cable to a USB power source (e.g., wall adapter, computer USB port, power bank).
- 3. The indicator light will show red during charging and turn blue when charging is complete.

A full charge typically takes approximately 50 minutes. The maximum battery life is up to 70 hours in 'Low' mode.



Image 6.1: The WUBEN E1 connected for Type-C fast charging, showing the indicator lights for charging (red) and charging completed (blue).

## 7. MAINTENANCE

- Cleaning: Use a soft, dry cloth to wipe the surface of the light. Avoid using abrasive cleaners or solvents.
- **Storage:** Store the WUBEN E1 in a cool, dry place when not in use. If storing for an extended period, ensure it is partially charged to prolong battery life.
- Water Resistance: The WUBEN E1 has an IP65 rating, meaning it is protected against dust ingress and low-pressure water jets from any direction. It is not designed for submersion.



Image 7.1: The WUBEN E1 demonstrating its high Color Rendering Index (CRI) of 90+, which helps restore true colors in photography.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Light does not turn on.	Low battery.	Charge the device using the provided USB Type-C cable.
Light does not turn on.	Control dial not pressed long enough.	Press and hold the control dial for 1-2 seconds to power on.
Magnetic attachment is weak or light falls off.	Phone/case is not MagSafe compatible or magnetic ring is not properly installed.	Ensure your phone or case is MagSafe compatible. If not, use the included magnetic suction ring and ensure it is firmly and centrally attached to your phone or case.
Light does not charge.	Faulty cable or power source.	Try a different USB Type-C cable or power adapter. Ensure connections are secure.
Brightness or color temperature cannot be adjusted.	Device is off or controls are not being used correctly.	Ensure the device is powered on. Rotate the dial for brightness, press the dial for color temperature.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	E1-M04
Max Lumens	300 lumens
Color Temperature	3000K-6000K (Adjustable)
Light Modes	Warm Tone, Natural Tone, Cool Tone
Dimming	Stepless (10%-100%)

Feature	Detail
Charging Port	USB Type-C
Max Battery Life	Up to 70 hours (in Low mode)
Charging Time	Approx. 50 minutes
Material	Aluminum
Item Weight	3.84 ounces (approx. 109 grams)
Product Dimensions	10 x 4 x 10 inches (approx. 25.4 x 10.16 x 25.4 cm)
Waterproof Rating	IP65
Special Features	Magnetic attachment, Adjustable Light Modes, Phone Stand Function
UPC	192271077246

## 10. WARRANTY AND SUPPORT

WUBEN products are manufactured to high-quality standards. For specific warranty details, please refer to the warranty card included with your product packaging. Typically, WUBEN offers a warranty period for manufacturing defects.

For technical support, customer service, or warranty claims, please visit the official WUBEN website or contact their customer support team directly. Contact information can usually be found on the product packaging or the official website.

WUBEN Official Website: www.wubenlight.com

© 2025 WUBEN. All rights reserved.

## Related Documents - E1-M04

WUBEN X4 Flashlight User Manual - Operation, Features, and Specifications  Comprehensive user manual for the WUBEN X4 flashlight. This guide covers package contents, product components, detailed operation modes (main light, side light, moonlight, turbo, strobe), charging indicators, maintenance, troubleshooting FAQs, warranty policy, and technical specifications.

## MUBEN. G1 User Manual V1.0 Please 4 times quick dick on @ s unlock the light first after receiv

A Love	Letter	
0 100	Hi et	
IS Means	15 Meters	
SS Cande a		
■ Dier		

Problems.	Course	Solutions.
Abnamu flash	Check if the switch is odour	United the switch
orfilium to Namon	Ched. If the switch is surred on correcty	Tun on the switch
Nonema	Check Eftings materials. In the tube	Pour out possible foreign matter
ndise	Part danage	Contact your se en

## WUBEN G1 Keychain Flashlight User Manual

Comprehensive user manual for the WUBEN G1 keychain flashlight, detailing its features, operation, charging, specifications, maintenance, FAQs, and warranty policy. The G1 is a compact, portable light with Type-C charging and a 40-lumen output.

