

[Manuals.plus](#) /

› [Actualia](#) /

› Actualia Y7 Wireless Game Sticks User Manual - 4K HD Retro Game Console

Actualia Y7

Actualia Y7 Wireless Game Sticks User Manual

Model: Y7 | Brand: Actualia

1. INTRODUCTION

The Actualia Y7 Wireless Game Sticks console provides a comprehensive retro gaming experience with over 11,000 pre-installed games and 4K HD output. This manual details the setup, operation, and maintenance of your new game console.

Package Contents:

- Game Stick (Console Unit) x1
- Wireless Game Controllers x2
- USB Receiver x1
- Memory Card (128GB) x1
- HDMI Extension Cable x1
- Data Cable (USB Power Cable) x1
- User Manual x1



Image 1.1: Contents of the Actualia Y7 Wireless Game Sticks package.

2. SETUP GUIDE

Follow these steps to connect your Actualia Y7 Wireless Game Sticks console to your television or monitor.

2.1 Connecting the Game Stick

1. Insert the provided Memory Card into the designated slot on the Game Stick.
2. Connect the HDMI Extension Cable to the HDMI port on the Game Stick.
3. Plug the other end of the HDMI Extension Cable into an available HDMI input port on your television or monitor.
4. Connect the Data Cable (USB Power Cable) to the power input port on the Game Stick.
5. Plug the USB end of the Data Cable into a 5V2A USB power adapter (not included) or a USB port on your TV that provides sufficient power. **Important: Do not use a fast charger, as this may damage the device.**
6. Plug the USB Receiver for the wireless controllers into one of the USB ports on the Game Stick.



Image 2.1: The Game Stick with its various ports for connection.

4K HD

The upgraded version of HD is more smooth and ready to play



Image 2.2: Detailed view of the Game Stick's connectivity options.

2.2 Connecting the Wireless Controllers

1. Open the battery compartment on the back of each wireless controller.
2. Insert two AAA batteries (not included) into each controller, ensuring correct polarity.
3. Close the battery compartment.
4. Turn on the power switch located on each controller. The controllers will automatically pair with the USB Receiver connected to the Game Stick. The main controller will typically show a red indicator light, and the secondary controller a green light.

2.3 Display Setup

1. Power on your television or monitor.
2. Using your TV remote, switch the input source to the corresponding HDMI port where the Game Stick is connected.
3. The game console interface should now appear on your screen.

Video 2.1: A tutorial demonstrating the installation process of the game stick and connecting it to a TV.

3. OPERATING INSTRUCTIONS

Once the console is set up, you can begin exploring the vast library of games.

3.1 Navigating the Game Interface

- Use the directional pad or analog sticks on your wireless controller to navigate through the main menu.
- The main menu typically displays categories such as 'List', 'Class', 'Favor', 'Histo', 'Down', 'Find', and 'Set'.
- Select 'Class' to browse games by emulator/console type (e.g., MAME, PS1, Super Nintendo, Game Boy).
- Within each console category, a list of available games will be displayed. Use the controller to scroll through the list.
- Some games may display a preview image or video on the side of the screen as you highlight them.
- Press the 'A' or 'X' button (depending on controller layout) to select and launch a game.



Image 3.1: The Actualia Y7 Game Sticks in use, demonstrating gameplay with wireless controllers.

Video 3.1: An introduction to the game console interface, showcasing game selection and various emulators.

3.2 Language Settings

The console supports 12 national languages. To change the language:

1. Navigate to the 'Set' or 'Settings' option in the main menu.
2. Select 'Language' from the settings menu.
3. Choose your preferred language from the list (e.g., English, Arabic, Dutch, French, German, Indonesian, Italian, Korean, Portuguese, Russian, Spanish, Vietnamese).

4. MAINTENANCE

Proper care ensures the longevity of your Actualia Y7 Wireless Game Sticks.

- Keep the Game Stick and controllers in a dry, dust-free environment.
- Avoid exposing the device to extreme temperatures or direct sunlight.
- Clean the console and controllers with a soft, dry cloth. Do not use liquid cleaners.
- When not in use for extended periods, remove batteries from the wireless controllers to prevent leakage.

5. TROUBLESHOOTING

If you encounter issues, refer to the following common solutions:

5.1 No Display on TV

- Ensure the Game Stick is properly connected to the TV's HDMI port and the power cable is securely plugged in.
- Verify that your TV's input source is set to the correct HDMI channel.
- Check if the power adapter provides sufficient power (5V2A).

5.2 Controllers Not Responding

- Ensure fresh batteries are correctly inserted into the controllers and the power switch is turned on.
- Verify that the USB Receiver is securely plugged into the Game Stick.
- If controllers lose connection, try turning them off and on again, or re-inserting the USB receiver.

5.3 Game Performance Issues (Lag)

- While most games run smoothly, some larger or more graphically intensive titles may experience minor lag. This is generally expected due to the nature of emulation and the hardware capabilities.
- Ensure no other applications or devices are interfering with the console's performance.

6. SPECIFICATIONS

Model Number	349S057BW24171D4WKY6
Item Weight	432 Grams (15.2 ounces)
Power Source	Battery Powered (for controllers), USB Powered (for console)
Hardware Interface	HDMI
Age Range (Recommended)	12 years and up
Display Type	Digital
Material	Plastic + Electric Components
Memory Storage Capacity	128 GB
Form Factor	Handheld (referring to controllers)

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Actualia customer service through the retailer where the product was purchased.

