

[manuals.plus](#) /› [Actualia](#) /› [Actualia Y7 Wireless Game Sticks User Manual - Model 4P455DQF02H177](#)

Actualia 4P455DQF02H177

Actualia Y7 Wireless Game Sticks User Manual

Model: 4P455DQF02H177

1. INTRODUCTION

This manual provides instructions for the setup, operation, maintenance, and troubleshooting of your Actualia Y7 Wireless Game Sticks. Please read this manual thoroughly before using the product to ensure proper function and longevity.

Package Contents:

- Game Stick (Console Unit) x 1
- Wireless Game Controllers x 2
- USB Receiver x 1
- Memory Card (256GB) x 1
- HDMI Extension Cable x 1
- Data Cable (USB Power Cable) x 1
- User Manual x 1



Image 1.1: Contents of the Actualia Y7 Wireless Game Sticks package. This image displays the game console, two wireless controllers, a USB receiver, a 256GB memory card, an HDMI extension cable, and a USB data cable.

2. SETUP INSTRUCTIONS

- 1. Connect the Game Stick:** Insert the Game Stick directly into an available HDMI port on your television or monitor. If space is limited, use the provided HDMI extension cable.
- 2. Power the Game Stick:** Connect the data cable (USB power cable) to the Game Stick's power input port and then to a USB power source (e.g., a TV's USB port, a USB wall adapter, or a power bank). The Game Stick will power on automatically.
- 3. Insert Memory Card:** Ensure the 256GB memory card is securely inserted into the designated slot on the Game Stick. This card contains all the pre-loaded games.
- 4. Connect Wireless Controllers:** Insert the USB receiver into one of the USB ports on the Game Stick. The wireless controllers will automatically pair with the receiver. Ensure the controllers have batteries installed (not included).
- 5. Select HDMI Input:** On your television or monitor, switch the input source to the corresponding HDMI port where the Game Stick is connected.

4K HD

The upgraded version of HD is more smooth and ready to play



Image 2.1: Detailed view of the Actualia Y7 console showing its various ports. This image highlights the power input, HDMI output, and USB ports for connecting peripherals like the wireless receiver.

3. OPERATING INSTRUCTIONS

3.1 Navigating the Menu

- Use the directional pad (D-pad) on the wireless controller to navigate through the game menus.
- Press the "A" button (or equivalent action button) to select a game or menu option.
- Press the "B" button (or equivalent back button) to return to the previous menu.
- The "Start" and "Select" buttons typically perform in-game functions or access system menus.

3.2 Playing Games

- From the main menu, select your desired emulator or game category.
- Browse the list of available games. The 256GB memory card contains over 12,000 pre-installed games across more than 30 emulators.
- Select a game to launch it.
- To exit a game, typically press "Start" and "Select" simultaneously for a few seconds, or refer to the specific emulator's exit command.



Image 3.1: Users engaging with the Actualia Y7 Wireless Game Sticks, demonstrating two-player gameplay on a television. The image shows the wireless controllers in use during a racing game.

3.3 Language Options

The system supports 12 national languages, including Arabic, Dutch, English, French, German, Indonesian, Italian, Korean, Portuguese, Russian, Spanish, and Vietnamese. To change the language, navigate to the system settings menu and select your preferred language.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the Game Stick and controllers. Do not use liquid cleaners or

abrasive materials.

- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Controller Batteries:** Replace controller batteries when performance degrades. Ensure correct polarity when inserting new batteries.
- **Memory Card:** Avoid removing the memory card while the system is powered on to prevent data corruption.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
No display on TV/monitor.	<ul style="list-style-type: none">◦ Game Stick not powered.◦ Incorrect HDMI input selected.◦ Loose HDMI connection.	<ul style="list-style-type: none">◦ Ensure power cable is connected and power source is active.◦ Switch TV/monitor input to the correct HDMI port.◦ Check HDMI cable connection at both ends.
Controllers not responding.	<ul style="list-style-type: none">◦ USB receiver not connected.◦ Controller batteries low or dead.◦ Controllers not paired.	<ul style="list-style-type: none">◦ Insert USB receiver into the Game Stick.◦ Replace controller batteries.◦ Power cycle the Game Stick and controllers to re-establish connection.
Games not loading or missing.	<ul style="list-style-type: none">◦ Memory card not inserted or corrupted.◦ Game file corruption.	<ul style="list-style-type: none">◦ Ensure memory card is properly inserted.◦ Try restarting the system. If issues persist, contact support.

6. SPECIFICATIONS

Feature	Detail
Model Number	4P455DQF02H177
Brand	Actualia
Memory Storage Capacity	256 GB (pre-loaded with 12,000+ games)
Hardware Interface	HDMI, USB
Controller Type	Wireless Button Control (2.4G)
Power Source	Battery Powered (for controllers), USB Powered (for console)
Material	Plastic + Electric Components
Supported Emulators	30+ mainstream emulators

Feature	Detail
Supported Languages	12 National Languages (Arabic, Dutch, English, French, German, Indonesian, Italian, Korean, Portuguese, Russian, Spanish, Vietnamese)
Recommended Age	12 years and up

7. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact Actualia customer service. Keep your purchase receipt as proof of purchase.

Manufacturer: Actualia

Contact: Please visit the [Actualia Store on Amazon](#) for further assistance and product information.

© 2023 Actualia. All rights reserved.

Documents - Actualia – 4P455DQF02H177

no relevant documents