

[Manuals.plus](#) /

> [CULT](#) /

> CULT Volt Pro Full Body Professional Gun Massager Instruction Manual

CULT 805087

CULT Volt Pro Full Body Professional Gun Massager Instruction Manual

Model: 805087

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your CULT Volt Pro Full Body Professional Gun Massager. Please read this manual thoroughly before first use and retain it for future reference. The CULT Volt Pro is designed for deep tissue percussion massage, featuring QuietMotion technology, a 4500 mAh battery, and interchangeable heads for various muscle groups.

2. SAFETY INFORMATION

Important Safety Precautions:

- Do not immerse the device in water or other liquids.
- Keep away from children.
- Do not use on injured skin, open wounds, or areas with skin conditions.
- Consult a physician before use if you have any medical conditions, are pregnant, or have a pacemaker.
- Do not operate for more than 15 minutes continuously on a single area.
- Use only the provided charging cable.
- Avoid using the massager near heat sources or in direct sunlight.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x CULT Volt Pro Massager
- 4 x Interchangeable Massage Heads (Silicone Round, Spade, Cone, Flat)
- 1 x USB Type-C Charging Cable
- 1 x Carry Pouch
- 1 x Instruction Manual (this document)

4. PRODUCT OVERVIEW

The CULT Volt Pro massager is designed for targeted muscle relief. It features a powerful motor, multiple speed settings, and a long-lasting battery.



Image 4.1: CULT Volt Pro Massager with its four interchangeable heads. The main unit is black with a textured handle and a display panel showing battery and speed indicators. The heads include a large round ball, a U-shaped head, a cone-shaped head, and a flat head.

4.1. Components

- **Massage Gun Body:** Main unit housing the motor, battery, and controls.
- **Interchangeable Heads:**
 - **Silicone Round Head:** Ideal for large muscle groups like legs, back, and chest.
 - **Spade Head (U-shaped):** Designed for the unique contours of the neck and upper back.
 - **Cone Head:** Targeted for small muscle groups like feet, wrist, and trigger points.
 - **Flat Head:** Promotes relaxation and reduces muscle tension.

- **Control Panel:** Features power button and speed level indicators.
- **Type-C Charging Port:** Located at the base of the control panel for charging.

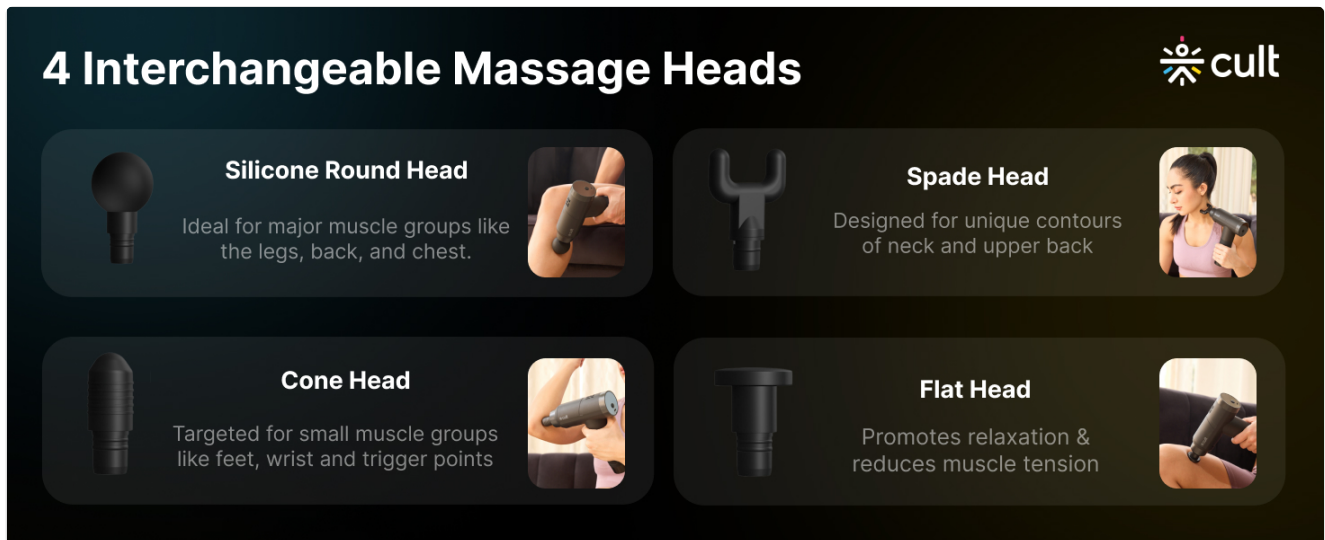


Image 4.2: A visual guide to the four interchangeable massage heads: Silicone Round, Spade, Cone, and Flat, detailing their specific applications for different muscle groups.

5. SETUP

5.1. Initial Charging

1. Before first use, fully charge the CULT Volt Pro massager.
2. Connect the provided USB Type-C charging cable to the charging port on the massager.
3. Plug the other end of the cable into a compatible USB power adapter (not included) or a USB port.
4. The LED indicators on the control panel will show the charging status. A full charge is indicated when all battery LEDs are lit and stable.

4500 mAh Battery

4.5hrs Battery Life



Image 5.1: Close-up view of the CULT Volt Pro massager's control panel, highlighting the Type-C charging port and the LED indicators for battery level and speed settings.

5.2. Attaching Massage Heads

1. Ensure the massager is turned off before attaching or removing any message head.
2. Select the desired message head.
3. Align the base of the message head with the opening on the front of the massager.
4. Gently push the head firmly into the opening until it is securely seated. Do not twist forcefully.
5. To remove, gently pull the head straight out from the massager.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

1. To turn on, press and hold the power button on the control panel for a few seconds until the device starts.
2. To turn off, press and hold the power button again until the device stops.

6.2. Adjusting Speed Levels

The CULT Volt Pro features 6 speed levels for personalized massage control.

1. Once the device is on, short press the power button to cycle through the 6 available speed levels.
2. The LED indicators will display the current speed level.

Why Silicone Round Head is more Effective?



- Anti-slip
- Build to last
- No allergy risks
- Comfortable & gentle
- Adapts to body contours



Image 6.1: A person demonstrating the use of the CULT Volt Pro massager on the neck area, illustrating its application for muscle relief.

6.3. Usage Guidelines

- Apply the massager gently to the desired muscle area.
- Move the massager slowly over the muscle, avoiding bones and joints.
- Do not apply excessive pressure. Allow the percussion action to work naturally.
- Limit usage to 1-2 minutes per muscle group and no more than 15 minutes total per session.
- Refer to the specific head descriptions in Section 4.1 for optimal use on different body parts.

6 Modes of Intensity

Enables personalised massage control



Image 6.2: A person using the CULT Volt Pro massager on their arm, demonstrating its use for targeted muscle areas.

7. MAINTENANCE

7.1. Cleaning

1. Ensure the massager is turned off and unplugged before cleaning.
2. Wipe the surface of the massager with a slightly damp cloth.
3. Do not use abrasive cleaners, solvents, or harsh chemicals.
4. The massage heads can be wiped clean with a damp cloth and mild soap if necessary. Ensure they are completely dry before reattaching.

7.2. Storage

- Store the massager and its accessories in the provided carry pouch.
- Keep the device in a cool, dry place, away from direct sunlight and extreme temperatures.
- Do not place heavy objects on top of the massager during storage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not turn on.	Low battery. Power button not pressed correctly.	Charge the device fully. Press and hold the power button for a few seconds.
Device stops unexpectedly.	Low battery. Overheating protection activated.	Recharge the device. Allow the device to cool down for 30 minutes before resuming use.
Massage head is loose.	Head not fully inserted.	Ensure the massager is off, then firmly push the head into place.
Reduced percussion strength.	Low battery. Excessive pressure applied.	Recharge the device. Reduce pressure and let the device work naturally.

9. SPECIFICATIONS

Feature	Detail
Model Number	805087
Battery Capacity	4500 mAh
Battery Life	Up to 4.5 hours
Speed Levels	6
Motor Type	Pure Copper Brush Motor
Motor Speed	Up to 3200 RPM
Power	35 W
Noise Level	Less than 45 dB (QuietMotion Tech)
Charging Port	USB Type-C
Dimensions (LxWxH)	28.2 x 24 x 7.3 cm
Item Weight	1.13 kg (1130 Grams)
Material	Plastic (Body), Silicone (Heads)
Included Components	1 Massager, 4 Interchangeable Heads, Carry Pouch

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase documentation or visit the official CULT website. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7Q7S391>

More documents and user manuals: <https://manuals.plus/>