

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI 5 FT Outdoor Porch Swing with Frame User Manual

VINGLI 5 FT Outdoor Porch Swing with Frame

VINGLI 5 FT Outdoor Porch Swing with Frame User Manual

Model: 5 FT Outdoor Porch Swing with Frame

INTRODUCTION

Thank you for choosing the VINGLI 5 FT Outdoor Porch Swing with Frame. This manual provides essential information for the safe assembly, operation, maintenance, and troubleshooting of your new porch swing. Please read these instructions carefully before assembly and retain them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using this product to reduce the risk of injury.

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight capacity of 880 lbs.
- Keep children under supervision when near the swing.
- Inspect the swing regularly for wear and tear, especially chains and frame connections.
- Install on a level, stable surface.

PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, contact customer support.



Image: A complete VINGLI 5 FT Outdoor Porch Swing with Frame, showing the white wooden swing bench suspended from a matching white A-frame stand by metal chains.

- Swing Bench
- A-Frame Stand Components
- Hanging Chains
- Hardware (bolts, nuts, washers, protective caps)
- Assembly Tools (if included, otherwise standard tools required)

SETUP AND ASSEMBLY

Follow these steps for proper assembly. It is recommended to have two people for assembly.

Step 1: Assemble the A-Frame Stand


Other Decent Details



Solid A-Frame construction brings stability



Heavy duty snap hooks perform high durability

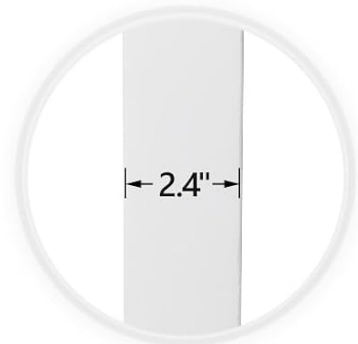

The leg has a 2.4" thickness, better than others

Image: Diagram showing the dimensions of the A-frame stand, including height (72"), width (84"), and depth (54").

1. Unpack all frame components and lay them out on a clean, flat surface.
2. Connect the side legs to the top beam using the provided bolts and nuts. Ensure all connections are snug but do not overtighten initially.
3. Attach the horizontal support bar between the two A-frames.
4. Once the frame is assembled, tighten all bolts securely.

Step 2: Assemble the Swing Bench



Image: Diagram showing the dimensions of the swing bench, including length (60.6"), depth (18.9"), and chain lengths.

1. Assemble the seat and backrest panels of the swing bench according to the diagrams.
2. Attach the armrests to the assembled bench.
3. Secure all connections with the provided hardware.
4. Apply the extra protective screw caps to cover any sharp screw ends for safety.



Image: Close-up of a golden protective screw cap covering a bolt, indicating enhanced safety.

Step 3: Hang the Swing Bench

1. Attach the hanging chains to the designated points on the swing bench.
2. Carefully lift the swing bench and attach the chains to the hooks on the A-frame stand.
3. Ensure the carabiner designs are securely closed.
4. Adjust the chain length to achieve the desired swing angle and height.

OPERATING INSTRUCTIONS

The VINGLI Porch Swing is designed for comfortable outdoor relaxation.

- **Ergonomic Design:** The swing features a curved design in the middle and knee area for optimal sitting comfort.
- **Adjustable Angle:** The secure carabiner design on the chains allows for easy adjustment of the swing's angle to match individual sitting preferences.
- **Weight Capacity:** The swing bench can support up to 880 lbs. Do not exceed this limit.



Image: An elderly woman and a young girl sitting comfortably on the white porch swing, reading a book, demonstrating typical use.

MAINTENANCE AND CARE

Regular maintenance will extend the life of your porch swing.

- **Cleaning:** The well-coated surface allows for easy cleaning. Wipe down with a damp cloth and mild soap as needed. Avoid harsh chemicals.
- **Inspection:** Periodically check all bolts, nuts, and chain connections to ensure they are tight and secure.
- **Weather Protection:** While the swing features a well-finished PU painting for durability and weather resistance, prolonged exposure to extreme weather conditions may affect its lifespan. Consider covering the swing during harsh weather or storing it indoors during off-season.
- **Surface Care:** The painted finish helps protect the pine wood. If any chipping occurs, touch up with appropriate

outdoor paint to prevent wood exposure.

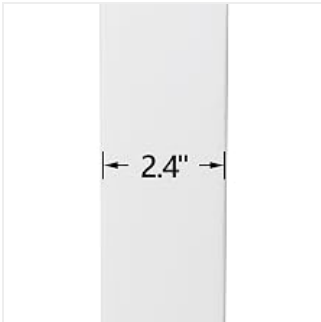


Image: A hand wiping the white surface of the swing with a brown cloth, showing water droplets, illustrating easy cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Swing feels unstable or wobbly.	Loose bolts or uneven ground.	Check and tighten all assembly bolts. Ensure the swing is placed on a level surface.
Squeaking noise during use.	Friction at chain connections or joints.	Apply a small amount of lubricant (e.g., silicone spray) to chain links and connection points.
Paint chipping or fading.	Normal wear and tear or prolonged sun exposure.	Touch up with outdoor-grade paint. Consider using a protective cover when not in use.

SPECIFICATIONS

- **Brand:** VINGLI
- **Model:** 5 FT Outdoor Porch Swing with Frame
- **Color:** White
- **Product Dimensions (Swing Bench):** 24.4"D x 60.6"W x 18.9"H
- **Frame Material:** Pine
- **Finish Type:** Painted (PU Painting)
- **Assembly Required:** Yes
- **Item Weight:** 68.2 pounds
- **Maximum Weight Capacity:** 880 lbs
- **ASIN:** B0D7QFBFX4

WARRANTY INFORMATION

Please refer to the product packaging or contact VINGLI customer support for detailed warranty information. Typically, VINGLI products come with a limited warranty covering manufacturing defects from the date of purchase. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For assistance with assembly, missing parts, or any other inquiries, please contact VINGLI customer support through their official website or the retailer where the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question