

[Manuals.plus](#) /

> [AIDITIYMI](#) /

> AIDITIYMI COV33662806 Replacement Remote Control Instruction Manual for LG DVD Players

## AIDITIYMI COV33662806

# AIDITIYMI COV33662806 Replacement Remote Control Instruction Manual

FOR LG DVD PLAYERS

## Introduction

---

This manual provides comprehensive instructions for the AIDITIYMI COV33662806 replacement infrared remote control. This remote is specifically designed to be compatible with a wide range of LG DVD Player models, offering a direct replacement solution without the need for complex programming or pairing procedures. Please read this manual carefully to ensure proper setup and operation of your new remote control.



Image: The AIDITIYMI COV33662806 replacement remote control, showing its full button layout.

## Setup

### Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery cover in the direction indicated by the arrow.
3. Insert two (2) new AAA alkaline batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery cover securely until it clicks into place.





Image: The back of the remote control with the battery compartment open, showing where to insert two AAA batteries.

### First Use

This remote control requires no programming or pairing. Once the batteries are correctly installed, the remote is ready for immediate use with compatible LG DVD players.

### Operating Instructions

Familiarize yourself with the functions of each button on your remote control:

- **POWER:** Turns the LG DVD player on or off.
- **OPEN/CLOSE:** Opens or closes the disc tray of the DVD player.
- **Number Buttons (0-9):** Used to select specific tracks, chapters, or to input numerical values.
- **PLAY (▶):** Initiates disc playback.

- **PAUSE/STEP (||)**: Pauses playback or advances frame by frame during pause.
- **STOP (■)**: Halts disc playback.
- **SCAN (◀◀ / ▶▶)**: Fast reverse or fast forward through content.
- **SKIP (◀◀| / |▶▶)**: Skips to the previous or next track/chapter.
- **VOL (+ / -)**: Adjusts the volume level. This function typically controls the volume of the connected TV if the DVD player supports AV control pass-through.
- **PR/CH (+ / -)**: Changes channels. This function typically controls the channels of the connected TV if the DVD player supports AV control pass-through.
- **AV**: Switches video input sources on the connected TV.
- **DVD MENU**: Accesses the main menu of the DVD disc.
- **TITLE**: Accesses the title menu of the DVD disc.
- **Directional Buttons (Up, Down, Left, Right)**: Navigates through on-screen menus and selections.
- **ENTER**: Confirms a selection in menus.
- **DISPLAY**: Shows on-screen information about the current playback status.
- **RETURN**: Returns to the previous menu or screen.
- **AUDIO**: Changes audio tracks or language options during playback.
- **SUBTITLE**: Toggles or selects subtitle options.
- **ANGLE**: Changes camera angles if available on the disc.
- **SETUP**: Accesses the system setup menu of the DVD player.
- **MARKER**: Sets a marker point during playback.
- **SEARCH**: Activates the search function.
- **PROGRAM**: Allows programming of playback order.
- **ZOOM**: Zooms in on the picture.
- **REPEAT**: Repeats playback of a track, chapter, or disc.
- **A-B**: Repeats a specific section between two marked points (A and B).
- **RESOLUTION**: Changes the video output resolution.
- **CAPTION**: Toggles closed captions on or off.





Image: A detailed front view of the remote control, highlighting the layout and labels of all functional buttons.

## Maintenance

---

### Cleaning

To clean your remote control, gently wipe it with a soft, dry cloth. Avoid using liquid cleaners, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

### Battery Replacement

Replace the batteries when the remote's response becomes sluggish, inconsistent, or stops working entirely. Always replace both AAA batteries simultaneously with new alkaline batteries. Remove depleted

batteries promptly to prevent potential leakage and damage to the remote.

## Troubleshooting

- **Remote not responding:**

- Check if the batteries are inserted with the correct polarity (+ and -).
- Replace the batteries with a fresh pair of AAA alkaline batteries.
- Ensure there are no physical obstructions between the remote control and the infrared sensor on your LG DVD player.
- Confirm that the remote is pointed directly at the DVD player's sensor.

- **Certain buttons not working:**

- Verify that the specific function is supported by your particular LG DVD player model. Not all DVD players have identical features.
- Buttons such as TV POWER, VOL, PR/CH, and AV are primarily for controlling a connected television. Their functionality depends on whether your DVD player supports AV control pass-through or if the remote is designed to be programmed for a TV (this replacement remote is not programmable for TV control).

## Specifications

- **Brand:** AIDITIYMI
- **Model Number:** COV33662806
- **Connectivity Technology:** Infrared
- **Battery Type:** 2 x AAA Alkaline Batteries (not included)
- **Maximum Range:** Approximately 32 Feet (10 meters)
- **Dimensions:** Approximately 15 cm (5.91 in) length x 4.5 cm (1.77 in) width.



15 cm / 5.91 in



Image: The remote control shown with its approximate length (15 cm / 5.91 in) and width (4.5 cm / 1.77 in) dimensions.

#### Compatible LG DVD Player Models:

- DP520H, DP132H, DP540H, DP542H, DP132HE, DGK777, DGK778, DK785, DN898, DP522H, DP521H, DP527H, DVX276, DVX640H, DVX642H, DVX692H, DVX647KH, DVX641KH, DVX690H, DVX9900, DZ9500, DZ9800, DV276-E2M, DV276-E1M, DV276-E3M, DVX9900H, DV341, DV341S, DV351, DV381, DV381-P, DV392HN, DV380H-N, DV392H-N, DVX392H, DVX382H, DGK585XB, DGK588XB, DV392H-E, DV382H-E, DV392H-P, DV492H, DV8931H, DVX162, DVX172, DVX286, DVX289H, DVX582H, DVX691KH, DVX697KH, DVX9500, DVX9700, DZ9300, DZ9400, DGK683X, DGK685X.

#### Warranty

This AIDITIYMI remote control typically includes a 1-year warranty from the manufacturer. For specific details regarding warranty coverage, terms, and conditions, please refer to the documentation provided with your purchase or contact your seller directly.

## Support

---

Should you require further assistance, have questions not covered in this manual, or encounter any issues with your remote control, please contact the seller or manufacturer through the platform where you made your purchase. They will be able to provide specialized support and guidance.