

Vagusicc BZ17

Vagusicc C Shaped End Table Instruction Manual

Model: BZ17

Brand: Vagusicc

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Vagusicc C Shaped End Table. Please read this manual thoroughly before assembly and use to ensure safe and proper functionality. This adjustable height C-shaped end table is designed for small spaces, fitting perfectly beside couches, beds, or recliners. It features a storage pocket and a sturdy metal frame, offering a versatile surface for various uses.

SAFETY INFORMATION

Please observe the following safety guidelines:

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight recommendation of 22 lbs (10 kg).
- Keep small parts away from children during assembly.
- Avoid placing hot items directly on the table surface without protection.
- Use on a flat, stable surface. Adjust feet as necessary for uneven floors.

PACKAGE CONTENTS

Verify that all parts are present before beginning assembly:

- 1 x Side Table (Top Panel, Frame Components)
- 1 x Accessory Bag (Screws, Allen Wrench, Adjustable Feet)
- 1 x Instructions Manual

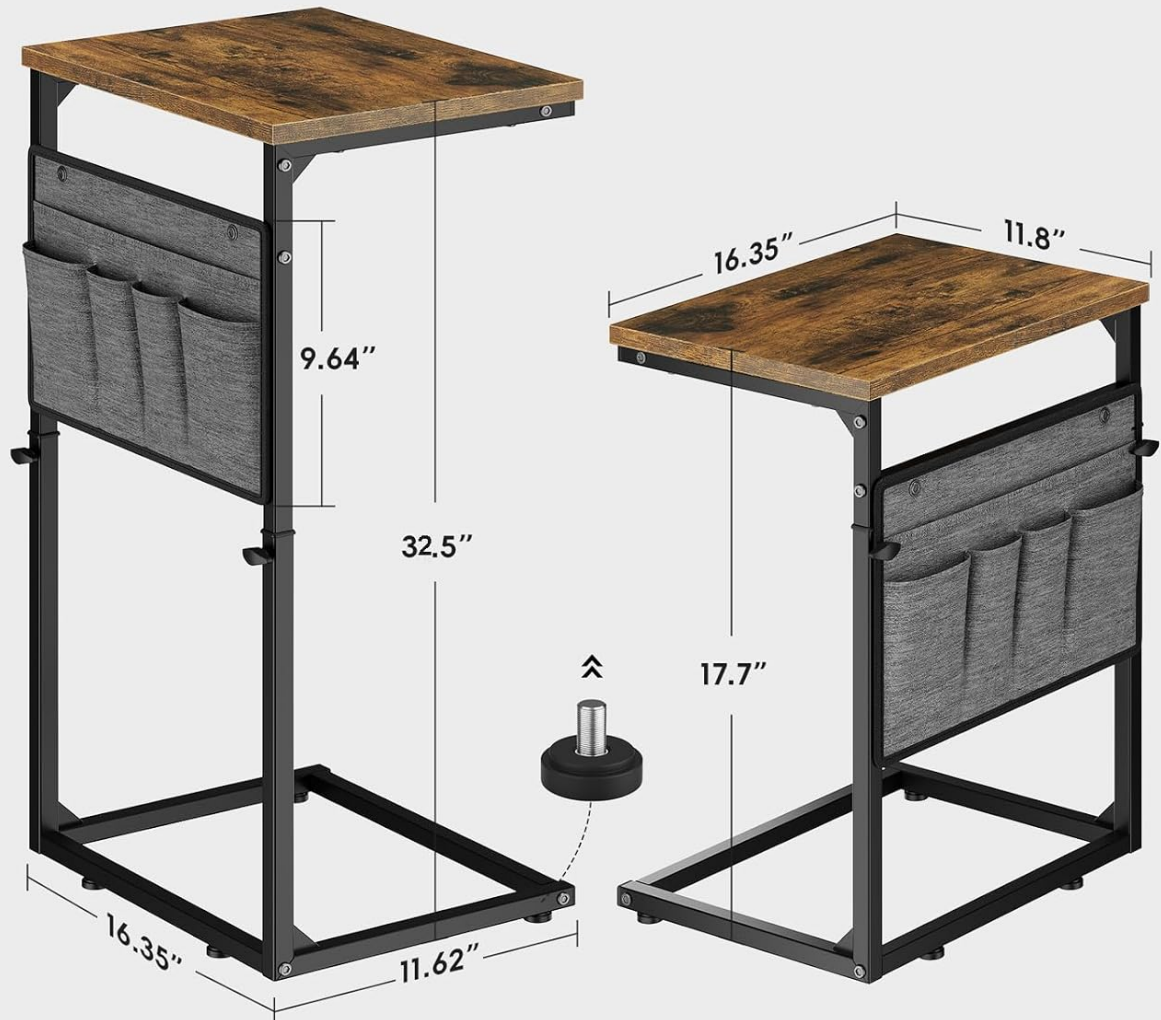
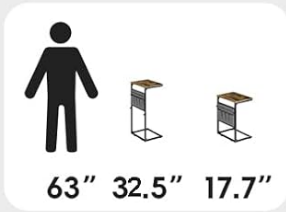


Image: Exploded view of the table components and dimensions.

SETUP AND ASSEMBLY

Assembly is required and typically takes 10-15 minutes. A screwdriver is recommended, and an Allen wrench is included.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Frame to Top Panel:** Align the metal frame sections with the pre-drilled holes on the underside of the table top. Secure using the provided screws and Allen wrench.
3. **Assemble Base:** Connect the base frame components as per the diagram in the included instructions.
4. **Install Adjustable Feet:** Screw the 4 height-adjustable feet into the bottom of the base frame. These can be adjusted to stabilize the table on uneven surfaces.
5. **Attach Storage Pocket:** Secure the fabric storage pocket to the side of the frame using the designated fasteners. This pocket is detachable.



Image: Visual guide for assembling the table components.

OPERATING INSTRUCTIONS

Adjustable Height

The Vagusicc C Shaped End Table features a stepless height adjustment mechanism, allowing you to customize its height from 17.7 inches to 32.5 inches. To adjust, loosen the locking knob on the side of the vertical frame, slide the table top to your desired height, and then tighten the knob securely.

Adjustable Height

Stepless ranging from 17.7 inches to 31.5 inches.



Image: Demonstration of the table's adjustable height feature.

C-Shaped Design and Placement

The unique C-shaped design allows the table to slide easily under sofas, beds, or recliners, bringing the table surface closer to you for convenience. This is ideal for working, dining, or relaxing without needing to reach far.

Pull it Closer

Slide it under the sofa for convenient working or studying.



Handle Work



Relaxation



Reading Books

Image: The C-shaped table positioned under a sofa for easy access.

Storage Pocket

The integrated fabric storage pocket provides additional space for organizing items. It includes one large compartment for magazines or newspapers and three smaller pockets for remote controls, mobile phones, or other small accessories. The pocket is detachable for cleaning or repositioning.



Image: Detailed view of the detachable 5-in-1 storage pocket.

MAINTENANCE

To maintain the appearance and longevity of your Vagusicc C Shaped End Table:

- **Cleaning:** Wipe the table surface with a dry cloth. For spills, use a slightly damp cloth and dry immediately.
- **Spill Resistance:** The table surface is designed to be waterproof, allowing for easy cleanup of liquid spills.
- **Scratch Prevention:** While the surface is anti-scratch, avoid using abrasive cleaners or sharp objects that could damage the finish.
- **Pocket Care:** The fabric storage pocket can be detached for cleaning. Follow fabric care instructions if washing is required.



Image: Close-up showing the waterproof surface of the table.

TROUBLESHOOTING

If you encounter any issues with your Vagusicc C Shaped End Table, please refer to the following common solutions:

- **Table Wobbles:** Check that all screws are tightened. Adjust the individual feet on the base to compensate for uneven flooring.
- **Difficulty Adjusting Height:** Ensure the locking knob is fully loosened before attempting to slide the table top. If resistance persists, check for any obstructions in the sliding mechanism.
- **Missing Parts:** If any components are missing from the package, please contact customer support immediately.

SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Vagusicc
Model Name	BZ17-End Table
Product Dimensions	16.35"D x 11.62"W x 17.7-32.5"H
Item Weight	6.12 Pounds
Maximum Weight Recommendation	22 Pounds
Frame Material	Alloy Steel
Top Material Type	Engineered Wood
Color	Rustic Brown
Special Features	Adjustable Height, Easy Assembly, Sliding, Stepless Height Adjustable, Tall Side Table, With Storage Bag
Recommended Uses	Couch table, TV tray table, Laptop table, Coffee end table, Snack table, Accent table, Arm table, Drink table, Bedside table
Room Type	Living Room, Bedroom, Small Spaces, Home Office, Study Room
Assembly Required	Yes
Tools Recommended for Assembly	Screwdriver

WARRANTY AND SUPPORT

This product is thoroughly and rigorously tested. If you have any questions or require assistance, please feel free to contact Vagusicc customer service. The standard return policy allows for refunds or replacements within 30 days of purchase.

For further assistance, please visit the [Vagusicc Store on Amazon](#).

© 2024 Vagusicc. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question