

[Manuals.plus](#) /

› [HADEN](#) /

› Haden 12 Cup Programmable Drip Coffee Maker Coffee Machine Bundled with Heritage 4 Slice Wide Slot Stainless Steel Toaster, Turquoise & Chrome User Manual

HADEN B0D7QT2SS4

Haden 12 Cup Programmable Drip Coffee Maker & Heritage 4 Slice Toaster User Manual

Model: B0D7QT2SS4

INTRODUCTION

Thank you for purchasing the Haden 12 Cup Programmable Drip Coffee Maker and Heritage 4 Slice Wide Slot Stainless Steel Toaster. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new appliances. Please read all instructions carefully before use and retain this manual for future reference.

Important Safety Instructions

- Read all instructions before operating the appliances.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliances in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliances for other than intended use.

PRODUCT COMPONENTS



Overview of the Haden 12 Cup Programmable Drip Coffee Maker and Heritage 4 Slice Toaster.



HADEN
ESTD. ENGLAND 1958



HERITAGE TURQUOISE & CHROME COFFEE MACHINE WITH 4-SLICE TOASTER



12-cup capacity
perfect for
households or offices.



Customizable
brew strength
select feature.



Convenient cancel,
defrost, and bagel
settings.



Self-centering function
keeps bread in the
perfect toasting position.

Key features of the coffee maker and toaster, including 12-cup capacity, customizable brew strength, and various toaster settings.

Coffee Maker Components

- Water Reservoir
- Lid
- Control Panel (On/Off, Delay Brew, Program, Hour, Minute, Strength buttons, Digital Clock)
- Filter Basket
- Reusable Washable Filter
- Glass Carafe with Handle
- Warming Plate

HADEN

ESTD. ENGLAND 1958



Pause dispensing with the 30-second anti-drip function.



Keep-warm function for extended periods, ensuring it stays fresh and hot.



Removable filter for convenient cleaning and maintenance.



Convenient programmable clock and delay-brew allows you to schedule brewing time in advance.

Detailed view of the coffee maker's features, including the anti-drip function, keep-warm capability, removable filter, and programmable clock.



The Haden Coffee Maker positioned on a kitchen counter, ready for use.

Toaster Components

- 4 Wide Toasting Slots
- Browning Control Dials (2, for independent control of two slots each)
- Lever Handles (2)
- Cancel Button
- Bagel Button
- Defrost Button
- Removable Crumb Trays (2)

HADEN

ESTD. ENGLAND 1958



Premium coated stainless steel housing.



The browning control dial allows you to select the perfect timing for your bread, bagel or waffle.



Easy to clean with its 2 removable sliding crumb trays.



Extra wide slots to accommodate thick slices of bread.



Close-up view of the toaster highlighting its premium coated stainless steel housing, browning control dial, removable crumb trays, and extra-wide slots.



The Haden Toaster displayed on a kitchen counter, ready for use.

SETUP GUIDE

Initial Setup

1. **Unpacking:** Carefully remove both the coffee maker and toaster from their packaging. Retain packaging for future storage or transport.
2. **Placement:** Place the appliances on a stable, flat, heat-resistant surface, away from the edge of the counter and out of reach of children. Ensure adequate ventilation around both units.
3. **Cleaning Before First Use:**
 - **Coffee Maker:** Wash the glass carafe, lid, and reusable filter basket in warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the coffee maker with a damp cloth. Run two full cycles of water through the coffee maker without coffee grounds to clean the internal components.
 - **Toaster:** Remove any packaging materials from the toasting slots. Wipe the exterior with a damp cloth. Plug in

the toaster and operate it on the highest setting without bread a few times to burn off any manufacturing residues. This may produce a slight odor, which is normal.

4. **Power Connection:** Ensure the power cords are not tangled and are positioned safely to avoid tripping hazards. Plug both appliances into a grounded electrical outlet.

OPERATING INSTRUCTIONS

Using the Coffee Maker

1. **Filling the Water Reservoir:** Open the lid and fill the water reservoir with fresh, cold water up to the desired level indicated on the side. Do not exceed the 12-cup MAX line.
2. **Adding Coffee Grounds:** Place the reusable filter into the filter basket. Add the desired amount of ground coffee to the filter. For best results, use 1 tablespoon of coffee grounds per cup. Close the lid securely.
3. **Placing the Carafe:** Ensure the glass carafe is empty and placed correctly on the warming plate.
4. **Brewing Coffee:**
 - **Immediate Brew:** Press the "ON/OFF" button. The indicator light will illuminate, and brewing will begin.
 - **Adjusting Brew Strength:** Before brewing, press the "STRENGTH" button to cycle through available strength options (e.g., Regular, Bold).
 - **Programmable Brew:** To set a delayed brew time, first set the current time by pressing "HOUR" and "MINUTE" buttons. Then, press the "PROGRAM" button, followed by "HOUR" and "MINUTE" to set your desired brew start time. Press "DELAY BREW" to activate the timer. The coffee maker will start brewing automatically at the set time.
5. **Serving:** The anti-drip function allows you to temporarily remove the carafe during brewing to pour a cup. Replace the carafe within 30 seconds to prevent overflow.
6. **Keep Warm Function:** The warming plate will keep coffee warm for up to 120 minutes after brewing is complete, then automatically shut off for safety and energy saving.

Using the Toaster

1. **Placing Bread:** Insert slices of bread, bagels, or waffles into the wide toasting slots. The self-centering function will hold them in place.
2. **Selecting Browning Level:** Turn the browning control dial to your desired setting (1-6). A lower number provides lighter toast, a higher number provides darker toast. There are two independent browning controls, one for each pair of slots.
3. **Lowering the Lever:** Press the lever handle down until it locks into place. The toasting cycle will begin.
4. **Special Functions:**
 - **Cancel:** Press the "CANCEL" button at any time to stop the toasting cycle and eject the toast.
 - **Bagel:** Press the "BAGEL" button after lowering the lever. This setting toasts the cut side of the bagel while warming the outer side.
 - **Defrost:** Press the "DEFROST" button after lowering the lever. This setting thaws and then toasts frozen items.
5. **Retrieving Toast:** Once the toasting cycle is complete, the toast will automatically pop up.

CARE AND MAINTENANCE

Always unplug both appliances from the power outlet and allow them to cool completely before cleaning.

Cleaning the Coffee Maker

- **Carafe and Filter:** Wash the glass carafe, lid, and reusable filter basket after each use with warm, soapy water. These parts are top-rack dishwasher safe.
- **Exterior:** Wipe the exterior surfaces of the coffee maker with a soft, damp cloth. Do not use abrasive cleaners or scouring pads.
- **Descaling:** Over time, mineral deposits can build up. To descale, fill the water reservoir with a mixture of white vinegar and water (1:2 ratio). Place an empty carafe on the warming plate. Run a brewing cycle without coffee grounds. After half the solution has brewed, turn off the coffee maker and let it soak for 15-20 minutes. Then, turn it back on and let the remaining solution brew. Repeat with two full cycles of fresh water to rinse thoroughly. Descale every 2-4 weeks depending on water hardness.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Coffee maker does not brew.	Not plugged in; Power outage; "ON/OFF" button not pressed; Delay brew set.	Ensure plugged in; Check power; Press "ON/OFF"; Check delay brew setting.
Coffee tastes weak or too strong.	Incorrect coffee-to-water ratio; Brew strength setting.	Adjust coffee grounds amount; Select desired "STRENGTH" setting.
Coffee overflows from filter basket.	Too much coffee grounds; Filter clogged; Carafe not properly placed.	Reduce coffee grounds; Clean filter; Ensure carafe is fully seated.
Toaster does not toast.	Not plugged in; Lever not fully depressed.	Ensure plugged in; Push lever down until it locks.
Toast is unevenly browned.	Bread slices too thick or thin; Crumb tray full.	Use appropriate bread thickness; Empty crumb tray.
Smoke from toaster.	Food lodged in slots; Crumb tray full; First use residue.	Unplug and remove food; Empty crumb tray; Normal for first few uses.

PRODUCT SPECIFICATIONS

 HADEN
ESTD. ENGLAND 1958



Non-slip rubberized feet provide stability.



Auto shut-off after 120 minutes for power safety.



Non-slip rubberized feet provide stability.



Boasts 1500W of power with a 32" power cord.

Detailed dimensions and power specifications for both the coffee maker and toaster.

Feature	Detail
Brand	HADEN
Color	Turquoise
Material	Glass (Carafe)
Coffee Maker Dimensions	7.5"D x 9.5"W x 14"H
Toaster Dimensions	13"W x 7.5"H x 11.5"D
Coffee Maker Capacity	12 Cups

Feature	Detail
Toaster Slices	4 Slices
Special Features	Programmable (Coffee Maker), Wide Slots, Self-Centering, Adjustable Browning, Defrost, Bagel (Toaster)
Style	Retro
UPC	193802375985
Manufacturer	Haden

WARRANTY AND SUPPORT

For warranty information, please refer to the warranty card included with your product packaging or visit the official Haden website. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Haden customer service through their official channels. Contact details can typically be found on the manufacturer's website or on the product packaging.

© 2024 HADEN. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7QT2SS4>

More documents and user manuals: **<https://manuals.plus/>**