

[Manuals.plus](#) /

› [ZEEPORTE SECURITY](#) /

› ZEEPORTE SECURITY Wireless Outdoor Camera User Manual

ZEEPORTE SECURITY CG6S

ZEEPORTE SECURITY Wireless Outdoor Camera User Manual

Model: CG6S

Brand: ZEEPORTE SECURITY

1. INTRODUCTION

Thank you for choosing the ZEEPORTE SECURITY Wireless Outdoor Camera. This manual provides detailed instructions for the setup, operation, and maintenance of your new security camera system. These 2K battery-powered WiFi cameras are designed to provide reliable home security with advanced features such as AI motion detection, color night vision, and two-way audio communication. The cameras are 100% wire-free and IP65 weatherproof, suitable for both indoor and outdoor environments.



Image 1.1: ZEEPORTE SECURITY Wireless Outdoor Cameras (2-Pack)

2. WHAT'S IN THE BOX

Upon opening the package, please verify that all components are present and in good condition:

- 2 x ZEEPORTE SECURITY Wireless Cameras
- 1 x Charging Cord
- Installation Sets (mounting brackets, screws, wall anchors)

3. FEATURES

Your ZEEPORTE SECURITY Wireless Outdoor Camera system is equipped with the following key features:

- **2K FHD Clarity & Color Night Vision:** Captures video at 2304 x 1296 pixels, offering clear and detailed images. Features both full-color and infrared night vision modes with a 33ft visible range.
- **100% Wire-Free & Rechargeable Battery:** Provides 1 to 5 months of operation on a single full charge, eliminating the need for power cords or network cables.
- **IP65 Weatherproof:** Designed to withstand various weather conditions for reliable outdoor use.
- **Smart PIR Motion Detection with AI Recognition:** Advanced AI algorithms can distinguish between persons,

vehicles, pets, and packages, reducing false alerts. Instant notifications are sent to your mobile device upon detection.

- **Two-Way Talk & Smart Siren Alarm:** Built-in microphone and speaker enable real-time two-way communication. Activate a siren alarm or flashing LED light to deter unwanted visitors.
- **Dual Storage Options:** Supports local storage via Micro SD card (up to 128GB, not included) and offers free 3-day rolling cloud storage.
- **Mobile App Access:** Live and recorded video can be accessed and managed remotely via the dedicated mobile application (VicoHome app).



100% Wireless & IP65 Weatherproof
Protect Your Home and Family in Anywhere.

							
Long Battery Life	AI Motion Detection	2K FHD	Color Night Vision	IP65 Weatherproof	Two-Way Audio	SD/Cloud Storage	Multi-User Sharing

Image 3.1: Key Features Overview

2K FHD Resolution Captures Every Detail



Image 3.2: 2K FHD Resolution Detail

PIR Motion Detection, Enjoy a Peace of Mind



Image 3.3: PIR Motion Detection Capabilities

Smart AI Motion Analysis

Less False Alerts and Higher Accuracy

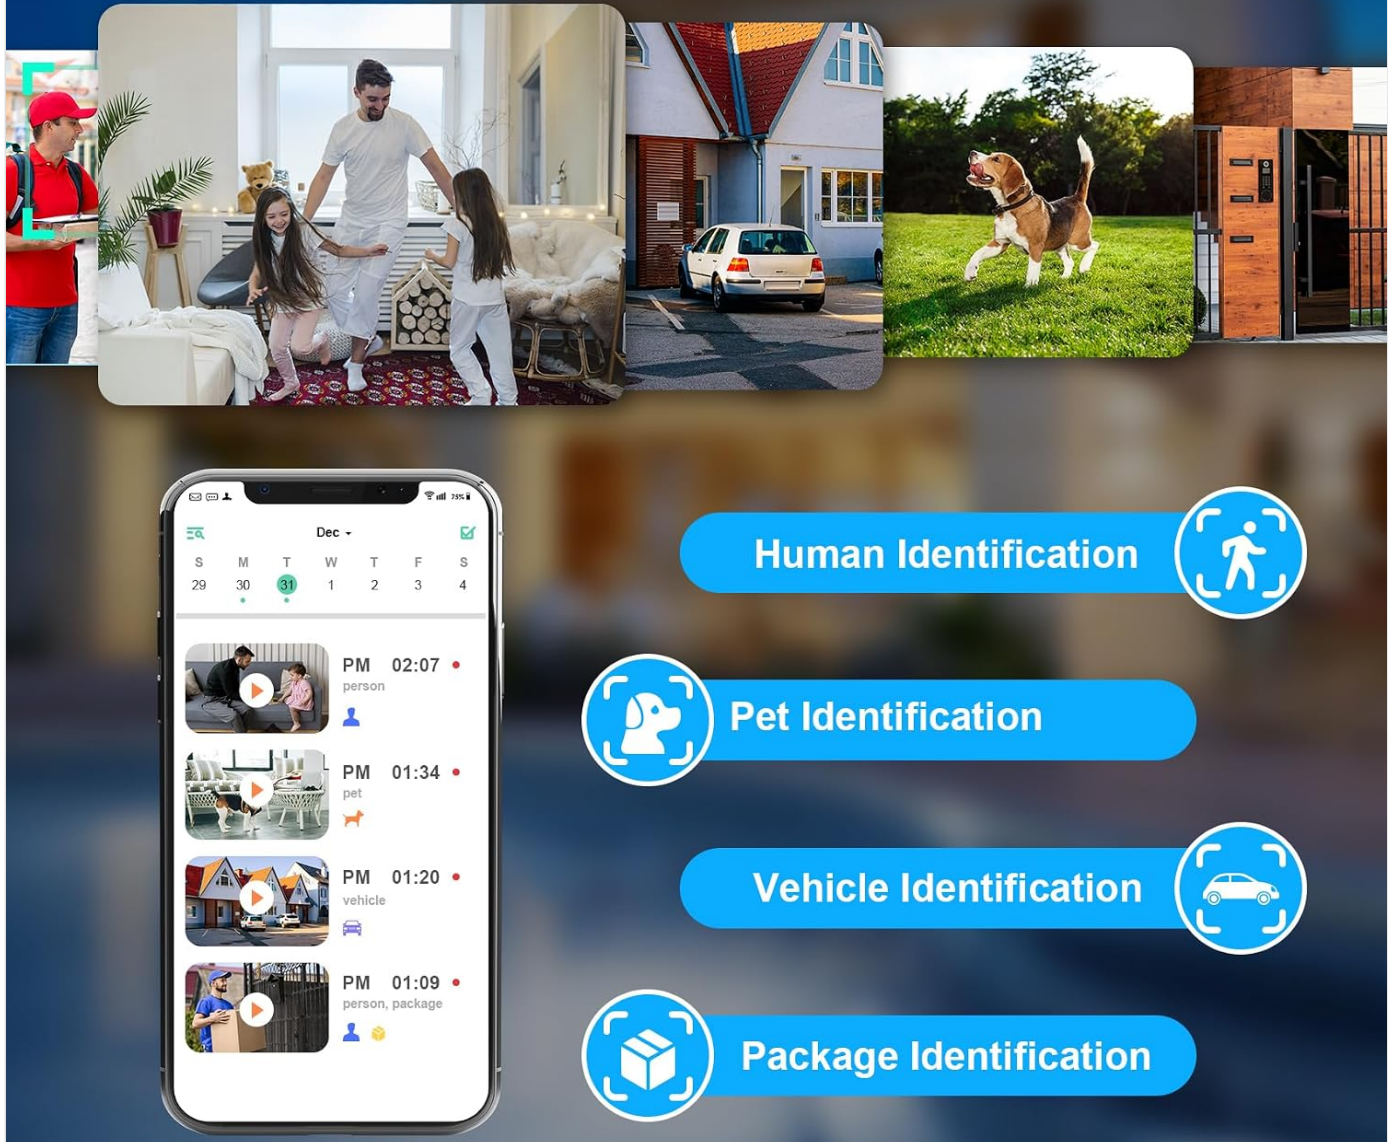


Image 3.4: Smart AI Motion Analysis



Image 3.5: Color Night Vision in Low Light



Image 3.6: Two-Way Audio and Multi-User Sharing

4. SPECIFICATIONS

Attribute	Value
Model Name	CG6S
Indoor/Outdoor Usage	Indoor, Outdoor
Connectivity Technology	Wireless (Wi-Fi)
Power Source	Battery Powered
Video Capture Resolution	2K (2304 x 1296 pixels)
Viewing Angle	130 Degrees

Night Vision Range	33 Feet
International Protection Rating	IP65
Item Dimensions (L x W x H)	5.3 x 2.6 x 3.8 inches
Item Weight	1.46 pounds
Batteries Required	Yes (1 A battery included)
Compatible Devices	Smartphone (Android)
Alert Type	Motion Only
Installation Type	Screw In
Number of Channels	2

5. SETUP GUIDE

5.1 Initial Charging

Before first use, fully charge your ZEEPORTE SECURITY cameras using the provided charging cord. A full charge can provide 1 to 5 months of usage depending on activity.

5.2 App Download and Account Creation

1. Download the VicoHome app from your smartphone's app store (available for Android).
2. Open the app and follow the on-screen instructions to create a new account or log in if you already have one.

5.3 Camera Pairing

1. In the VicoHome app, tap the '+' icon to add a new device.
2. Select your camera model from the list.
3. Follow the app's instructions to put the camera into pairing mode. This usually involves pressing a button on the camera.
4. Ensure your smartphone is connected to a 2.4GHz Wi-Fi network. The cameras only work with 2.4GHz Wi-Fi, not 5GHz.
5. The app will guide you through connecting the camera to your Wi-Fi network.

5.4 Installation

The cameras are designed for easy installation both indoors and outdoors. Use the provided mounting brackets and screws to secure the cameras in your desired locations. Consider areas that offer a clear view and strong Wi-Fi signal.



Image 5.1: Recommended Installation Locations

6. OPERATING INSTRUCTIONS

6.1 Live View and Recording

Access the VicoHome app to view live video streams from your cameras. You can also review recorded footage stored on the Micro SD card (if installed) or in the cloud storage.

6.2 Motion Detection and Alerts

The camera's advanced PIR sensor detects motion. When motion is detected, an instant notification will be pushed to your phone via the app. You can customize alert areas within the app to focus on specific zones and reduce unnecessary alerts.



Image 6.1: AI Motion Detection in Action

6.3 Two-Way Audio

Use the two-way talk feature to communicate with visitors or deter intruders. Simply tap the microphone icon in the app to speak through the camera's speaker.

6.4 Siren Alarm and Spotlight

In the event of suspicious activity, you can manually activate the siren alarm and spotlight from the app to scare away intruders.

6.5 Night Vision Modes

The camera automatically switches to night vision in low-light conditions. You can choose between full-color night vision (when sufficient ambient light or spotlight is available) and infrared night vision (black and white) for optimal visibility.

6.6 Storage Management

Manage your recordings through the VicoHome app. You can view, download, or delete footage from your Micro SD card or cloud storage. The free cloud storage provides a 3-day rolling cycle of recordings.

SD CARD/CLOUD STORAGE



Cloud Storage

- 30-day free trial cloud service.
- Permanently free 3-days cycle cloud storage.

SD Card

- Local SD card storage
- Up to 128GB

Image 6.2: SD Card and Cloud Storage Options

7. MAINTENANCE

- **Cleaning:** Periodically wipe the camera lens and body with a soft, damp cloth to remove dust and dirt. Avoid using harsh chemicals.
- **Battery Charging:** Monitor the battery level via the VicoHome app and recharge the cameras as needed to ensure continuous operation.
- **Firmware Updates:** Check the VicoHome app regularly for firmware updates. Keeping your camera's firmware updated ensures optimal performance and security.
- **Wi-Fi Connection:** Ensure your Wi-Fi router is functioning correctly and the camera is within range for a stable connection.

8. TROUBLESHOOTING

Problem	Possible Solution
Camera not connecting to Wi-Fi	Ensure your Wi-Fi is 2.4GHz. Move the camera closer to the router. Restart the camera and router.
Frequent false motion alerts	Adjust motion detection sensitivity in the app. Define custom alert areas to exclude busy zones. Ensure AI recognition is enabled.
Poor video quality	Check Wi-Fi signal strength. Clean the camera lens. Ensure sufficient lighting for color night vision.
Battery drains quickly	Reduce motion detection frequency/sensitivity. Ensure the camera is not in an area with constant motion. Check for extreme temperatures.

Two-way audio unclear	Ensure no obstructions near microphone/speaker. Check network connection stability.
-----------------------	---

9. WARRANTY AND SUPPORT

ZEEPORTE SECURITY is committed to providing reliable, high-quality security products. For detailed warranty information, please refer to the warranty card included with your product or visit the official ZEEPORTE SECURITY website. For technical support, troubleshooting assistance, or any product-related inquiries, please contact ZEEPORTE SECURITY customer service through the contact information provided on their official website or within the VicoHome app.

© 2025 ZEEPORTE SECURITY. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question