

Minie3339

User Manual: Invisible Bluetooth Earbuds

Brand: Generic | Model: Minie3339

INTRODUCTION

This manual provides comprehensive instructions for the Generic Minie3339 Invisible Bluetooth Earbuds. Designed for discreet communication, these compact and lightweight earbuds offer a stable wireless connection and clear audio. Please read this manual carefully to ensure proper use, maintenance, and to fully utilize all features of your new earbuds.

PRODUCT FEATURES

- **Discreet & Compact Design:** Virtually undetectable, blending seamlessly into the ear for covert operations or private listening.
- **Advanced Bluetooth Connectivity:** Utilizes Bluetooth 5.3 for a stable, reliable, and long-range wireless connection.
- **Noise-Cancelling Microphone:** Ensures crystal-clear voice transmission even in noisy environments.
- **Comfortable In-Ear Fit:** Designed for extended wear without discomfort or fatigue.
- **Waterproof Design:** Provides protection against water and sweat, suitable for various activities.
- **Intuitive Media Control:** Manage music playback and calls directly from the earbuds.
- **Voice Assistant Support:** Quick access to your device's voice assistant.
- **Portable Charging Case:** Compact case with digital display for on-the-go charging and battery status.



Image: The Minie3339 earbuds in their open charging case, highlighting key features such as Bluetooth 5.3, Type-C fast charging, and water resistance. A USB-C charging cable is also shown.

WHAT'S IN THE BOX

Upon unboxing, please ensure all the following items are present:

- 1x Pair of Generic Minie3339 Invisible Bluetooth Earbuds (Left & Right)
- 1x Portable Charging Case
- 1x USB-C Charging Cable
- 1x User Manual (this document)

SETUP GUIDE

1. Charging the Earbuds and Case

Before first use, fully charge both the charging case and the earbuds.

1. Place the earbuds into their respective slots in the charging case. Ensure they are correctly seated.
2. Connect the provided USB-C charging cable to the charging port on the case and the other end to a USB power adapter (not included) or a computer's USB port.
3. The digital display on the charging case will show the battery percentage, indicating charging status. The earbuds will also show charging indicators (e.g., LED lights).
4. Once fully charged, the display will show 100% or the charging indicators will turn off/change color. Disconnect the cable.



Image: The Minie3339 earbuds resting in their open charging case, which features a clear digital display indicating the battery level.

2. Pairing with Your Device

The earbuds will automatically enter pairing mode when taken out of the charging case.

1. Ensure the earbuds are charged and remove them from the charging case. They will automatically power on and enter pairing mode (indicated by flashing LED lights).
2. On your smartphone, tablet, or other Bluetooth-enabled device, go to the Bluetooth settings.
3. Turn on Bluetooth.
4. Search for available devices. You should see "Minie3339" or a similar name appear in the list.
5. Select "Minie3339" to connect. Once connected, the earbuds' LED indicators will stop flashing, and you may hear a confirmation tone.
6. If pairing fails, place the earbuds back into the case, close it, wait a few seconds, and then repeat the steps.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** The earbuds automatically power on when removed from the charging case.
- **Power Off:** Place the earbuds back into the charging case and close the lid. They will automatically power off and begin charging.

Music Playback Control

The earbuds feature touch-sensitive controls for easy management of your audio.

- **Play/Pause:** Single tap on either earbud.
- **Next Track:** Double tap the right earbud.
- **Previous Track:** Double tap the left earbud.
- **Volume Up:** Triple tap the right earbud.
- **Volume Down:** Triple tap the left earbud.

Call Management

- **Answer/End Call:** Single tap on either earbud during an incoming call.
- **Reject Call:** Press and hold either earbud for 2 seconds during an incoming call.

Voice Assistant

- **Activate Voice Assistant:** Press and hold either earbud for 3 seconds (e.g., Siri, Google Assistant).

Wearing the Earbuds

For optimal sound quality and discreetness, ensure the earbuds are properly seated in your ear canal.

- Identify the Left (L) and Right (R) earbuds.
- Gently insert each earbud into the corresponding ear, rotating slightly until it feels secure and comfortable. The compact design is intended to be minimally visible.

ULTRA-THIN EAR DEDICATED TO SLEEP

SLEEP HEADPHONES

- New and upgraded
- Long wear does not hurt,
- Call noise reduction



Image: A visual representation of the ultra-thin design of the earbuds, emphasizing their discreet fit for comfortable wear, even during sleep.

MAINTENANCE AND CARE

- **Cleaning:** Regularly clean the earbuds and charging case with a soft, dry, lint-free cloth. Do not use harsh chemicals or abrasive materials.
- **Water Resistance:** The earbuds are waterproof. However, avoid prolonged submersion in water and do not expose them to saltwater or other corrosive liquids. Ensure they are dry before placing them back in the charging case.
- **Storage:** When not in use, store the earbuds in their charging case to protect them and keep them charged. Store in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Impact:** Do not drop or subject the earbuds or charging case to strong impacts, as this can damage internal components.

TROUBLESHOOTING

Problem	Possible Solution
Earbuds not powering on.	Ensure the earbuds and charging case are fully charged. Place earbuds back in case, then remove them.
Earbuds not pairing with device.	<ol style="list-style-type: none">1. Ensure Bluetooth is enabled on your device.2. Make sure earbuds are in pairing mode (flashing LED).3. Forget "Minie3339" from your device's Bluetooth list and try pairing again.4. Restart your device and the earbuds.5. Ensure earbuds are within Bluetooth range (approx. 10 meters).
No sound from one or both earbuds.	<ol style="list-style-type: none">1. Check device volume and earbud volume.2. Ensure earbuds are properly connected to your device.3. Try re-pairing the earbuds.4. Clean any debris from the earbud speakers.
Charging case display not working or not charging.	<ol style="list-style-type: none">1. Try a different USB-C cable and power adapter.2. Ensure the charging port is clean and free of debris.3. If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Minie3339
Connectivity Technology	Wireless
Wireless Communication Technology	Bluetooth 5.3 (as per images, overriding 4.0 in description)
Material	Plastic
Water Resistance Level	Waterproof
Frequency Range	20 Hz - 20,000 Hz
Noise Control	Active Noise Cancellation
Ear Placement	In Ear
Form Factor	In Ear
Control Type	Media Control
Earpiece Shape	Rounded tips
Color	Black

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact the seller directly through the platform where the product was acquired. Keep your proof of purchase for any warranty claims.

For technical assistance or further inquiries, please reach out to the manufacturer's customer service if contact details are available on the product packaging or official website.