

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sun Flame](#) /

› [Sun Flame J-AXIS Sanrio Pochacco Digital Watch CR3C0003-PC User Manual](#)

Sun Flame CR3C0003-PC

Sun Flame J-AXIS Sanrio Pochacco Digital Watch CR3C0003-PC User Manual

Model: CR3C0003-PC

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Sun Flame J-AXIS Sanrio Pochacco Digital Watch, Model CR3C0003-PC. This digital timepiece features a clear display, EL backlight, alarm function, and calendar display, making it suitable for daily use.



Image 1.1: Front view of the Sanrio Pochacco Digital Watch. This image displays the watch face with its digital time display, the Pochacco character, and the four control buttons labeled 'LIGHT', 'MODE', 'START', and 'RESET'.

2. SETUP

2.1 Initial Activation

Your watch may arrive with a plastic tab in the crown or buttons to preserve battery life. Remove this tab if present. The display should activate automatically.

2.2 Setting the Time

1. Press the **MODE** button repeatedly until the time setting mode is indicated (often by flashing digits).
2. Use the **START** button to increase the value or the **RESET** button to decrease the value for the flashing hour.
3. Press the **MODE** button again to move to the minute setting. Adjust minutes using the **START** or **RESET** buttons.
4. Continue pressing **MODE** to cycle through other settings like 12/24-hour format if available.
5. Once all settings are correct, press the **MODE** button to exit the setting mode and return to the normal time display.

2.3 Setting the Date

The date setting is typically accessed through the same **MODE** button sequence as the time. After setting the time, continue pressing **MODE** to reach the year, month, and day settings. Adjust each value using the **START** or **RESET** buttons and confirm with **MODE**.

3. OPERATING INSTRUCTIONS

3.1 Display Modes

Press the **MODE** button to cycle through different display modes:

- **Normal Time Display:** Shows hours, minutes, and seconds.
- **Date Display:** Shows month and day.
- **Alarm Setting:** Allows setting and activating the alarm.
- **Stopwatch:** (If available) For measuring elapsed time.

3.2 Using the EL Backlight

To illuminate the display in low-light conditions, press the **LIGHT** button. The backlight will activate for a few seconds and then turn off automatically to conserve battery.



Image 3.1: The watch display with the EL backlight active, providing clear visibility in the dark.

3.3 Setting and Activating the Alarm

1. Press the **MODE** button until you reach the alarm setting mode (often indicated by an alarm icon or 'AL').
2. Use the **START** or **RESET** buttons to adjust the alarm hour.
3. Press **MODE** to move to the alarm minute setting and adjust using **START** or **RESET**.
4. To activate or deactivate the alarm, typically press the **START** button while in the alarm display mode (not setting mode). An alarm icon will appear on the display when activated.
5. Press **MODE** to return to the normal time display.

3.4 Using the Stopwatch (If Applicable)

If your watch includes a stopwatch function:

1. Press the **MODE** button until the stopwatch display appears (often '00:00:00').
2. Press **START** to begin timing.
3. Press **START** again to pause timing.
4. Press **RESET** to clear the stopwatch to zero.

5. Press **MODE** to exit the stopwatch mode.

4. MAINTENANCE

4.1 Cleaning

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or internal components.

4.2 Water Resistance

This watch is designed for daily use and may offer basic splash resistance. However, it is not intended for swimming, showering, or prolonged water immersion. Avoid pressing buttons while the watch is wet to prevent water entry.

4.3 Battery Replacement

When the display becomes dim or the watch stops functioning, the battery may need replacement. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and function. Attempting to replace the battery yourself may void any warranty and could damage the watch.



Image 4.1: Back view of the watch, showing the case back where battery access is typically located.

5. TROUBLESHOOTING

5.1 Display is Blank or Dim

- Check if the battery needs replacement.
- Ensure no plastic tab is still present under the buttons or crown.

5.2 Buttons Not Responding

- Press each button firmly.
- If the watch has been exposed to water, ensure it is completely dry.
- A low battery can sometimes affect button responsiveness.

5.3 Time is Inaccurate

- Re-set the time following the instructions in Section 2.2.
- A weak battery can cause the watch to lose time. Consider battery replacement.

6. SPECIFICATIONS

Feature	Detail
Brand	Sun Flame
Model Number	CR3C0003-PC
Display Type	Digital
Backlight	EL Backlight
Functions	Time, Date, Alarm, Calendar
Approximate Dimensions (Package)	17.9 x 5.6 x 4.6 cm
Approximate Weight (Package)	60 g
Department	Girls

キャラクターに合わせたパッケージ付き！



Image 6.1: The Pochacco Digital Watch worn on a wrist, illustrating its size and appearance during use.

7. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact the retailer. Keep your proof of purchase for any warranty claims.