

[manuals.plus](#) /› [Lexibook](#) /› [Lexibook Disney Stitch JC598Di3 Bilingual Educational Laptop User Manual](#)

Lexibook JC598Di3

Lexibook Disney Stitch JC598Di3 Bilingual Educational Laptop User Manual

Model: JC598Di3

1. INTRODUCTION

The Lexibook Disney Stitch JC598Di3 is a bilingual educational laptop designed for children, offering an interactive learning experience with 124 activities in both German and English. This device aims to develop skills in language, mathematics, logic, and time reading through engaging activities. Its design features a realistic keyboard and mouse, providing an immersive experience for young users.



Image 1.1: The Lexibook Disney Stitch JC598Di3 Bilingual Educational Laptop.

2. SAFETY INFORMATION

WARNING: Not suitable for children under 3 years of age. Choking hazard due to small parts.

- Always supervise children during use.
- Do not expose the device to water or excessive moisture.
- Avoid dropping the device or subjecting it to strong impacts.
- Ensure batteries are inserted correctly and replaced by an adult.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x Lexibook Disney Stitch JC598Di3 Bilingual Educational Laptop
- 1 x Wired Mouse
- 1 x Instruction Manual (this document)

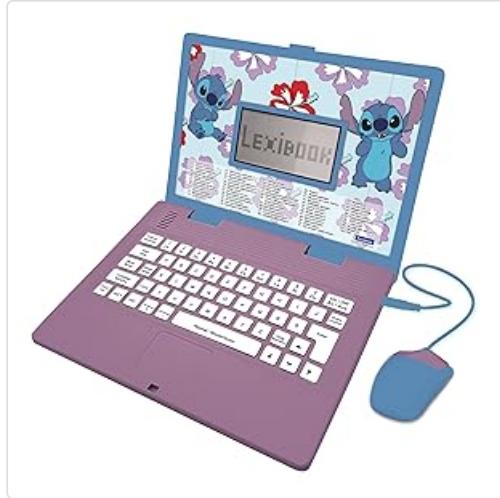


Image 3.1: Product packaging showing the laptop and mouse.

4. SETUP

4.1 Battery Installation

1. Locate the battery compartment on the underside of the laptop.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 2 x AA alkaline batteries (not included), ensuring correct polarity (+/-).
4. Replace the battery compartment cover and secure it with the screw.

4.2 Connecting the Mouse

Plug the wired mouse connector into the designated port on the side of the laptop.



Image 4.1: The wired mouse.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on the laptop, press the **On/Off** button located on the keyboard.
- To power off, press the **On/Off** button again.

5.2 Keyboard and Mouse Usage

The laptop features a QWERTY keyboard layout and a functional wired mouse for navigation and interaction within activities.



Image 5.1: Detailed view of the keyboard.

5.3 Language Selection

To switch between German and English, locate the **Language** button on the keyboard and press it to toggle between the available languages.

5.4 Activity Selection

Use the number keys (1-62) or the arrow keys to navigate and select from the 124 available activities. Press **Enter** to start an activity.

5.5 Volume and Contrast Adjustment

Adjust the sound volume using the **Vol+** and **Vol-** buttons. The screen contrast can be adjusted using the **Contrast** button.


5.6 Repeat Function

Press the **Repeat / Wiederholen** button to hear instructions or questions again during an activity.

6. ACTIVITIES

The laptop offers 124 diverse activities, with 62 activities available in German and 62 in English. These activities are categorized to support various learning areas:

- **Language Activities:** Focus on vocabulary, spelling, and basic grammar in both German and English.
- **Mathematics Activities:** Cover basic arithmetic, number recognition, and simple problem-solving.
- **Logic Activities:** Include puzzles, memory games, and pattern recognition to enhance critical thinking.
- **Musical Activities:** Introduce musical notes, melodies, and rhythm.
- **Games:** Provide entertainment and reinforce learning in a playful manner.

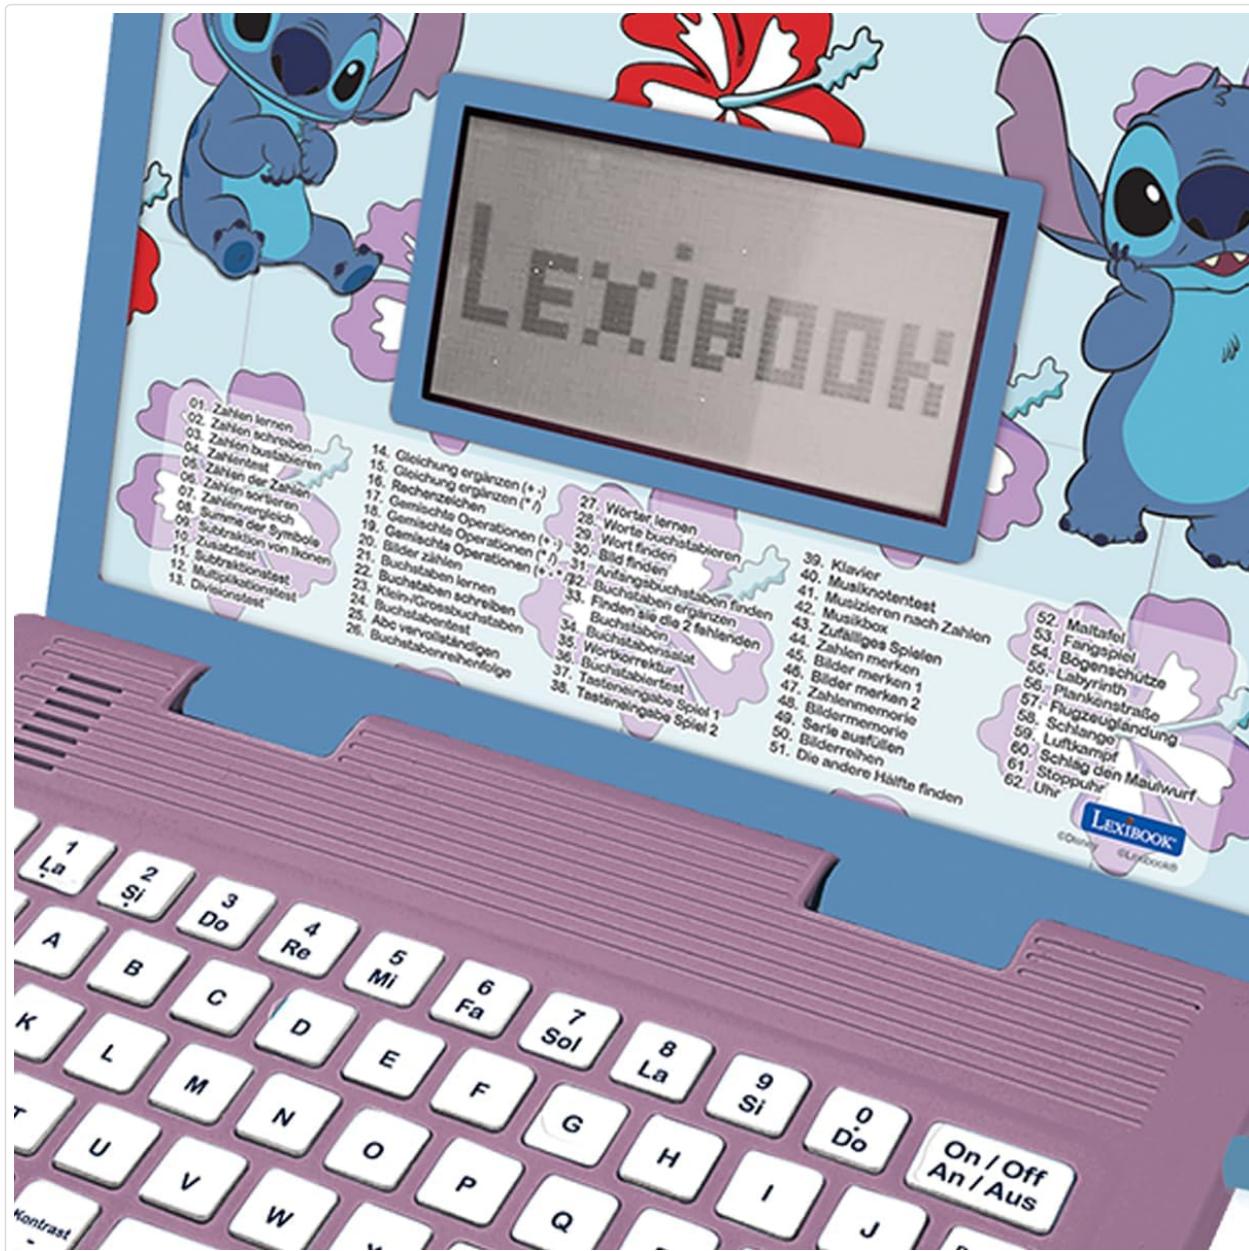

01. Zahlen lernen
02. Zahlen schreiben
03. Zahlen auszählen
04. Zahlen testen
05. Zahlen der Zahlen
06. Zahlen sortieren
07. Zahlenvergleich
08. Summe der Symbole
09. Subtraktion der Symbole
10. Zusatzklaus
11. Subtraktionsklaus
12. Multiplikationsklaus
13. Divisionenklaus
14. Gleichung ergänzen (+ -)
15. Gleichung ergänzen (* /)
16. Rechenzeichen
17. Gemischte Operationen (+ - * /)
18. Gemischte Operationen (* / - +)
19. Gemischte Operationen (+ - * / - +)
20. Bilder zählen
21. Buchstaben lernen
22. Buchstaben schreiben
23. Klein-/Großbuchstaben
24. Buchstaben testen
25. Abc vervollständigen
26. Buchstabenreihenfolge
27. Wörter lernen
28. Wörter buchstabieren
29. Wort finden
30. Bild finden
31. Anfangsbuchstaben finden
32. Finden sie die 2 fehlenden
33. Buchstaben ergänzen
34. Buchstaben
35. Wörterrekontruk
36. Buchstabenklaus
37. Tastenreihenfolge Spiel 1
38. Tastenreihenfolge Spiel 2
39. Klavier
40. Musiknotentest
41. Musizieren nach Zahlen
42. Musikbox
43. Zufälliges Spielen
44. Zahlen merken
45. Bilder merken 1
46. Bilder merken 2
47. Zahlenmemorie
48. Bildermemorie
49. Serie ausfüllen
50. Bilderreihen
51. Die andere Hälfte finden
52. Maltafel
53. Fangspiel
54. Bogenschießen
55. Labyrinth
56. Plankensteinstraße
57. Flugzeuglandung
58. Schlange
59. Luftkampf
60. Schlag den Maulwurf
61. Stoppuhr
62. Uhr

©Disney LEXIBOOK

LEXBOOK

Image 6.1: Screen displaying activity options.

7. MAINTENANCE

- Clean the laptop and mouse with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries if the device will not be used for an extended period to prevent leakage.

8. TROUBLESHOOTING

8.1 Device Does Not Turn On

- Check if the batteries are correctly installed with the proper polarity.
- Replace old batteries with new alkaline batteries.
- Ensure the On/Off button is pressed firmly.

8.2 Screen is Blank or Dim

- Adjust the screen contrast using the **Contrast** button.
- Ensure batteries have sufficient power.

8.3 No Sound or Low Volume

- Adjust the volume using the **Vol+** button.
- Ensure the device is not muted.

8.4 Mouse or Keyboard Not Responding

- Ensure the mouse is securely plugged into its port.
- Restart the device by turning it off and on again.

9. SPECIFICATIONS

Model Number	JC598Di3
Brand	Lexibook
Dimensions (L x W x H)	24 x 18 x 3.6 cm
Weight	630 Grams
Recommended Age	4 years and up
Minimum Recommended Age (Months)	48 months
Batteries Required	Yes (2 x AA)
Batteries Included	No
Battery Type	Alkaline
Main Material	Plastic
Educational Objective	Cognitive Skills, Language Skills, Logical Thinking, Number Recognition
Theme	Disney Stitch, Lilo & Stitch
Color	Lilac/Blue

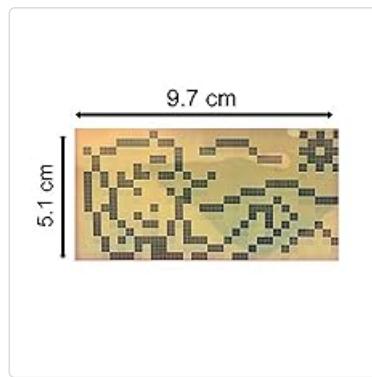


Image 9.1: Screen dimensions.

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided on the product packaging or visit the official Lexibook website. Keep your proof of purchase for any warranty claims.