

DEKOPRO DKCD12XL02G-S2

DEKO PRO 12V Cordless Drill Set Instruction Manual

Model: DKCD12XL02G-S2

1. INTRODUCTION

This manual provides essential instructions for the safe and effective operation, maintenance, and care of your DEKO PRO 12V Cordless Drill Set. Please read this manual thoroughly before using the tool and retain it for future reference. The DEKO PRO 12V Cordless Drill is designed for drilling into wood and plastic, as well as for tightening and loosening screws. Its compact and lightweight design makes it suitable for various household and DIY tasks.

2. PACKAGE CONTENTS

Verify that all items listed below are present in your package:

- 1 x DEKO PRO 12V Cordless Drill
- 1 x Type-C Charge Cable
- 1 x Magnetic Bit Holder (60 mm)
- 6 x Twisted Drill Bits (2, 2.5, 3, 4, 5, 6 mm)
- 6 x Screwdriver Bits (SL4, SL6, PH1, PH2, PZ1, PZ2)
- 1 x User Manual (this document)




Image 2.1: The DEKO PRO 12V Cordless Drill Set, including the drill, charging cable, and various bits, all contained within a portable carrying case.



Type-C Charge



 12V Cordless Drill

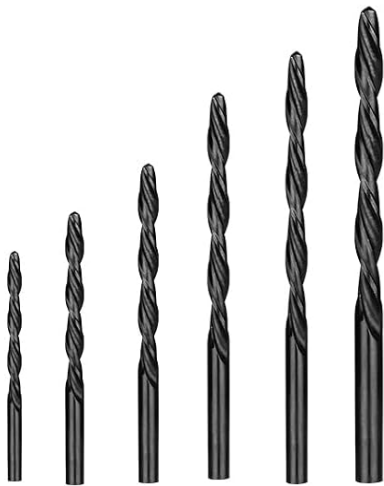

Twisted Drill Bits



Magnetic Bit



6*Screwdriver Bits

Image 2.2: A visual representation of the drill, Type-C charging cable, twisted drill bits, magnetic bit, and screwdriver bits included in the package.

3. PRODUCT FEATURES AND COMPONENTS

Familiarize yourself with the key components of your cordless drill:



Image 3.1: Diagram illustrating the main components: 3/8-inch Keyless Chuck, LED Light, Variable Speed Control Trigger, Forward/Reverse Switch, Soft Grip Handle, Charging Input Port, and Battery Charge Indicator Light.

- **3/8-inch Keyless Chuck:** Allows for quick and easy bit changes without a key.
- **LED Light:** Illuminates the work area for improved visibility in dark spaces.
- **Variable Speed Control Trigger:** Provides precise control over drilling speed based on pressure applied.
- **Forward/Reverse Switch:** Changes the rotation direction for drilling or screw driving/removal.
- **Soft Grip Handle:** Ergonomically designed for comfortable and secure handling.
- **Charging Input Port:** USB Type-C port for convenient battery charging.
- **Battery Charge Indicator Light:** Displays the current battery level.

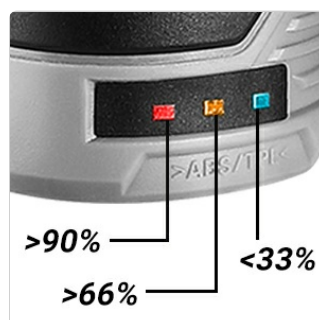 


Image 3.2: The battery indicator lights show charge levels: Red (>90%), Orange (>66%), Blue (<33%).

4. SETUP

4.1 Charging the Battery

The drill is powered by a built-in rechargeable battery. Before first use, ensure the battery is fully charged.

1. Locate the Type-C charging input port at the base of the drill handle.
2. Connect the provided Type-C charging cable to the drill.
3. Plug the other end of the cable into a universal USB charger or USB output (not included).
4. The battery indicator lights will show charging progress. Charge until the indicator shows a full charge.



Image 4.1: The cordless drill with its Type-C charging cable connected, ready for charging.

4.2 Inserting and Removing Bits

The 3/8-inch keyless chuck allows for quick and secure bit changes.

1. **To Insert a Bit:** Rotate the chuck counter-clockwise to open the jaws. Insert the desired drill bit or screwdriver bit into the chuck. Rotate the chuck clockwise to tighten the jaws securely around the bit. Ensure the bit is centered and firmly held.
2. **To Remove a Bit:** Rotate the chuck counter-clockwise to loosen the jaws, then pull the bit out.

For screwdriver bits, you can use the magnetic bit holder for extended reach and easier bit changes.



Image 4.2: Visual guide on using the keyless chuck: rotate forward to lock the drill chuck and reverse to remove screws or release stuck bits.

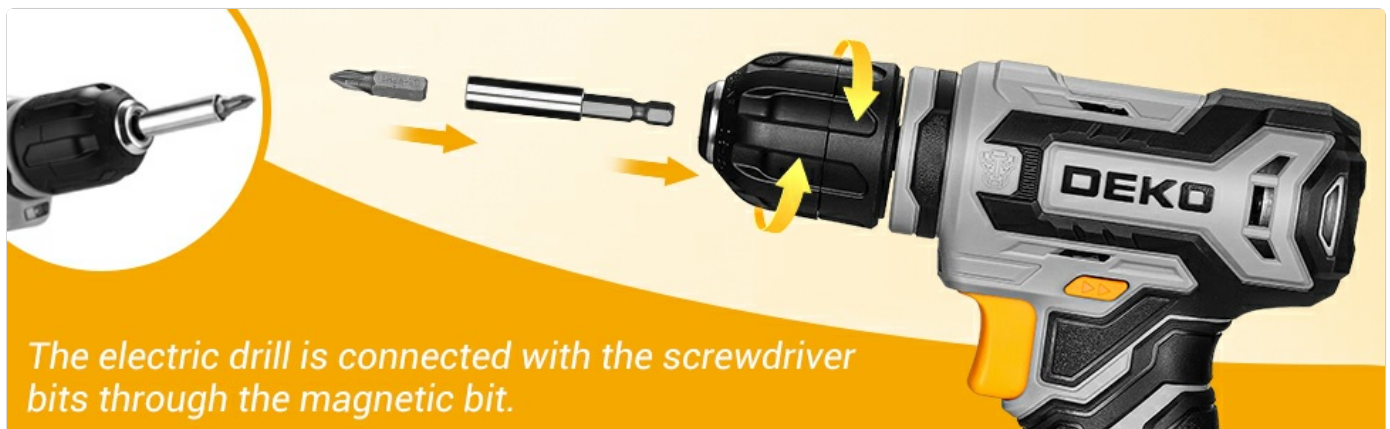 


Image 4.3: The electric drill connected with a screwdriver bit through the magnetic bit holder.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off and Speed Control

The drill features a variable speed control trigger.

1. To start the drill, press the variable speed control trigger.

2. The speed of the drill increases as you apply more pressure to the trigger.
3. To stop the drill, release the trigger.



Image 5.1: The orange variable speed control trigger, which regulates the drill's rotational speed.

5.2 Forward/Reverse Operation

The forward/reverse switch controls the direction of rotation.

1. To rotate clockwise (for drilling or driving screws), push the switch to the left.
2. To rotate counter-clockwise (for removing screws or backing out bits), push the switch to the right.
3. When the switch is in the center position, the trigger is locked, preventing accidental startup.



Image 5.2: The forward/reverse switch, located above the trigger, allows for changing the direction of rotation.

5.3 LED Work Light

The built-in LED light automatically activates when the trigger is pressed, illuminating your work area for better visibility, especially in dimly lit conditions.



Image 5.3: The LED light provides illumination for working in dark environments.

5.4 Applications

The DEKO PRO 12V Cordless Drill is suitable for a variety of tasks:

- **Drilling:** Use appropriate drill bits for materials like wood and plastic.
- **Screw Driving:** Use screwdriver bits to tighten or loosen screws.



DRILLING SCREWS



DRILLING WOOD



Image 5.4: The drill in use for drilling screws and drilling into wood.

MULTIPLE USAGE SCENARIOS



Screw Driving



Drilling Wood



Drilling Metal

Image 5.5: Examples of multiple usage scenarios: screw driving, drilling wood, and drilling metal.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your drill.

- **Cleaning:** Keep the ventilation openings clear and clean. Use a soft, damp cloth to wipe down the tool. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the drill and its accessories in a dry, secure place, away from direct sunlight and extreme temperatures. Keep out of reach of children.
- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the battery before it is completely depleted to prolong its lifespan.

7. TROUBLESHOOTING

If you encounter issues with your drill, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Drill does not start	Battery is discharged Forward/Reverse switch is in center (locked) position	Charge the battery Move the switch to the forward or reverse position
Bit slips in chuck	Chuck not tightened sufficiently Bit shank is dirty or damaged	Tighten the chuck firmly by hand Clean the bit shank or replace the bit
Reduced power or speed	Low battery charge	Recharge the battery
Overheating	Continuous heavy use Blocked ventilation slots	Allow the drill to cool down Clear any obstructions from the ventilation slots

8. SPECIFICATIONS

Feature	Specification
Brand	DEKOPRO
Model Number	DKCD12XL02G-S2
Power Source	Battery Powered
Voltage	12 Volts
Maximum Rotational Speed	800 RPM
Amperage	25 Amps
Maximum Power	600 Watts
Chuck Size	3/8-inch Keyless
Drilling Capacity (Wood)	0.38 Inches
Battery Cell Type	Lithium Ion
Item Weight	1.51 Kilograms (approx. 3.32 pounds)

Feature	Specification
Product Dimensions	10.6"L x 2.3"W x 7.4"H

9. SAFETY INFORMATION

Always follow basic safety precautions when using power tools to reduce the risk of injury.

- Wear appropriate personal protective equipment, such as safety glasses, hearing protection, and gloves.
- Ensure your work area is well-lit and clear of obstructions.
- Secure the workpiece firmly before drilling or driving.
- Do not operate the drill in damp or wet conditions.
- Keep hands and loose clothing away from moving parts.
- Disconnect the drill from the power source (charging cable) before making any adjustments, changing accessories, or storing the tool.
- Do not force the tool; let the tool do the work at its intended speed.

© 2025 DEKOPRO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Where can I find a replacement charging cord for the DEKO PRO 12V Cordless Drill (Model DKCD12XL02G-S2)?

The DEKO PRO 12V Cordless Drill (Model DKCD12XL02G-S2) uses a standard USB Type-C charging cable. Because it uses a universal Type-C port, you do not necessarily need a proprietary DEKO-branded cord. To replace your charging...

[Read full answer](#)