

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VINABTY](#) /

> [VINABTY Replacement Remote Control for ONN Soundbar Speaker 100015716 User Manual](#)

VINABTY 100015716

VINABTY Replacement Remote Control

FOR ONN SOUNDBAR SPEAKER MODEL 100015716 - USER MANUAL

Introduction

This manual provides comprehensive instructions for the VINABTY Replacement Remote Control, designed exclusively for the ONN Soundbar Speaker Model 100015716. It is crucial to verify your soundbar's model number to ensure compatibility, as this remote is not a universal remote control. Please read this manual thoroughly before using the remote control to ensure correct operation and to prevent any issues.

Setup

1. Battery Installation

The remote control requires two (2) AAA alkaline batteries for operation. Ensure you use new, non-rechargeable AAA alkaline batteries. Do not use AA batteries.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. The correct polarity is typically + to - and - to +.
4. Close the battery compartment cover by sliding it back into place until it clicks securely.





Image: Back of the remote control with the battery compartment. This is where you will insert the two AAA batteries.

2. Initial Use

No programming is required for this replacement remote control. Once batteries are installed, it is ready for use with your ONN Soundbar Speaker Model 100015716.

Operating Instructions

Point the remote control directly towards the infrared (IR) sensor on your ONN Soundbar Speaker. Ensure there are no obstructions between the remote and the soundbar.



Image: Front view of the remote control, displaying all functional buttons.

Button Functions:

- **Power Button** (⏻): Turns the soundbar on or off.
- **Bluetooth Button** (🔗): Activates Bluetooth pairing mode or switches to Bluetooth input.
- **Mute Button** (🔇): Mutes or unmutes the soundbar audio.
- **Volume Up (VOL+)**: Increases the soundbar volume.
- **Volume Down (VOL-)**: Decreases the soundbar volume.

- **Previous Track ():** Skips to the previous track (when playing media via Bluetooth).
- **Play/Pause ():** Plays or pauses media (when playing media via Bluetooth).
- **Next Track ():** Skips to the next track (when playing media via Bluetooth).
- **AUX Button:** Switches the soundbar input to Auxiliary (AUX).
- **OPTICAL Button:** Switches the soundbar input to Optical.
- **MUSIC Button:** Activates Music sound mode.
- **MOVIE Button:** Activates Movie sound mode.
- **TALK Button:** Activates Talk sound mode (enhances dialogue clarity).

Maintenance

Battery Replacement:

Replace batteries when the remote control's response becomes inconsistent or stops working. Always replace both batteries simultaneously with new AAA alkaline batteries.

Cleaning:

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as they may damage the surface or internal components.

Storage:

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

Troubleshooting

If the remote control does not function as expected, please follow these troubleshooting steps:

1. No Response or Does Not Work:

- Ensure two new AAA alkaline batteries are correctly installed. Verify polarity (+ to -, - to +).
- Confirm your soundbar is the ONN Soundbar Speaker Model 100015716. This remote is not universal.
- Check for any obstructions between the remote control and the soundbar's IR sensor. The effective control range is approximately 10 meters (30 feet) within a 30-degree angle.

2. Remote Still Not Working After Initial Checks:

- Remove the batteries from the remote control.
- Press each button on the remote control for at least 3-5 seconds to drain any residual power and check for stuck buttons.
- Inspect the IR sensor area on your soundbar for dust or debris and clean it if necessary. Dust can interfere with the IR signal.
- Ensure nothing is physically blocking the front of your soundbar where the IR sensor is located. Point the remote directly at the soundbar's sensor.
- Insert two new AAA alkaline batteries, ensuring correct polarity. Do not use AA or rechargeable batteries.
- Unplug the power supply of your soundbar from the wall outlet, wait for 10-15 seconds, then plug it back in to restart the soundbar. Try the remote again after the soundbar has fully powered on.

Specifications





Image: Front view of the remote control with approximate dimensions.

Feature	Detail
Brand	VINABTY
Model Number	100015716
Compatibility	ONN Soundbar Speaker 100015716 (Not Universal)
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	6 x 2 x 0.5 inches (approximately 15.24 x 5.08 x 1.27 cm)
Item Weight	1.44 ounces (approximately 40.8 grams)
Color	Black
Special Feature	Ergonomic design

Warranty and Support

Specific warranty information for this VINABTY replacement remote control is not provided in the product details. For warranty claims, technical support, or further assistance, please contact the manufacturer or your point of purchase directly.