

## PRIXTON DV800

# PRIXTON Multisport DV800 Action Camera User Manual

Model: DV800

## 1. INTRODUCTION

Thank you for choosing the PRIXTON Multisport DV800 Action Camera. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure optimal performance and longevity of your camera.

## 2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- PRIXTON Multisport DV800 Action Camera
- Waterproof Case
- Rechargeable Battery
- USB Cable
- Bicycle Mount
- Clip
- Mounting Adapter
- Three Helmet Mounts
- Strap/Bandage
- 3M Adhesives
- User Manual





1. Open the latch on the waterproof case.
2. Carefully place the camera inside the case, ensuring it fits snugly.
3. Close the latch firmly to seal the case. Ensure no debris is caught in the seal.



Image: The PRIXTON DV800 Action Camera securely housed within its waterproof casing, ready for use in aquatic environments.

## 5. OPERATING INSTRUCTIONS

### 5.1. Power On/Off

- **To Power On:** Press and hold the Power/Mode button for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power/Mode button again until the screen turns off.

### 5.2. Mode Selection

Press the Power/Mode button repeatedly to cycle through different modes: Video, Photo, Playback, and Settings.

### 5.3. Video Recording

1. Switch to Video Mode.
2. Press the Shutter/OK button to start recording. A red indicator light will flash.



3. Press the Shutter/OK button again to stop recording. The indicator light will stop flashing.

## 5.4. Taking Photos

1. Switch to Photo Mode.
2. Frame your shot using the screen.
3. Press the Shutter/OK button to take a photo.

## 5.5. Wi-Fi Connectivity and Mobile App

The camera can connect to your mobile device via Wi-Fi using the "XDV PRO" application.

1. Download and install the "XDV PRO" app on your smartphone or tablet.
2. On the camera, navigate to the settings menu and enable Wi-Fi.
3. On your mobile device, connect to the camera's Wi-Fi network (SSID and password will be displayed on the camera screen).
4. Open the "XDV PRO" app to control the camera, view live footage, and transfer files.



Image: A close-up of the PRIXTON DV800 Action Camera's rear screen, showing its 5K Ultra HD capability and Wi-Fi connectivity.

## 5.6. Using as a Webcam

Connect the camera to a computer via USB to use it as a webcam.

1. Connect the camera to your computer using the provided USB cable.
2. Select the 'PC Camera' or 'Webcam' option on the camera's screen if prompted.
3. Your computer should recognize the camera as a webcam, which can then be selected in video conferencing applications.

## 6. MAINTENANCE

### 6.1. Cleaning

- Use a soft, lint-free cloth to clean the camera lens and screens.
- For the waterproof case, rinse with fresh water after saltwater use and allow it to air dry.
- Avoid using harsh chemicals or abrasive materials.

### 6.2. Battery Care

- Charge the battery fully before first use.
- Do not expose the battery to extreme temperatures.
- If storing the camera for an extended period, remove the battery.

### 6.3. Storage

Store the camera in a cool, dry place away from direct sunlight and dust when not in use.

## 7. TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged and correctly inserted.
- **Recording issues:** Check if the MicroSD card is inserted correctly and has sufficient free space. Format the card if necessary (this will erase all data).
- **Wi-Fi connection problems:** Ensure Wi-Fi is enabled on the camera and your mobile device. Restart both devices if issues persist.
- **Poor image/video quality:** Clean the lens. Ensure adequate lighting. Check resolution settings.

## 8. SPECIFICATIONS

 


 
Model Name	DV800
Brand	PRIXTON
Video Capture Resolution	5K
Photo Sensor Technology	Other
Flash Memory Type	MicroSD (up to 128GB)
Video Capture Format	MOV
Supported Audio Format	MP4
Connectivity Technology	Wi-Fi
Color	Black

 
<b>Camcorder Type</b>	Action Camera
<b>Battery Life</b>	Approximately 90 minutes

## 9. WARRANTY AND SUPPORT

The PRIXTON Multisport DV800 Action Camera comes with a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the warranty card included in your package or visit the official PRIXTON website. Keep your purchase receipt as proof of purchase for warranty claims.

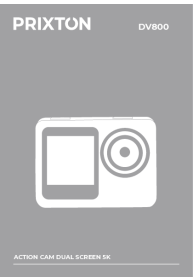 
### Related Documents - DV800

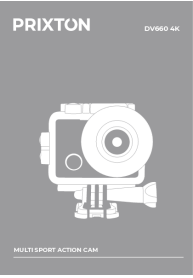	<p><a href="#">Prixtion DV800 Action Cam Dual Screen 5K User Manual</a></p> <p>Comprehensive user manual for the Prixtion DV800 Action Cam Dual Screen 5K, covering setup, features, modes, system configuration, and connectivity.</p>
	<p><a href="#">Prixtion MultiSport DV609 Action Camera User Manual</a></p> <p>User manual for the Prixtion MultiSport DV609 action camera, covering setup, functions, precautions, and technical specifications. Learn how to use your camera for video recording, photo shooting, and more.</p>
	<p><a href="#">PRIXTON DV670 Cámara de Acción Dual Screen 4K - Manual de Usuario</a></p> <p>Guía completa para la cámara de acción PRIXTON DV670. Aprende a usar sus funciones 4K, doble pantalla, resistencia al agua y conectividad WiFi para capturar tus aventuras.</p>
	<p><a href="#">Prixtion DV660 4K: Manual de Usuario y Guía de Inicio Rápido</a></p> <p>Descubra las funciones, especificaciones y cómo usar su cámara de acción Prixtion DV660 4K con este manual completo. Incluye instrucciones de configuración, uso de la tarjeta de memoria, conexión y más.</p>

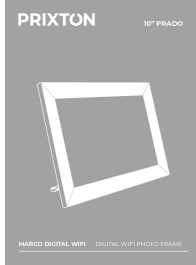

### [Prixton 10" Prado Marco Digital Wifi - Manual de Usuario](#)

Guía completa para el marco de fotos digital Prixton 10" Prado con Wi-Fi. Aprenda a configurar, conectar amigos y gestionar sus recuerdos a través de la aplicación Frameo.

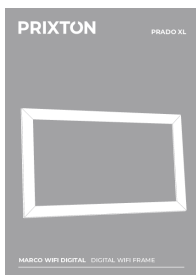

### [Prixton Prado XL Digital WiFi Frame User Manual](#)

User guide for the Prixton Prado XL Digital WiFi Frame, covering setup, photo sharing, app usage, settings, and troubleshooting.