

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [MINDKEEP](#) /
- › [MINDKEEP M15 Retro 4K Game Console Stick User Manual](#)

MINDKEEP X26UC846E05LN16P8

MINDKEEP M15 Retro 4K Game Console Stick User Manual

Model: X26UC846E05LN16P8

INTRODUCTION

Thank you for purchasing the MINDKEEP M15 Retro 4K Game Console Stick. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure proper functionality and a satisfying gaming experience.

PRODUCT OVERVIEW

The MINDKEEP M15 is a compact game console stick designed for plug-and-play retro gaming. It connects directly to your television via HDMI and comes with wireless controllers for convenient gameplay.

2.4G WIRELESS CONTROLLER GAMEPAD

Support up to 10 kinds of classic simulators to
play classic nostalgic games



Image: The MINDKEEP M15 game console stick and its two accompanying white wireless controllers.

Package Contents:

- MINDKEEP M15 Game Console Stick
- 2 x 2.4G Wireless Controllers
- HDMI Extension Cable
- USB Power Cable
- Wireless Receiver (often integrated or a small dongle)
- User Manual (this document)

SETUP INSTRUCTIONS

Follow these steps to set up your MINDKEEP M15 game console stick:

1. **Connect to TV:** Plug the MINDKEEP M15 console stick directly into an available HDMI port on your television. If

space is limited, use the provided HDMI extension cable.

2. **Connect Power:** Connect the USB power cable to the console stick's power input port. Plug the other end of the USB cable into a USB power adapter (not included) or a USB port on your TV that provides sufficient power.
3. **Insert Wireless Receiver:** If your wireless controllers require a separate USB receiver, plug it into one of the USB ports on the console stick. (Note: Some models may have an integrated receiver.)
4. **Power On Controllers:** Insert 2 AAA batteries (not included) into each wireless controller. Turn on the controllers using their respective power switches. They should automatically pair with the console stick.
5. **Select Input:** Turn on your TV and select the correct HDMI input source using your TV remote control. The console's interface should appear on the screen.

HD 4K

3D

HANDHELD GAME CONSOLE

SUPPORT DOUBLES

BUY NOW

Image: The MINDKEEP M15 console stick connected to a television, with two users holding the wireless gamepads, ready for gameplay.

OPERATING INSTRUCTIONS

Navigating the Menu:

- Use the directional pad (D-pad) or left analog stick on your controller to navigate through the game selection menu.
- Press the 'A' button (or equivalent action button) to select a game or option.
- Press the 'B' button (or equivalent back button) to return to the previous menu.

Playing Games:

- From the main menu, select the desired game category or search for a specific game.
- Highlight the game you wish to play and press 'A' to start.
- Refer to the on-screen prompts or game-specific instructions for controls during gameplay.



Image: Two hands actively using the MINDKEEP M15 wireless controllers while a game is shown on a television in the background.

Exiting Games and Saving Progress:

- To exit a game, typically press the 'START' and 'SELECT' buttons simultaneously for a few seconds. This action should return you to the main menu.
- Some games may have in-game save features. For emulator-based saves (save states), consult the console's

specific menu options, usually accessible via a combination of controller buttons during gameplay.

MAINTENANCE

Cleaning:

- Wipe the console stick and controllers with a soft, dry cloth.
- Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the device.

Storage:

- Store the console stick and controllers in a cool, dry place away from direct sunlight and extreme temperatures.
- Remove batteries from controllers if storing for extended periods to prevent leakage.

SD Card Handling:

- The console uses a TF (Micro SD) card for game storage. Ensure the card is properly inserted into the TF card slot.
- Do not remove the TF card while the console is powered on or actively in use to prevent data corruption.



Image: Detailed views of the MINDKEEP M15 console stick from the top, bottom, and sides, illustrating its physical design and port locations, including the TF card slot.

TROUBLESHOOTING

If you encounter issues with your MINDKEEP M15, refer to the following common solutions:

- **No Signal on TV:**
 - Ensure the console stick is securely plugged into the TV's HDMI port.
 - Verify the TV is set to the correct HDMI input source.
 - Check that the USB power cable is properly connected and the console is receiving power.
 - *Note: This console is designed for 4K TVs. While it may work on other HD TVs, optimal performance and compatibility are with 4K displays. If you do not have a 4K TV, some display issues might occur.*
- **Controllers Not Responding:**
 - Check if the controllers have fresh AAA batteries and are powered on.

- Ensure the wireless receiver (if separate) is firmly plugged into the console's USB port.
 - Try re-pairing the controllers by turning them off and on, or by pressing a sync button if available (refer to controller specific instructions).
- **Games Not Loading or Freezing:**
 - Ensure the TF (Micro SD) card is correctly inserted and not damaged.
 - Restart the console by unplugging and replugging the power cable.
 - Some games may have specific system requirements or compatibility issues.
 - **Difficulty Finding Specific Games:**
 - The console includes a large library of pre-installed games. Use the search function or browse categories to locate titles.
 - Game titles may sometimes be listed under different names or in unexpected categories.

SPECIFICATIONS

Feature	Detail
Model Number	X26UC846E05LN16P8
Output	HDMI (4K compatible)
Controllers	2.4G Wireless Gamepads (2 included)
Storage	TF (Micro SD) Card
Dimensions	6.69 x 4.72 x 2.36 inches
Power Input	USB

WARRANTY AND SUPPORT

The MINDKEEP M15 Retro 4K Game Console Stick comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact MINDKEEP customer service through the retailer where you purchased the product or visit the official MINDKEEP support website.

