

- Manuals.plus /
- › [Elevon](#) /
 - › Elevon Collapsible Foldable Wagon Instruction Manual QD-EL-DDW-BLK

Elevon QD-EL-DDW-BLK

Elevon Collapsible Foldable Wagon Instruction Manual

Model: QD-EL-DDW-BLK

1. PRODUCT OVERVIEW

The Elevon Collapsible Foldable Wagon is a versatile, heavy-duty utility cart designed for various outdoor and indoor activities. It features a large capacity, an extended lower shelf, and all-terrain wheels for easy transport of items.

PRODUCT PARAMETERS

Max Load
Capacity:



Image 1.1: The Elevon Collapsible Foldable Wagon in its fully open state, ready for use.

Key Features:

- **Upgraded Extra Large Capacity:** Includes an extended lower shelf (51 inches) for oversized items and a deep upper storage space (11.8 inches).
- **Durable and Heavy-Duty Construction:** Built with premium anti-rust steel frame, supporting up to 450 lbs. Features 300D Oxford fabric and PVC material for tear resistance and waterproofing.
- **Adjustable Handle:** Smooth handle with flexible angles and two height settings for user comfort and control.
- **Easy to Fold & Transport:** Folds into a compact size, secured with straps and Velcro. Includes a carry-on bag for portability.
- **360-Degree Rotation Wheels:** Equipped with silent, all-terrain swivel wheels for smooth movement. Front wheels include brakes for stability.



Image 1.2: Detailed view of key features: convenient cup holders, 360-degree rotation front wheels with brake, durable fabric, and secure folding mechanisms.

2. SAFETY INSTRUCTIONS

- Do not exceed the maximum load capacity of 450 lbs (204 kg).
- Ensure all folding mechanisms are securely locked before use.
- Always engage the wheel brakes when the wagon is stationary, especially on inclines.
- Distribute weight evenly within the wagon to maintain stability.
- Keep hands and fingers clear of moving parts during folding and unfolding.
- Do not allow children to play in or on the wagon unsupervised.
- Avoid transporting hazardous materials or live animals without proper containment.

3. SETUP AND FOLDING

3.1 Unfolding the Wagon

1. Remove the wagon from its carry-on bag.
2. Place the folded wagon on a flat, stable surface.
3. Gently pull the sides of the wagon outwards until it fully expands.
4. Press down on the center of the wagon's base to ensure it is fully extended and locked into place.
5. Insert the hardboard into the bottom of the wagon for a stable base.
6. Extend the lower shelf if needed by unfolding it and securing it with clips.



Image 3.1: The wagon's frame structure, highlighting its durability.


3.2 Folding the Wagon (5 Steps)

1. **Step 1:** Fold the extended part of the lower board upwards and secure it to the frame with clips.
2. **Step 2:** Take out the hardboard from the bottom of the wagon.
3. **Step 3:** Hold the frame with one hand, then lift the bottom handle upward and squeeze the folded frame inward.
4. **Step 4:** Secure the folded wagon with the provided straps and Velcro.
5. **Step 5:** Finally, put on the outer cover for storage and transport.



Image 3.2: Visual guide for folding the wagon into its compact form.

Compact Folding Design for Easy Carry and Store

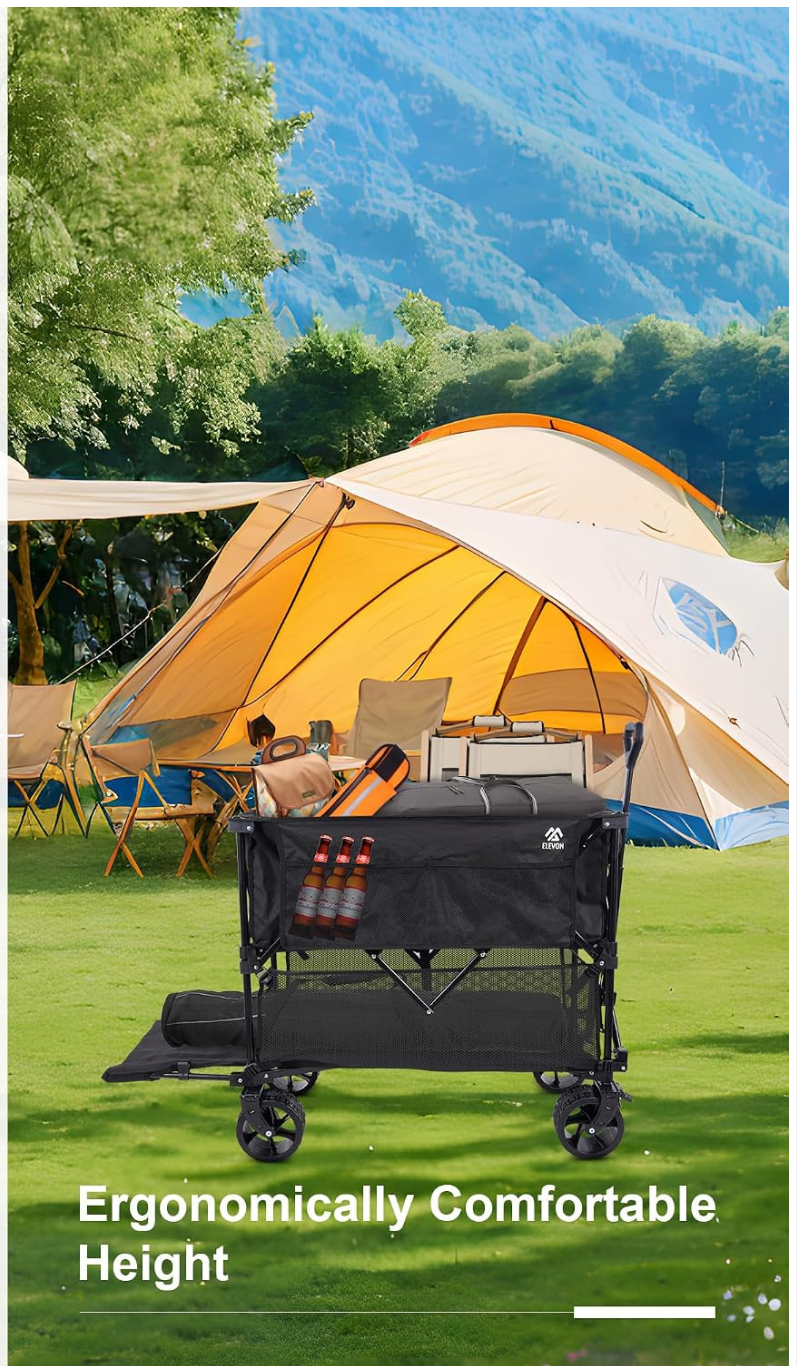

Ergonomically Comfortable Height

Image 3.3: The wagon's compact folded design for easy carrying and storage.

4. OPERATING INSTRUCTIONS

4.1 Using the Adjustable Handle

The wagon features an adjustable handle designed for comfortable pushing and pulling. To adjust the handle height, press the button located on the handle and slide it up or down to your desired position. Release the button to lock the handle securely in place. The handle offers flexible angles for various user heights and preferences.



Adjustable Handle for Easy Pull and Smooth Glide

Flexible Angles for Any Position
Adjustable Height Improves
Comfort for Users

Image 4.1: The adjustable handle mechanism for easy height customization.

4.2 Using the Wheels and Brakes

The wagon is equipped with 360-degree swivel all-terrain wheels, allowing for smooth movement across various surfaces including sand, grass, pavement, and gravel. The front wheels include brakes. To engage a brake, press down on the lever located on the wheel. To release, lift the lever. Always engage the brakes when the wagon is parked to prevent unintended movement.



Image 4.2: The all-terrain wheels are suitable for diverse environments.



Image 4.3: Detail of the wheel brake for securing the wagon.

4.3 Loading and Capacity

The wagon offers a substantial capacity with its main compartment and an extended lower shelf. Utilize the main compartment for general items and the lower shelf for longer or bulkier items such as chairs or tents. The side mesh bag

and two cup holders provide additional storage for smaller items and beverages. Ensure the total weight does not exceed 450 lbs and that items are distributed to maintain balance.



Image 4.4: The wagon's double-decker design allows for efficient loading of various items.

5. MAINTENANCE

- **Cleaning:** Wipe down the fabric with a damp cloth and mild soap. For the frame, use a clean cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the wagon in its folded, compact state in a dry, cool place away from direct sunlight when not in use. Use the provided carry-on bag for protection.
- **Wheel Inspection:** Periodically check the wheels for debris and ensure they rotate freely. Lubricate axles if necessary.
- **Frame Inspection:** Regularly inspect the steel frame for any signs of damage or corrosion.



Image 5.1: Detail of the side mesh bag zipper, which should be kept clean and functional.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Wagon does not fold/unfold smoothly	Mechanism obstructed or not aligned	Ensure no items are blocking the frame. Apply light lubricant to joints if stiff. Follow folding/unfolding steps precisely.
Wheels are stiff or not rotating	Debris in wheel mechanism or lack of lubrication	Clean wheels and axles of any dirt or sand. Apply a silicone-based lubricant to the wheel bearings.
Wagon unstable during transport	Uneven weight distribution or overloaded	Redistribute items evenly. Ensure total weight does not exceed 450 lbs.
Handle does not lock in place	Locking button not fully engaged or mechanism dirty	Press the button firmly. Clean any debris from the handle's locking mechanism.

7. SPECIFICATIONS



Image 7.1: Product dimensions and maximum load capacity.

Feature	Detail
Product Dimensions (Open)	51.18"D x 20.47"W x 43.13"H
Folded Dimensions	13.19"D x 9.65"W x 33.86"H
Brand	Elevon
Model Number	QD-EL-DDW-BLK
Material	Alloy Steel (Frame), 300D Oxford Fabric with PVC coating
Color	Midnight

Feature	Detail
Weight Limit	450 Pounds
Item Weight	30.2 Pounds
Number of Shelves	2 (Main compartment + Lower extended shelf)
Wheel Type	All-Terrain, 360-degree Swivel, Front Wheels with Brakes
Special Features	Adjustable Handle, Built-In Cup Holders, Collapsible, Locking Caster
Assembly Required	No (Quick setup)

8. WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or contact Elevon customer service through their official website. Please have your model number (QD-EL-DDW-BLK) and purchase details available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7W5HR4N>

More documents and user manuals: <https://manuals.plus/>