

[Manuals.plus](#) /

› [Kenmore](#) /

› Kenmore Washer Water Drain Pump 110.26955690 Instruction Manual

Kenmore 110.26955690

Kenmore Washer Water Drain Pump 110.26955690 Instruction Manual

Model: 110.26955690

INTRODUCTION

This manual provides essential instructions for the installation, operation, maintenance, and troubleshooting of the Kenmore Washer Water Drain Pump, model 110.26955690. Please read this manual thoroughly before proceeding with any installation or maintenance to ensure safe and correct usage.

SAFETY INFORMATION

Always disconnect power to the washer before attempting any installation, repair, or maintenance. Failure to do so can result in electric shock or serious injury. Wear appropriate personal protective equipment, such as gloves and eye protection. If you are unsure about any step, consult a qualified technician.

PRODUCT OVERVIEW

The Kenmore Washer Water Drain Pump 110.26955690 is a replacement component designed to efficiently remove water from your washing machine during the drain cycle. It is crucial for the proper functioning of your appliance.

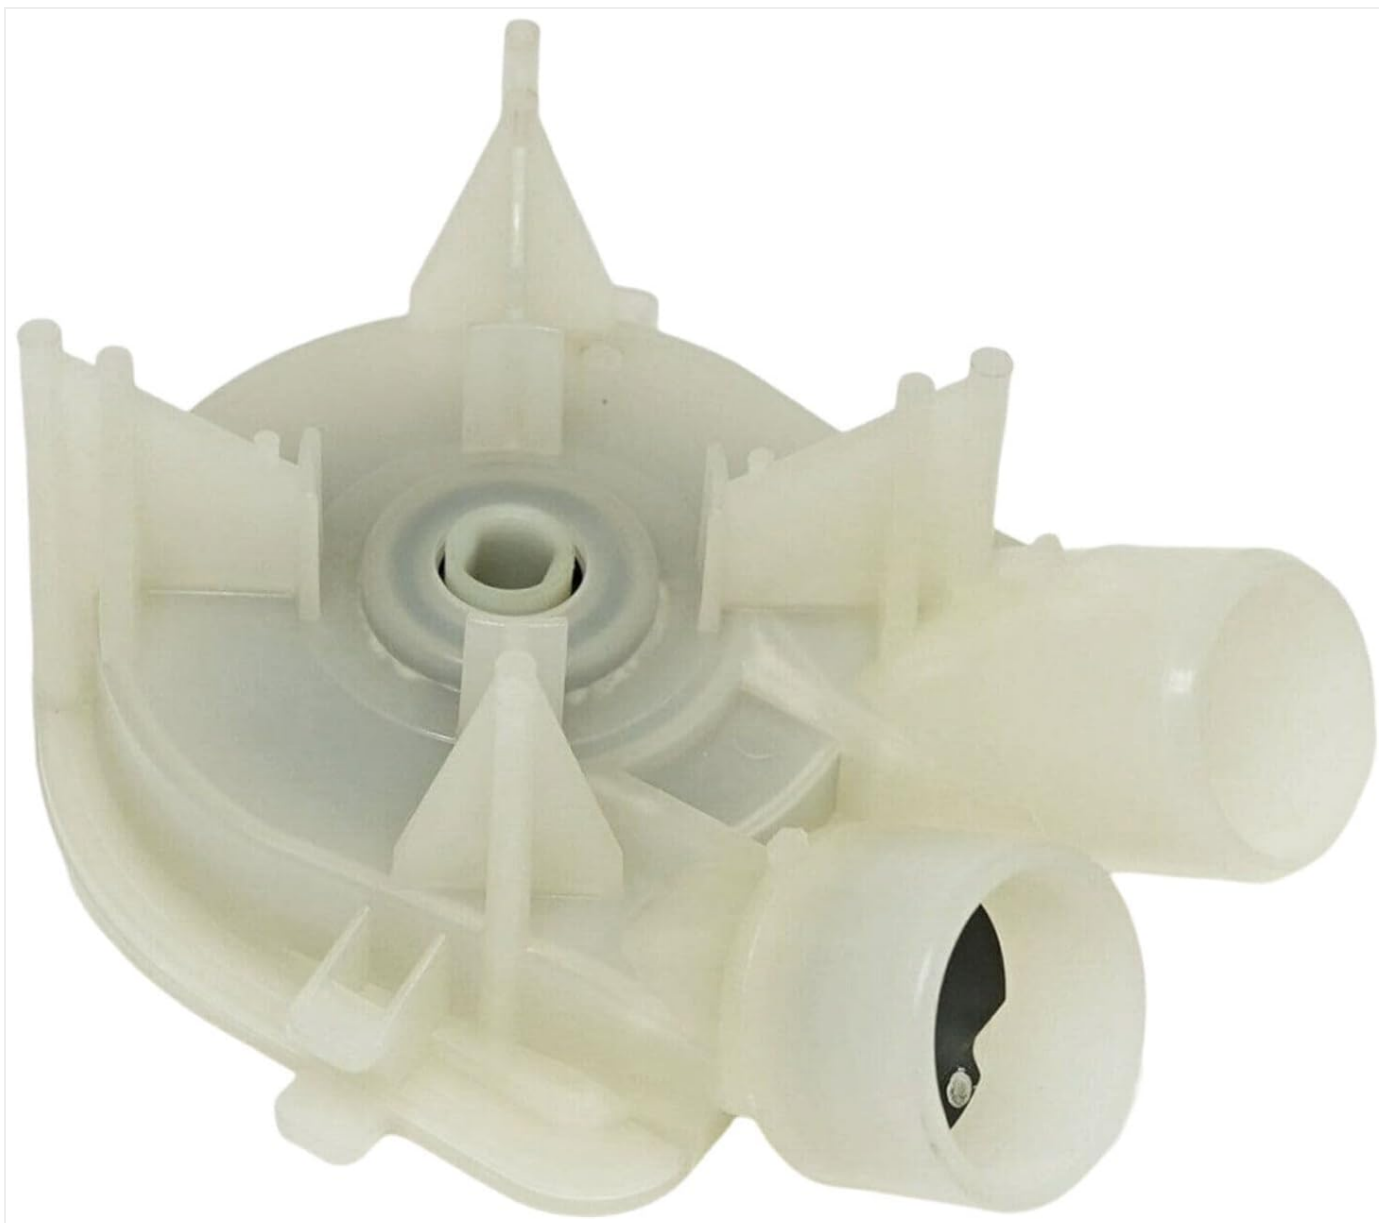


Image 1: Overview of the Kenmore Washer Water Drain Pump. This image displays the pump unit, showing its main body, inlet, and outlet ports, and the impeller housing. The pump is made of a translucent white plastic material.

SETUP AND INSTALLATION

This section outlines the general steps for replacing a washer drain pump. Specific steps may vary depending on your washer model. Always refer to your washer's service manual for detailed instructions.

1. **Disconnect Power:** Unplug the washer from the electrical outlet and turn off the water supply valves.
2. **Access the Pump:** Depending on your washer model, you may need to remove the front panel, back panel, or tilt the washer to access the drain pump.
3. **Drain Residual Water:** Place towels and a shallow pan under the pump area to catch any remaining water in the hoses.
4. **Remove Hoses and Wiring:** Disconnect the inlet and outlet hoses from the old pump. Note their orientation. Disconnect any electrical wiring connected to the pump.
5. **Remove Old Pump:** Unmount the old drain pump from its housing or brackets.
6. **Install New Pump:** Mount the new Kenmore Washer Water Drain Pump 110.26955690 in the same position as the old one.
7. **Reconnect Hoses and Wiring:** Attach the inlet and outlet hoses securely to the new pump. Reconnect the

electrical wiring. Ensure all connections are tight to prevent leaks and ensure proper electrical contact.

- 8. **Reassemble Washer:** Reattach any panels or components that were removed.
- 9. **Test Operation:** Restore power and water supply. Run a short drain cycle to check for leaks and proper pump function.

OPERATING INSTRUCTIONS

The drain pump operates automatically as part of the washer's cycle. No direct user operation is required for the pump itself. Ensure the washer is loaded correctly and the drain hose is not kinked or obstructed to allow the pump to function effectively.

MAINTENANCE

Regular maintenance of the drain pump is generally not required. However, if you experience draining issues, inspect the pump and associated hoses for blockages.

- **Check for Obstructions:** Periodically inspect the drain pump filter (if present on your washer model) and the pump's impeller for lint, small objects, or debris that could impede water flow.
- **Hose Inspection:** Ensure drain hoses are free of kinks, clogs, or damage.

TROUBLESHOOTING

If your washer is not draining properly, consider the following troubleshooting steps:

- **No Drain/Slow Drain:**
 - Check for kinks or blockages in the drain hose.
 - Inspect the drain pump filter for debris.
 - Verify that the pump's impeller is not obstructed or damaged.
 - Ensure the washer lid/door switch is functioning correctly, as some washers will not drain if the lid is open.
- **Unusual Noise During Drain:**
 - A foreign object may be lodged in the pump impeller. Disconnect power and inspect the pump.
 - The pump motor may be failing.
- **Leaking:**
 - Check hose connections to the pump for tightness.
 - Inspect hoses and pump housing for cracks or damage.
- If these steps do not resolve the issue, the pump may need replacement or professional service may be required.

SPECIFICATIONS

Model Number	110.26955690
Part Type	Washer Water Drain Pump
Compatible Brand	Kenmore
Manufacturer	20 SECOND SOAP

UPC	689035518959
-----	--------------

WARRANTY AND SUPPORT

For warranty information or technical support regarding this replacement part, please refer to the documentation provided by the manufacturer, 20 SECOND SOAP, or contact your retailer. Protection plans may be available for purchase separately.

- **Protection Plans:** Additional protection plans may be available for purchase. Examples include 3-Year and 4-Year Protection Plans.
- **Return Policy:** Typically, a 30-day return policy applies. Please check with your seller for specific details.

© 2024 Kenmore Washer Parts. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D7W5XDWJ>

More documents and user manuals: <https://manuals.plus/>