

[Manuals.plus](#) /

› [Gueray](#) /

› Gueray Retro CD Player with Bluetooth 5.0 and Built-in Speakers (Model Y-CD-146)

Gueray Y-CD-146

Gueray Retro CD Player Instruction Manual

Model: Y-CD-146

Brand: Gueray

1. INTRODUCTION

Thank you for purchasing the Gueray Retro CD Player, Model Y-CD-146. This versatile audio device combines classic aesthetics with modern functionality, offering multiple playback options including CD, Bluetooth 5.0 (transmit and receive), FM radio, USB, AUX, and SPDIF. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting to ensure optimal performance and enjoyment of your new CD player.

多機能CDプレーヤー



Bluetooth



ステレオスピーカー



AUX 機能



S/PDIF 機能



FM ラジオ



USB モード



3.5mm イヤホンジャック



睡眠モード



A-B リピート



遠隔操作

Image 1.1: The Gueray Retro CD Player, showcasing its vintage design and compact form factor.

2. PRODUCT FEATURES

- **Bluetooth 5.0 Connectivity:** Supports both Bluetooth transmission (sending audio to Bluetooth headphones/speakers) and reception (receiving audio from smartphones/PCs).
- **Multi-functional Playback:** Enjoy music from various sources including CDs (CD/CD-R/CD-RM/CD-G), MP3, WMA, WAV files via USB, FM radio, AUX input, and SPDIF output.
- **Built-in Stereo Speakers:** Delivers clear, high-quality sound without distortion, even at low or high volumes.
- **3.5mm Headphone Jack:** For private listening with wired headphones.
- **Dustproof Design:** Features a transparent cover to protect the laser and CD from dust.
- **Remote Control:** Conveniently manage playback, mode switching, FM radio search, Bluetooth transmission, and track selection from a distance (up to 6 meters).

レトロな多機能 CDプレーヤー



Bluetooth



ステレオスピーカー



AUX 機能



FM ラジオ



遠隔操作



3.5mm イヤホンジャック



S/PDIF 機能



USB モード



Image 2.1: Overview of the multi-functional capabilities of the CD player, including Bluetooth, built-in speakers, AUX, SPDIF, FM radio, USB, headphone jack, sleep mode, A-B repeat, and remote control.

3. PACKAGE CONTENTS

Please check that all items are present in the package:

- Gueray Retro CD Player (Model Y-CD-146)
- AC Adapter
- Remote Control
- Instruction Manual (Japanese)

4. SAFETY INFORMATION

- Do not expose the device to rain or moisture to prevent fire or electric shock.
- Do not open the casing. Refer all servicing to qualified personnel.
- Ensure the power adapter is compatible with your local power supply.
- Keep the device away from direct sunlight, heat sources, and excessive dust.
- Avoid placing heavy objects on the player.
- Clean the device with a soft, dry cloth. Do not use liquid cleaners.

5. SETUP

5.1 Connecting Power

1. Connect the AC adapter to the DC 5V-2A power port on the back of the CD player.
2. Plug the AC adapter into a wall outlet.
3. Press the Power ON/OFF button to turn on the device.

5.2 Remote Control Battery Installation

Insert two AAA batteries (not included) into the remote control, ensuring correct polarity.



Image 5.1: Detailed diagram of the player's components, including the power port, USB port, S/PDIF fiber, headphone jack, AUX port, and control buttons.

6. OPERATING INSTRUCTIONS

6.1 Basic CD Playback

1. Open the transparent dust cover.
2. Place a CD (CD/CD-R/CD-RM/CD-G) onto the spindle, ensuring it is seated correctly.
3. Close the dust cover.
4. Press the Mode button (or rotate the knob) to select "CD Mode".
5. The CD will begin playing automatically. Use the Play/Pause, Next Track, and Previous Track buttons to control playback.
6. Adjust the volume by rotating the Mode knob.

6.2 Bluetooth Mode (Receive)

This mode allows the CD player to receive audio from a Bluetooth-enabled device (e.g., smartphone, tablet).

1. Press the Mode button until "Bluetooth Mode" is announced or indicated. The LED indicator will flash.
2. On your external device, enable Bluetooth and search for available devices.
3. Select "Gueray CD Player" from the list to pair. Once connected, the LED indicator will stop flashing.
4. Play audio on your external device. The sound will be output through the CD player's speakers.

6.3 Bluetooth Mode (Transmit)

This mode allows the CD player to transmit audio (from CD, FM, USB, AUX) to Bluetooth headphones or speakers.

1. Ensure your Bluetooth headphones/speakers are in pairing mode.
2. Select the desired audio source on the CD player (CD, FM, USB, AUX).
3. Press and hold the Bluetooth Transmit button (usually indicated by a Bluetooth icon) on the CD player. The LED indicator will flash rapidly.
4. The CD player will automatically search for and connect to nearby Bluetooth receiving devices. Once connected, the LED indicator will stop flashing.
5. Audio from the selected source will now play through your connected Bluetooth headphones/speakers.


Bluetooth5.0受信 & 送信

いつでも音楽を楽しめます



受信モード

スマホ、PCなど

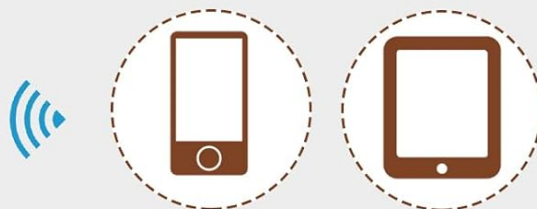

送信モード

ワイヤレスイヤホン、スピーカーなど



Image 6.1: Bluetooth 5.0 functionality, showing both receiving audio from devices and transmitting to wireless headphones or speakers.

6.4 FM Radio

1. Press the Mode button until "FM Radio Mode" is selected.
2. The FM radio frequency range is 76.0MHz to 108.0MHz.
3. Use the Next Track / Previous Track buttons to manually tune or long-press them to auto-scan for stations.
4. The remote control can also be used for FM station search and playback.



Image 6.2: The FM radio function, indicating the supported frequency range.

6.5 USB Playback

1. Insert a USB flash drive (FAT16/FAT32 format only) into the USB port.
2. Press the Mode button until "USB Mode" is selected.
3. The player will automatically detect and play compatible audio files (MP3/WMA only).
4. Use the Play/Pause, Next Track, and Previous Track buttons to control playback.

Note:

- Only FAT16/FAT32 formatted USB drives are supported. NTFS is not supported.
- Only MP3/WMA audio files are supported in USB mode.

6.6 AUX Input & SPDIF Output

The player supports AUX input for connecting external audio devices and SPDIF output for digital audio transmission.

1. **AUX Input:** Connect an external audio device (e.g., smartphone, MP3 player) to the AUX port using a 3.5mm audio cable. Select "AUX Mode" using the Mode button.
2. **SPDIF Output:** Connect the SPDIF port to a compatible audio receiver or amplifier using an optical cable for high-quality digital audio output.

AUX&SPDIF機能付き

3.5mmAUXケーブルで、運転中も高音質の音楽を楽しめます



光ファイバ伝送で、音質の劣化を最小化を抑えます



Image 6.3: Examples of AUX and SPDIF functionality, demonstrating connectivity in a car and to a home audio system.

6.7 Playback Modes

The player supports various playback modes:

- **Normal Playback:** Plays tracks in sequence.
- **Single Repeat:** Repeats the current track.
- **All Repeat:** Repeats all tracks.
- **A-B Repeat:** Repeats a specific section of a track.
- **Random Playback:** Plays tracks in a random order.

These modes can typically be selected using the remote control or dedicated buttons on the unit.

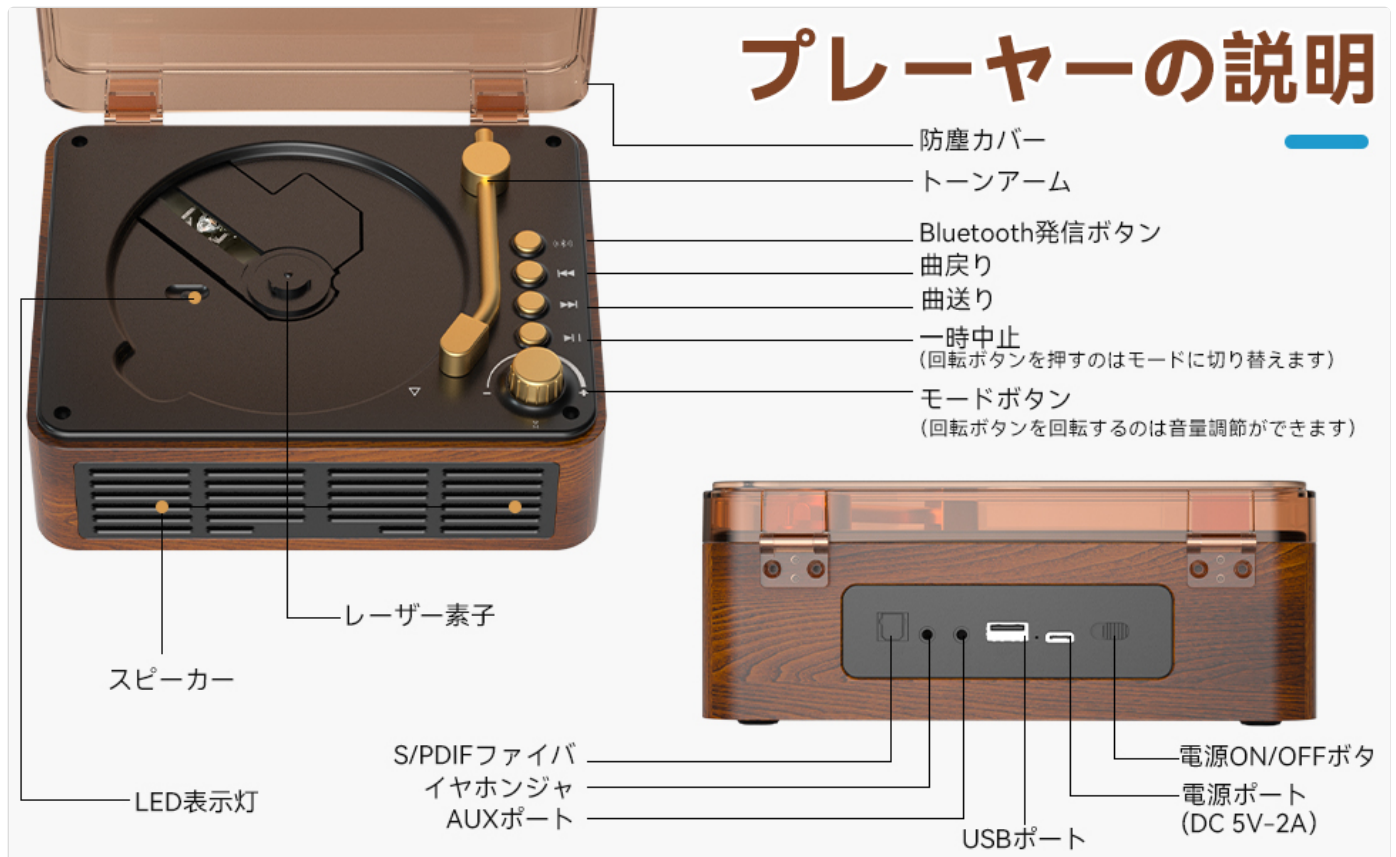


Image 6.4: Supported audio formats and various playback modes available on the device.

7. MAINTENANCE

7.1 Cleaning the Unit

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents as they may damage the finish.
- For the transparent dust cover, use a slightly damp cloth if necessary, then dry immediately.

7.2 CD Care

- Handle CDs by their edges to avoid fingerprints on the playing surface.
- Clean CDs with a soft, lint-free cloth, wiping from the center outwards.
- Store CDs in their cases to prevent scratches and dust accumulation.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working	Ensure AC adapter is securely connected and plugged into a working outlet.
CD not playing / Skipping	CD is dirty or scratched; CD is inserted incorrectly; Player is in the wrong mode	Clean or replace CD; Reinsert CD correctly; Select "CD Mode".
No sound	Volume is too low; Mute function is active; Wrong mode selected; External device not connected properly (AUX/SPDIF)	Increase volume; Deactivate mute; Select correct mode; Check cable connections.
Bluetooth pairing failed	Device is too far; Player is not in pairing mode; External device Bluetooth is off	Ensure devices are within range (approx. 10m); Put player in Bluetooth pairing mode; Enable Bluetooth on external device.
USB not recognized	USB format not supported (NTFS); File format not supported (not MP3/WMA)	Use FAT16/FAT32 USB drive; Ensure files are MP3/WMA format.
Remote control not working	Batteries are dead or inserted incorrectly; Obstruction between remote and player	Replace batteries, check polarity; Remove obstructions; Ensure remote is within 6m range.

9. SPECIFICATIONS

Brand	Gueray
Model Name	CD Player (Y-CD-146)
Color	Brown
Connectivity Technology	AUX, Bluetooth, USB
Special Features	Bluetooth 5.0 (Transmit/Receive), CD-R/CD-RM/CD-G/MP3/WMA/WAV support, FM Radio, USB Playback, AUX Input, SPDIF Output, Dustproof, Power cord powered
Number of Discs	1
Supported Audio Formats	CD-G, CD-R, CD-RM, MP3, WAV, WMA
Connector Type	3.5mm Jack, Micro USB
Media Format Type	Audio CD
Compatible Devices	Smartphones, Tablets, Wireless Earphones/Bluetooth Earphones, Wireless Speakers/Bluetooth Speakers, External Audio Devices

Headphone Jack	3.5mm Jack
Manufacturer Model Number	JP146 (G146FT001)
Country of Origin	China

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This Gueray CD Player (Model Y-CD-146) comes with a **1-year manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accident, unauthorized modification, or external causes.

10.2 Customer Support

For technical assistance, warranty claims, or any questions regarding your Gueray Retro CD Player, please contact our customer support team. Refer to the contact information provided on the product packaging or the official Gueray website. Please have your model number (Y-CD-146) and proof of purchase ready when contacting support.

© 2024 Gueray. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question