

Razer Wolverine V3 Tournament Edition

Razer Wolverine V3 Tournament Edition Wired Gaming Controller

User Manual

INTRODUCTION

The Razer Wolverine V3 Tournament Edition is a high-performance wired gaming controller designed for competitive play on Xbox Series X|S and PC. It features advanced technologies such as Razer Mecha-Tactile Action Buttons, Razer HyperTrigger, and Hall Effect thumbsticks to provide precision, speed, and durability. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your controller.

SETUP

Follow these steps to connect and prepare your Razer Wolverine V3 Tournament Edition controller for use:

1. **Unpack the Controller:** Carefully remove the controller and its USB-C to USB-A cable from the packaging.
2. **Connect to Console/PC:** Plug the USB-C end of the cable into the port on the top of the controller. Connect the USB-A end of the cable to an available USB port on your Xbox Series X|S console or PC.
3. **Power On:** The controller will automatically power on and connect once plugged in. For Xbox, the Xbox button will illuminate. For PC, Windows will typically install necessary drivers automatically.
4. **Install Razer Controller App (PC/Xbox):** For advanced customization, download and install the Razer Controller app from the Microsoft Store on your Xbox or PC. This app allows you to remap buttons, adjust sensitivity, and customize lighting effects.



Figure 1: Front view of the Razer Wolverine V3 Tournament Edition controller, showing the Xbox button, D-pad, thumbsticks, and action buttons.



Figure 2: Side view of the controller, highlighting the USB-C port and the connected cable.

OPERATING THE CONTROLLER

The Razer Wolverine V3 Tournament Edition offers a range of features designed for competitive gaming:

- **Razer Mecha-Tactile Action Buttons:** Experience ultra-fast actuation with a satisfying tactile click, providing clear feedback for every press.
- **Razer HyperTrigger:** Enjoy instant response with mouse-click triggers, allowing for rapid-fire actions in games.
- **Hall Effect Thumbsticks:** These thumbsticks utilize magnetic sensors for anti-drift accuracy and enhanced durability, ensuring precise control over time. Sensitivity can be customized via the Razer Controller app.
- **Multi-Function Paddles and Bumpers:** The controller features four rear multi-function paddles and two remappable bumpers, providing additional input options for complex commands. These can be configured using the Razer Controller app.
- **8-Way Floating D-Pad:** The D-pad offers precise and tactile input for directional commands, crucial for fighting games and platformers.
- **Customization via Razer Controller App:** Utilize the dedicated app on Xbox or PC to personalize button mappings, adjust trigger sensitivity, fine-tune thumbstick dead zones, and customize Chroma RGB lighting effects to match your setup.



Figure 3: Rear view of the controller, illustrating the four programmable multi-function paddles.



Figure 4: Top view of the controller, displaying the triggers (LT, RT) and shoulder buttons (LB, RB).

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your controller:

- **Cleaning:** Use a soft, dry cloth to wipe down the controller regularly. For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution. Avoid harsh chemicals or abrasive materials.
- **Cable Care:** Always handle the USB cable by the connector, not the cable itself, when plugging or unplugging. Avoid sharp bends or kinks in the cable to prevent internal damage. Store the cable neatly when not in use.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and excessive dust.

TROUBLESHOOTING

If you encounter issues with your Razer Wolverine V3 Tournament Edition controller, refer to the following common solutions:

- **Controller Not Responding:**
 - Ensure the USB cable is securely connected to both the controller and your Xbox/PC.

- Try connecting the controller to a different USB port on your device.
- Restart your Xbox console or PC.

• **Buttons or Thumbsticks Unresponsive/Drifting:**

- Clean around the affected buttons or thumbsticks to remove any debris.
- Open the Razer Controller app and check for any firmware updates for your controller.
- Within the Razer Controller app, calibrate the thumbsticks and adjust dead zones if necessary.

• **Razer Controller App Not Detecting Controller:**

- Ensure the controller is properly connected to your PC or Xbox.
- Restart the Razer Controller app.
- Check for updates to the Razer Controller app in the Microsoft Store.

• **Intermittent Disconnections:**

- Ensure the USB cable is not damaged and is firmly connected.
- Avoid placing the cable in positions where it might be pulled or strained.
- Try a different USB port.

If these steps do not resolve your issue, please refer to the Support section for further assistance.

SPECIFICATIONS

Brand	Razer
Model Name	Wolverine V3 Tournament Edition
Compatible Devices	PC, Xbox Series S, Xbox Series X
Controller Type	Gamepad
Connectivity Technology	USB (Wired)
Color	Black
Special Features	Wired connection, Comfortable design
Number of Buttons	12
Item Weight	400 grams
Item Dimensions (L x W x H)	15.7 x 10.5 x 6.7 cm
Power Source	Corded Electric

WARRANTY INFORMATION

The Razer Wolverine V3 Tournament Edition controller comes with a manufacturer's warranty. Please refer to the official Razer website or your purchase documentation for the most current and detailed warranty terms and conditions. Typically, Razer offers a one-year limited warranty from the date of purchase, covering defects in materials and workmanship under normal use.

To claim warranty service, you may be required to provide proof of purchase and register your product. Keep your receipt

or invoice in a safe place.

SUPPORT

For additional support, technical assistance, or to access the latest drivers and firmware updates, please visit the official Razer Support website:

support.razer.com

You can also contact Razer Customer Service directly through their website for personalized assistance with any issues not covered in this manual.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question