

[Manuals.plus](#) /

› [COBIZI](#) /

› COBIZI 10x30 Pop Up Canopy Tent (Model 122\_B) User Manual

## COBIZI 122\_B

# COBIZI 10x30 Pop Up Canopy Tent User Manual

Model: 122\_B

## INTRODUCTION

---

Thank you for choosing the COBIZI 10x30 Pop Up Canopy Tent. This manual provides essential instructions for the safe and efficient assembly, operation, and maintenance of your canopy tent. Please read this manual thoroughly before initial use and retain it for future reference.

## Product Overview



The COBIZI 10x30 Pop Up Canopy Tent providing shelter for various outdoor events, including market stalls and wedding receptions.

## Safety Information

### WARNING:

Do not use this canopy tent in severe weather conditions such as strong winds or storms. Ensure the canopy is properly anchored using provided stakes, ropes, and sandbags to prevent it from being blown away. Keep away from fire and heat sources. Do not leave unattended for extended periods. When adjusting height, be cautious of pinch points. Inspect for damage before each use. This product is not intended for permanent installation. Follow all assembly instructions carefully to ensure proper setup and stability.

## Package Contents

Before assembly, verify that all components listed below are present:

- **1x Heavy-Duty Canopy Frame:** Constructed from alloy steel.
- **1x 10x30 ft Canopy Top Tarpaulin:** Made from 210D Oxford fabric with PU coating.

- **8x Removable Oxford Cloth Sidewalls:** Includes 5 panels with transparent windows and 3 panels with zipper doors.
- **4x Sandbags:** For additional stability.
- **1x Roller Bag:** Made from durable 1500D Oxford fabric for easy transport and storage.
- **12x Tent Stakes:** For anchoring the canopy to the ground.
- **4x Ropes:** For securing the canopy.
- **1x User Manual:** This instruction guide.

## Visual Guide to Package Contents



Image showing all components included in the COBIZI 10x30 Pop Up Canopy Tent package, including the frame, canopy top, sidewalls, sandbags, roller bag, stakes, ropes, and user manual.

## SETUP INSTRUCTIONS

The COBIZI 10x30 Pop Up Canopy Tent is designed for quick and easy setup. It is recommended that 3-4 people assist with the installation.

1. **Step 1: Unfold the Steel Frame.** With at least two people, gently pull the legs of the folded frame outwards until

it begins to expand. Do not force the frame.

2. **Step 2: Attach the Canopy Top.** Place the canopy top fabric over the partially expanded frame. Secure the canopy top to the frame using the Velcro strips located on the underside of the fabric. Ensure all corners are properly aligned.
3. **Step 3: Fully Extend and Adjust Height.** Continue to pull the frame outwards until it is fully extended. Press the red thumb buttons on each leg to adjust the height to your desired position (74, 78, or 82 inches). Ensure all legs are locked into place at the same height for stability.
4. **Step 4: Install Sidewalls (Optional).** Attach the removable sidewalls to the canopy frame using the Velcro strips. The sidewalls can be configured as needed, with transparent window panels and zipper door panels.
5. **Step 5: Secure the Canopy.** Use the provided ropes and tent stakes to anchor the canopy firmly to the ground. Fill the sandbags with sand and attach them to the canopy legs for additional stability, especially in windy conditions.

## Visual Setup Guide

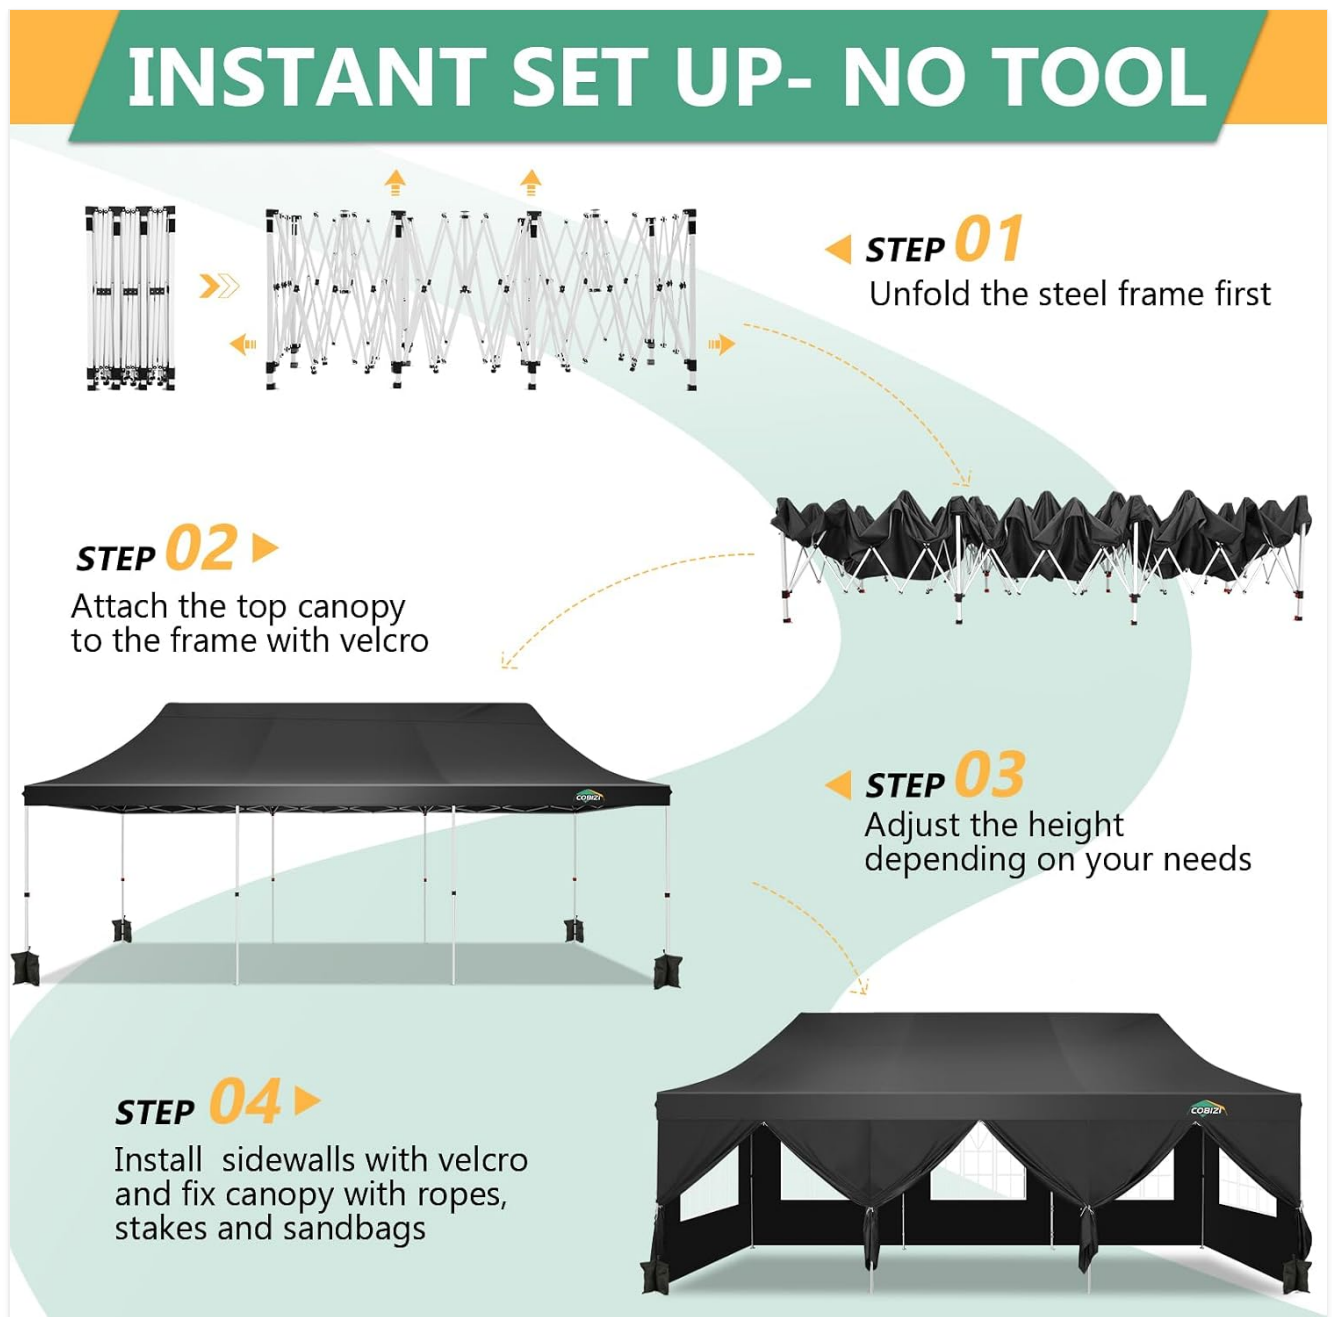


Diagram illustrating the four main steps for setting up the COBIZI pop-up canopy tent: unfolding the frame, attaching the canopy top, adjusting height, and installing sidewalls and anchors.

## Assembly Process Video

Your browser does not support the video tag.

This video demonstrates the assembly process for a COBIZI pop-up canopy, showing how to expand the frame, attach the canopy top, and secure the structure. Note: The video shows a 10x20 model, but the assembly principles are similar for the 10x30 model.

## OPERATING INSTRUCTIONS

---

Your COBIZI canopy tent offers versatile usage options:

- **Height Adjustment:** The canopy features three adjustable height positions (74, 78, and 82 inches). To adjust, press the red thumb buttons on each leg and slide the leg to the desired height. Ensure all legs are securely locked at the same level.
- **Sidewall Configuration:** The 8 removable sidewalls can be attached or removed based on weather conditions or privacy needs. Use all sidewalls for maximum protection, or remove some for an open-air setup. The zipper doors allow for easy entry and exit.
- **Weather Protection:** The 210D Oxford fabric with PU coating provides UPF 50+ UV protection and is 100% waterproof. The sidewalls, when installed, help block wind and snow.

## Adjustable Height Positions

# 3 HEIGHT POSITIONS



Illustration detailing the three adjustable height positions of the canopy tent, ranging from 74 to 82 inches, along with overall dimensions and packed size.

## Removable Sidewalls Feature

# DIFFERENT COLORS OF 10 × 30 FT



Image highlighting the design of the removable sidewalls, including transparent PVC windows, adjustable heights, waterproof material, rollup door with zipper, and the roller bag for transport.

## Canopy Configuration without Sidewalls Video

Your browser does not support the video tag.

This video demonstrates the COBIZI pop-up canopy tent set up without sidewalls, showcasing an open configuration suitable for various outdoor settings. Note: The video shows a 10x20 model, but the configuration principles are similar for the 10x30 model.

## MAINTENANCE

Proper maintenance will extend the lifespan of your COBIZI canopy tent:

- **Cleaning:** Clean the canopy fabric and sidewalls with mild soap and water. Do not use harsh detergents or abrasive cleaners. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Wipe down the steel frame with a damp cloth to remove dirt and debris. Ensure the frame is dry before folding and storing to prevent rust.
- **Storage:** When not in use, disassemble the canopy and store all components in the provided roller bag in a cool, dry place, away from direct sunlight and extreme temperatures.

- **Inspection:** Regularly inspect the fabric for tears or damage, and the frame for bent or broken parts. Address any issues promptly to maintain the canopy's integrity.

## TROUBLESHOOTING

| Problem                                       | Possible Cause                                          | Solution                                                                                                                                                       |
|-----------------------------------------------|---------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Canopy is unstable or sways.                  | Insufficient anchoring; uneven ground; legs not locked. | Ensure all stakes, ropes, and sandbags are properly utilized. Set up on level ground. Verify all height adjustment pins are securely locked.                   |
| Water accumulates on the canopy top.          | Canopy not fully taut; improper height adjustment.      | Ensure the canopy top is stretched tightly over the frame. Adjust the height to ensure proper tension and water runoff. Do not leave unattended in heavy rain. |
| Difficulty expanding or collapsing the frame. | Frame joints are stiff; debris in mechanism.            | Apply a silicone-based lubricant to moving parts if necessary. Clear any debris from the joints. Ensure multiple people assist with expansion/collapse.        |
| Sidewalls do not attach securely.             | Velcro strips misaligned or dirty.                      | Clean Velcro strips. Ensure sidewalls are aligned correctly with the frame poles before attaching.                                                             |

## SPECIFICATIONS

| Feature                | Detail                                            |
|------------------------|---------------------------------------------------|
| Brand                  | COBIZI                                            |
| Model Number           | 122_B                                             |
| Dimensions (L x W x H) | 354.33" x 118.11" x 124" (10x30 ft)               |
| Frame Material         | Alloy Steel (Powder-coated)                       |
| Canopy Fabric          | 210D Oxford fabric with Polyester (PU) coating    |
| UV Protection          | UPF 50+ (Blocks 99% of harmful UV rays)           |
| Water Resistance Level | Waterproof                                        |
| Number of Sidewalls    | 8 (5 window, 3 zipper door)                       |
| Adjustable Heights     | 3 positions (74", 78", 82" / 188cm, 198cm, 208cm) |
| Coverage Area          | 300 square feet                                   |
| Item Weight            | 119.5 pounds (54.2 kg)                            |
| Storage Bag Material   | 1500D Oxford fabric                               |
| Closure Type           | Hook & Loop, Zipper                               |

## WARRANTY AND SUPPORT

COBIZI offers a 1-year after-sales protection for your peace of mind. If you have any questions or concerns regarding your 10x30 Pop Up Canopy Tent, please do not hesitate to contact our customer service team.

**Contact Information:**

- For support, please refer to the contact details provided with your purchase or visit the official COBIZI store on Amazon: [COBIZI Store](#)
- Our professional service team aims to reply within 24 hours to assist with any inquiries.

**ASK A QUESTION ABOUT THIS MANUAL**

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question