

## SMOTURE VC80

# SMOTURE VC80 Cordless Vacuum Cleaner User Manual

Model: VC80

[Safety](#)

[Overview](#)

[Setup](#)

[Operation](#)

[Maintenance](#)

[Troubleshooting](#)

[Specifications](#)

[Warranty](#)

## 1. IMPORTANT SAFETY INSTRUCTIONS

---

Please read all instructions carefully before using the SMOTURE VC80 Cordless Vacuum Cleaner. Retain this manual for future reference.

- This appliance is for household use only. Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum cleaner. Close supervision is necessary when used near children.
- Do not pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust cup and/or filters in place.
- Turn off the appliance before connecting or disconnecting the motorized brush, extension wand, or other accessories.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not handle the charger or appliance with wet hands.
- If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.

## 2. PRODUCT OVERVIEW

---

The SMOTURE VC80 is a powerful and versatile cordless vacuum cleaner designed for efficient cleaning of various surfaces.



**Figure 2.1:** Main components of the SMOTURE VC80 Cordless Vacuum Cleaner, including the motor unit, extension wand, floor brush, and various accessories.

### **Package Contents:**

- Main Motor Unit with Dustbin
- Removable Battery Pack
- Extension Wand
- Motorized Floor Brush with LED Lights
- Crevice Tool
- 2-in-1 Brush Tool
- Wall Mount Bracket
- Power Adapter/Charger
- HEPA Filter (pre-installed)
- User Manual

## 3. SETUP AND ASSEMBLY

---

### 3.1 Charging the Battery

Before first use, fully charge the battery. The removable battery charges easily in approximately 4 hours, providing a runtime of 15 to 55 minutes depending on the power mode.

1. Connect the power adapter to the charging port on the battery or the main motor unit.
2. Plug the adapter into a wall outlet.
3. The LCD screen will indicate charging status. The battery is fully charged when the indicator shows full.

# All-in-One-Farb-Touchscreen



Einstellung der Saugleistung



Batterie-Anzeige



Erinnerung an Verstopfung



Reinigung Alerts



Figure 3.1: The intelligent LCD touchscreen displays real-time battery status during charging and operation.

## 3.2 Assembling the Vacuum Cleaner

Assemble the main components of your SMOTURE VC80 for use.

1. Insert the extension wand into the main motor unit until it clicks securely into place.
2. Attach the motorized floor brush to the other end of the extension wand until it clicks.
3. Alternatively, attach desired accessories (crevice tool, 2-in-1 brush) directly to the main motor unit for handheld cleaning.



Figure 3.2: The SMOTURE VC80 assembled for upright cleaning, showing the motor unit, extension wand, and floor brush.

### 3.3 Wall Mount Installation

For convenient storage, you can install the provided wall mount bracket.

1. Choose a suitable location near a power outlet, ensuring it is out of reach of children.
2. Mark the drilling points using the bracket as a template.
3. Drill holes and insert wall plugs (if necessary).
4. Secure the wall mount bracket to the wall using screws.
5. Hang the vacuum cleaner on the bracket for storage and charging.



## Abnehmbarer Akku



**4** Stunden  
Ladezeit



**55** mins  
Laufzeit

Figure 3.3: The wall mount bracket for convenient storage and charging of the vacuum cleaner.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Powering On/Off

Press the power button on the main motor unit to turn the vacuum cleaner on or off.

### 4.2 Suction Modes

The SMOTURE VC80 offers three suction modes (MIN, MED, MAX) and an intelligent automatic mode to adapt to different cleaning needs.

- **MIN Mode:** For light cleaning and extended battery life.
- **MED Mode:** Balanced power for everyday cleaning.
- **MAX Mode:** Provides maximum suction power for stubborn dirt and deep cleaning.
- **Automatic Mode:** The vacuum cleaner intelligently detects the type of floor and dirt level, automatically adjusting suction power up to 40,000 Pa. This mode is effective on both hard floors and carpets, increasing power on carpets for deeper cleaning without manual adjustments.

# Intelligenter Automatikmodus

Der Staubsauger kann selbst beurteilen, ob er die Saugleistung erhöhen muss



Figure 4.1: Illustration of the intelligent automatic mode, showing how the vacuum adjusts suction power (Min, Mid, Max) based on detected floor conditions.



Figure 4.2: The SMOTURE VC80 in action, demonstrating its powerful 450W motor and 40KPA suction on a carpeted surface.

### 4.3 Smart LCD Touchscreen

The intelligent LCD touchscreen provides real-time information about your vacuum cleaner's status.

- **Battery Status:** Displays the remaining battery charge.
- **Suction Mode:** Shows the current operating mode (MIN, MED, MAX, AUTO).
- **Clog Reminders:** Alerts you if there is a blockage in the vacuum path.

- **Cleaning Alerts:** Notifies you when maintenance, such as filter cleaning, is required.

## All-in-One-Farb-Touchscreen



Einstellung der Saugleistung



Batterie-Anzeige



Erinnerung an Verstopfung



Reinigung Alerts



**Figure 4.3:** A close-up of the all-in-one color touchscreen, showing indicators for suction power adjustment, battery display, clog reminders, and cleaning alerts.

### 4.4 LED Floor Brush

The integrated LED lights on the motorized floor brush illuminate dark areas, helping you spot hidden dust and debris for a more thorough clean.

### 4.5 Self-Standing Design

The VC80 features a self-standing design, allowing you to conveniently park the vacuum upright anywhere without needing to lean it against a wall or lay it down. This enhances cleaning efficiency and convenience.

## Freistehend Design

Der Staubsauger lässt sich einfach ohne Unterstützung aufstellen und kann überall aufrecht aufbewahrt werden!



Figure 4.4: The SMOTURE VC80 demonstrating its self-standing design, allowing it to remain upright without support.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your SMOTURE VC80.

## 5.1 Emptying the Dustbin

Empty the dustbin regularly, especially when the 'Cleaning Alert' appears on the LCD screen or when it reaches its maximum fill line.

1. Ensure the vacuum cleaner is turned off.
2. Press the dustbin release button to detach it from the main motor unit.
3. Open the dustbin lid and empty the contents into a trash can.
4. Close the lid and reattach the dustbin to the motor unit until it clicks.

## 5.2 Cleaning the Filter System

The efficient filtration system, including the HEPA filter, captures fine particles. Clean filters regularly to maintain suction power.

1. Remove the dustbin as described above.
2. Twist and pull out the filter components (HEPA filter, mesh filter).
3. Tap filters gently to remove loose dust. For thorough cleaning, rinse filters under cold running water.
4. Allow all filter components to air dry completely for at least 24 hours before reassembling. Do not use a hairdryer or other heating devices.
5. Reassemble the dry filters and reattach the dustbin.

## 5.3 Cleaning the Anti-Tangle Brush

The anti-tangle brush is designed to prevent hair from wrapping around it, but occasional cleaning may still be necessary.

1. Ensure the vacuum cleaner is turned off and disconnected from power.
2. Detach the motorized floor brush from the extension wand.
3. Locate the brush roll release mechanism (usually a latch or button) and remove the brush roll.
4. Use scissors or a cleaning tool to carefully cut and remove any tangled hair or debris from the brush roll.
5. Clean the brush roll housing.
6. Reinsert the brush roll and secure it in place.

# 2 in 1 Anti-Tangle-Bürste



Figure 5.1: Comparison showing the effectiveness of the anti-tangle brush design against a standard brush, highlighting its ability to prevent hair entanglement.

## 6. TROUBLESHOOTING

If you encounter issues with your SMOTURE VC80, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged Battery not properly installed	Charge the battery fully Ensure battery is securely clicked into place
Low suction power	Dustbin is full Filters are clogged Brush roll or hose is blocked	Empty the dustbin Clean or replace filters Remove any blockages from the brush roll or hose
Brush roll not spinning	Brush roll is jammed Brush roll is dirty	Remove any obstructions from the brush roll Clean the brush roll as described in Maintenance section
Unusual noise	Blockage in the air path Damaged component	Check for and remove any blockages Contact customer support if noise persists
Battery not charging	Charger not properly connected Faulty charger or battery	Ensure charger is securely connected to both vacuum and outlet Contact customer support for assistance

If the problem persists after trying these solutions, please contact SMOTURE customer support.

## 7. SPECIFICATIONS

Key technical specifications for the SMOTURE VC80 Cordless Vacuum Cleaner:

Feature	Specification
Brand	SMOTURE
Model Number	VC80
Product Dimensions (L x W x H)	120 x 22 x 22.5 cm
Item Weight	3.9 Kilograms
Power	450 W
Suction Power	Up to 40,000 Pa (38Kpa)
Voltage	29.6 V
Dustbin Capacity	1.6 Litres
Runtime	Up to 55 minutes (Min mode)
Charging Time	Approx. 4 hours
Noise Level	58 Decibels
Filter Type	HEPA Filter
Special Feature	Portable, Self-standing, LCD Touchscreen, Automatic Suction Adjustment, Anti-Tangle Brush

Feature	Specification
Recommended Surface	Carpets, Hard Floors
Power Source	Battery Powered
Battery Type	Lithium-ion (1 included)

## 8. WARRANTY AND SUPPORT

---

SMOTURE products come with a two-year quality guarantee. If you encounter any issues with your cordless vacuum cleaner or require replacement parts, please do not hesitate to contact us at any time. We aim to respond within 12 business hours to provide support and ensure an exceptional product experience.

For customer service, please refer to the contact information provided with your purchase or visit the official SMOTURE website.