

CHUBORY X10 PRO

CHUBORY X10 PRO Drone Replacement Parts Instruction Manual

Model: X10 PRO

[Setup](#)

[Maintenance](#)

[Specifications](#)

[Warranty & Support](#)

INTRODUCTION

This manual provides essential instructions for the installation, maintenance, and use of CHUBORY X10 PRO drone replacement parts. These parts are specifically designed for the CHUBORY X10 PRO drone model. Please read this manual carefully before proceeding with any installation or maintenance to ensure proper function and safety.

1. SETUP AND INSTALLATION

1.1 Package Contents

Verify that all components are present in your package:

- 8 x Propellers
- 1 x USB Charging Cable
- 1 x Screwdriver
- 8 x Screws

1.2 Propeller Installation

Follow these steps to replace the propellers on your CHUBORY X10 PRO drone:

1. **Power Off:** Ensure the drone is powered off and the battery is disconnected before beginning.
2. **Identify Propellers:** Note the orientation of the existing propellers. Propellers are typically marked (e.g., A or B) and must be installed in the correct positions.
3. **Remove Old Propeller:** Use the provided screwdriver to carefully remove the screw securing the old propeller to the motor shaft. Gently lift and remove the propeller.

4. **Install New Propeller:** Place a new propeller onto the motor shaft, ensuring it matches the orientation of the propeller being replaced. Align the screw hole.
5. **Secure Propeller:** Insert a new screw and tighten it with the screwdriver. Do not overtighten, as this can damage the propeller or motor.
6. **Repeat:** Repeat the process for all propellers that need replacement.



Image: CHUBORY X10 PRO drone replacement parts, including propellers, screwdriver, and screws. This image illustrates the components involved in propeller replacement.

1.3 Charging Cable Usage

The USB charging cable is used to recharge the drone's battery. Always use the provided cable or an approved replacement to prevent damage to the battery or drone.

1. **Connect Battery:** Connect the drone battery to the charging cable.
2. **Connect to Power:** Plug the USB end of the charging cable into a compatible USB power source (e.g., computer USB port, USB wall adapter).

- 3. **Charging Indicator:** Observe the charging indicator light (if present on the battery or cable) to monitor the charging status. Refer to your drone's main manual for specific charging light behavior.
- 4. **Disconnect:** Once fully charged, disconnect the cable from the power source and then from the battery.

2. MAINTENANCE

2.1 Propeller Inspection

Regularly inspect propellers for signs of damage, such as cracks, bends, or chips. Damaged propellers can affect flight stability and efficiency. Replace any damaged propellers immediately using the instructions in Section 1.2.

2.2 Screw Tightness

Periodically check the tightness of all screws, especially those securing the propellers. Loose screws can lead to parts detaching during flight. Use the provided screwdriver to gently tighten any loose screws.

2.3 Cleaning

Keep all parts clean and free from dust or debris. Use a soft, dry cloth to wipe down components. Avoid using harsh chemicals or abrasive materials.

3. TROUBLESHOOTING

3.1 Drone Unstable After Propeller Replacement

- **Check Propeller Orientation:** Ensure all propellers are installed in their correct positions (e.g., A-type on A-motor, B-type on B-motor). Incorrect orientation is a common cause of instability.
- **Check Propeller Damage:** Re-inspect all propellers for any subtle damage that might have been missed.
- **Check Screw Tightness:** Verify that all propeller screws are securely tightened, but not overtightened.

3.2 Charging Cable Not Working

- **Verify Power Source:** Try a different USB power source to rule out issues with the adapter or port.
- **Inspect Cable:** Check the charging cable for any visible damage, such as frayed wires or bent connectors.
- **Check Battery Connection:** Ensure the battery is correctly and securely connected to the charging cable.

4. SPECIFICATIONS

CHUBORY X10 PRO Replacement Parts Overview

Component	Quantity	Description
Propellers	8	Replacement blades for CHUBORY X10 PRO drone.
USB Charging Cable	1	Standard USB cable for drone battery charging.
Screwdriver	1	Small Phillips head screwdriver for propeller installation.
Screws	8	Replacement screws for securing propellers.

Note: These specifications pertain to the replacement parts kit. For full drone specifications, refer to the CHUBORY X10 PRO drone's main user manual.

5. WARRANTY AND SUPPORT

5.1 Warranty Information

Specific warranty details for these replacement parts may vary. Please refer to the original purchase documentation or contact CHUBORY customer support for precise warranty terms and conditions. Typically, replacement parts are covered against manufacturing defects for a limited period.

5.2 Customer Support

For technical assistance, troubleshooting, or inquiries regarding your CHUBORY X10 PRO drone replacement parts, please contact CHUBORY customer support. Contact information can usually be found on the manufacturer's official website or in the original drone manual.

- **Online Support:** Visit the official CHUBORY website for FAQs and support resources.
- **Email Support:** Refer to your product packaging or the main drone manual for a support email address.

