

[Manuals.plus](#) /

› [DOOGEE](#) /

› DOOGEE S Cyber 4G Rugged Cell Phone User Manual

DOOGEE DOOGEE S cyber

DOOGEE S Cyber 4G Rugged Cell Phone User Manual

Model: DOOGEE S cyber

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your DOOGEE S Cyber 4G Rugged Cell Phone. Please read this manual thoroughly before operating the device to ensure proper functionality and to prevent damage. Keep this manual for future reference.



Image: Front and back view of the DOOGEE S Cyber 4G Rugged Cell Phone, showcasing its robust design and camera module.

2. PRODUCT OVERVIEW

2.1 Components and Controls

Familiarize yourself with the physical components and controls of your DOOGEE S Cyber phone.

- **Display:** 6.58-inch HD+ IPS Waterdrop Screen.
- **Cameras:** 50MP AI Main Camera (rear), 5MP Wide-angle Camera (rear), 16MP Front Camera.

- **Buttons:** Power button (with integrated fingerprint sensor), Volume Up/Down buttons.
- **Ports:** USB Type-C port for charging and data transfer.
- **SIM/TF Card Slot:** For inserting SIM cards and an expandable TF card.

20GB RAM+256GB ROM & Android 14

8GB RAM + 12GB RAM Virtuale = 20GB RAM



Image: The phone's display showing key specifications: 20GB RAM (8GB physical + 12GB virtual) and 256GB ROM, running Android 14.

FHD + IPS da 6,58"

Schermo a goccia d'acqua



Risoluzione
1080*2408



60Hz
Frequenza di
aggiornamento



20:9
Rapporto
di aspetto



400
nits



Image: Details of the 6.58-inch FHD+ IPS display, highlighting its 1080x2408 resolution, 60Hz refresh rate, 20:9 aspect ratio, and 400 nits brightness.

**Ultra grandangolare consente di avere
una prospettiva più ampia**



5MP

Fotocamera grandangolare da



50MP

Fotocamera principale AI da



16MP

Fotocamera
frontale da



Image: Overview of the camera system, including the 50MP AI main camera, 5MP wide-angle camera, and 16MP front camera.

3. SETUP

3.1 Inserting SIM and TF Cards

1. Locate the SIM/TF card slot on the side of the phone.
2. Use the provided SIM ejector tool to open the tray.
3. Carefully place your Nano-SIM card(s) and/or TF card into the designated slots on the tray, ensuring correct orientation.
4. Gently push the tray back into the phone until it is flush with the device body.

3.2 Initial Power On and Setup

1. Press and hold the Power button until the DOOGEE logo appears.
2. Follow the on-screen instructions to complete the initial setup, which includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security features.

4. OPERATING INSTRUCTIONS

4.1 Basic Operations

- **Power On/Off:** Press and hold the Power button. Select 'Power off' or 'Restart'.
- **Screen Lock/Unlock:** Press the Power button briefly to lock/unlock the screen.
- **Volume Adjustment:** Use the Volume Up/Down buttons.
- **Navigation:** Use touch gestures (tap, swipe, pinch) to navigate the Android 14 interface.



Image: The phone's interface demonstrating the Android 14 operating system with various app icons and widgets.

4.2 Connectivity

- **Wi-Fi:** Go to Settings > Network & internet > Wi-Fi to connect to available networks.
- **Bluetooth:** Go to Settings > Connected devices > Bluetooth to pair with other devices.
- **NFC:** Enable NFC in Settings > Connected devices > Connection preferences > NFC for contactless payments and data exchange.
- **GPS:** The phone supports GPS, GLONASS, Galileo, and Beidou for accurate navigation. Ensure Location services are enabled in Settings.



Image: Visual representation of the phone's GPS capabilities, Face Unlock, NFC functionality, and fingerprint unlock sensor.

4.3 Camera Usage

The DOOGEE S Cyber features a 50MP AI main camera, a 5MP wide-angle camera, and a 16MP front camera.

1. Open the Camera application.

2. Select your desired mode (e.g., Photo, Video, Portrait, Panorama, Macro, Beauty).
3. Tap the shutter button to capture photos or start/stop video recording.
4. Switch between rear and front cameras using the camera switch icon.

4.4 Security Features

- **Fingerprint Unlock:** Register your fingerprints in Settings > Security > Fingerprint. The sensor is integrated into the power button.
- **Face Unlock:** Set up face recognition in Settings > Security > Face Unlock.
- **Pattern/PIN/Password:** Configure a backup screen lock method in Settings > Security.

4.5 Battery and Charging

The phone is equipped with a 10800mAh battery and supports 33W fast charging.

- Use the original charger and cable for optimal charging speed and battery longevity.
- **OTG Reverse Charging:** The phone can act as a power bank to charge other devices using an OTG cable.

Batteria di lunga durata 10800mAh



1000H
Standby



50H
Music



18H
Video



12H
Gioco

10800mAh

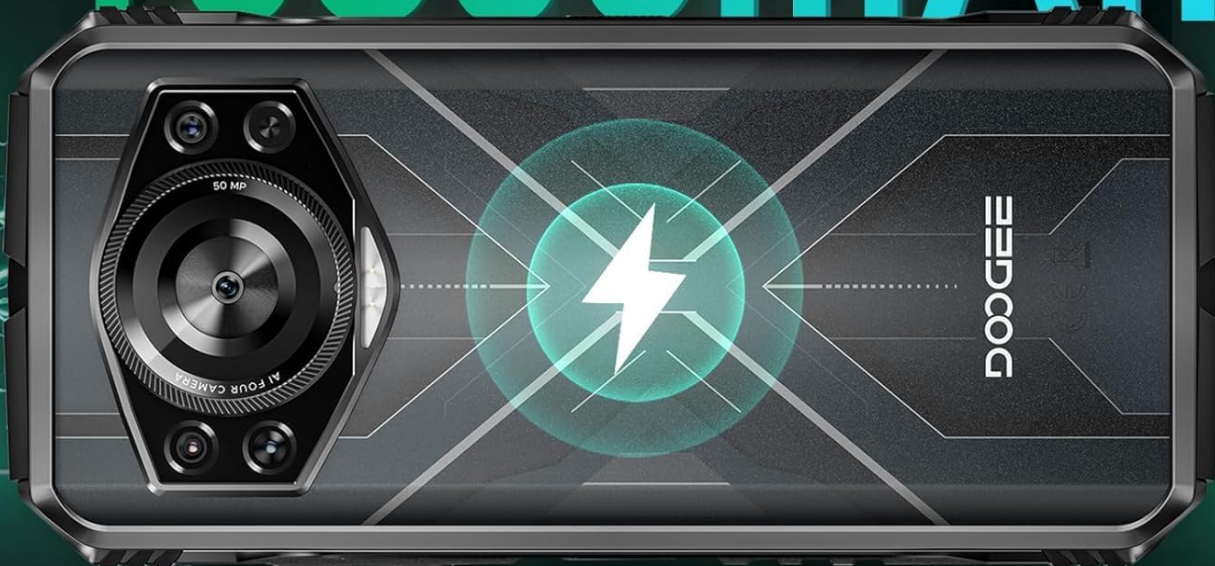


Image: Battery life estimates for the 10800mAh battery, showing standby, music, video, and gaming durations.

16MP Front Camera

With the cutting-edge 16MP front camera, your selfies will never be the same. Every click will grant you a mesmerizing collection of crisp, clear, and vibrant self-portraits that showcase your beauty in its purest form.



Image: Diagram illustrating the OTG reverse charging feature, allowing the phone to charge another device.

5. MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body. Avoid harsh chemicals.
- **Battery Care:** Avoid extreme temperatures. Do not fully discharge the battery regularly.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security. Go to Settings > System > System update.
- **Rugged Design:** While rugged, avoid unnecessary drops or impacts. Ensure all port covers are securely closed to maintain water and dust resistance.

6. TROUBLESHOOTING

- **Phone not turning on:** Ensure the battery is charged. Connect to the charger for at least 10 minutes before attempting to power on.
- **Network issues:** Check SIM card insertion. Verify mobile data is enabled. Restart the phone.
- **Apps crashing/freezing:** Clear app cache (Settings > Apps > [App Name] > Storage & cache > Clear cache). If issues persist, restart the phone.
- **Slow performance:** Close unnecessary background apps. Clear storage space. Consider a factory reset as a last resort (back up data first).
- **Charging issues:** Ensure the charging cable and adapter are not damaged. Try a different power outlet.

7. SPECIFICATIONS

Feature	Specification
Model Name	DOOGEE S cyber
Operating System	Android 14
Processor	Octa-core (Mali-G57 GPU, 2.0GHz)
RAM	8GB (up to 20GB virtual RAM)
Internal Storage	256GB
Expandable Storage	Up to 1TB TF card
Display	6.58-inch FHD+ IPS (1080x2408), 60Hz Refresh Rate, Corning Gorilla Glass Victus
Rear Camera	50MP AI Main Camera + 5MP Wide-angle Camera
Front Camera	16MP
Battery Capacity	10800mAh
Charging	33W Fast Charging, OTG Reverse Charging

Feature	Specification
Connectivity	Dual 4G Global Network (GSM, WCDMA, LTE), Wi-Fi, Bluetooth, NFC
Navigation	GPS, GLONASS, Galileo, Beidou
Security	Fingerprint Unlock, Face Unlock
Dimensions	7 x 3.2 x 0.7 inches
Weight	1.32 pounds
Color	Red

8. WARRANTY AND SUPPORT

Your DOOGEE S Cyber phone comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for warranty claims. For technical support, troubleshooting assistance beyond this manual, or warranty inquiries, please contact DOOGEE customer service through their official website or the retailer where you purchased the device. Always refer to the official DOOGEE website for the most up-to-date information and support resources.

© 2024 DOOGEE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question