

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ApisQueen](#) /

› [Silicone Waterproof Case for A300 Remote Control](#)

ApisQueen WC-A300

ApisQueen Silicone Waterproof Case for A300 Remote Control - Instruction Manual

Model: WC-A300

PRODUCT OVERVIEW

The ApisQueen Silicone Waterproof Case is designed to provide protection for your A300 Remote Control. Made from durable silicone, this case offers a layer of defense against water, dust, and minor impacts, helping to extend the lifespan of your remote control. Its soft and flexible design ensures a snug fit while maintaining access to essential controls.





Image: Front view of the ApisQueen Silicone Waterproof Case for A300 Remote Control.

WHAT'S INCLUDED

- 1 x Silicone Waterproof Case

SETUP AND INSTALLATION

Follow these steps to properly install the silicone waterproof case onto your A300 Remote Control:

1. **Prepare the Remote and Case:** Ensure your A300 Remote Control is clean and free of any debris. Take the silicone case and prepare it for installation.
2. **Insert the Remote:** Carefully slide the A300 Remote Control into the silicone case from the top opening. The flexible nature of the silicone will allow it to stretch around the remote.
3. **Adjust for Fit:** Once the remote is partially inside, gently work the silicone case down and around the entire remote, ensuring all edges and corners are properly covered. Smooth out any wrinkles or uneven areas to achieve a snug fit.
4. **Align Buttons and Openings:** Verify that all buttons, joysticks, and necessary openings (such as for the joystick

base) are correctly aligned with the corresponding cutouts in the silicone case.

5. **Secure Joystick Cover (if applicable):** For the joystick, you may need to gently pull the silicone around its base to ensure it is fully covered and protected, as demonstrated in the video.

Installation Video Guide

For a visual demonstration of the installation process, please refer to the official product video below:

Your browser does not support the video tag.

Video: This video demonstrates the step-by-step process of installing the ApisQueen Silicone Waterproof Case onto the A300 Remote Control, including how to properly fit the case and adjust the joystick cover.

Product Views





Front view of the silicone case, highlighting button areas.





Side view of the silicone case, showing its ergonomic shape.





Back view of the silicone case, detailing the grip texture.





Front view of the silicone case installed on the A300 remote, showing button visibility.





Side view of the silicone case installed on the A300 remote, highlighting the joystick protection.

OPERATING THE REMOTE WITH CASE

Once installed, the silicone case allows full functionality of your A300 Remote Control. All buttons and the joystick are designed to remain accessible and responsive through the silicone material. The case adds a comfortable grip and a layer of protection during normal use.

MAINTENANCE

To keep your silicone waterproof case clean and in optimal condition:

- **Cleaning:** Wipe the case with a damp cloth and mild soap if necessary. Rinse thoroughly and allow it to air dry completely before re-installing the remote.
- **Storage:** Store the case in a cool, dry place away from direct sunlight when not in use for extended periods.
- **Inspection:** Periodically inspect the case for any signs of wear, tears, or damage that might compromise its protective capabilities.

TROUBLESHOOTING

If you encounter any issues with your silicone case, consider the following:

- **Buttons Not Responsive:** Ensure the case is properly aligned with the remote control's buttons. Gently adjust the case to ensure there is no material obstructing the button presses.
- **Loose Fit:** If the case feels loose, double-check that it is fully seated around the remote control. The silicone is designed for a snug fit.
- **Charging Access:** Please note that this specific case model (WC-A300) does not feature a dedicated opening for charging the A300 Remote Control while the case is installed. The remote control will need to be removed from the case for charging.

SPECIFICATIONS

Feature	Detail
Product Dimensions	5.31 x 1.97 x 1.97 inches
Item Weight	0.32 ounces
ASIN	B0D7ZRL2BN
Item Model Number	WC-A300
Special Features	Waterproof
Form Factor	Case
Color	White
Manufacturer	ApisQueen
Brand	ApisQueen
Compatible Devices	A300 Remote Control
Shell Type	Soft

SAFETY INFORMATION

No specific safety warnings are applicable for this product.

WARRANTY AND SUPPORT

For any questions regarding product warranty, technical support, or assistance with your ApisQueen Silicone Waterproof Case, please contact the manufacturer directly through their official channels or the retailer where the product was

purchased. Refer to your purchase documentation for specific contact details.
You can also visit the [ApisQueen Store](#) for more information.

© 2025 ApisQueen. All rights reserved.