

Mili HD-P16-C

Mili Wireless Rechargeable Wallet Tracker (Model HD-P16-C) User Manual

Your guide to setting up and using your MiCard tracker.

1. INTRODUCTION

The Mili MiCard is a credit card-sized wireless tracker designed to help you locate your valuables using Apple's Find My network. This device is MFi Certified, ensuring seamless integration with your iOS devices. Its slim profile, wireless recharging capability, and IP65 waterproof rating make it a reliable companion for keeping track of items such as wallets, handbags, and passport books.

2. PRODUCT OVERVIEW

The MiCard tracker is engineered for convenience and durability. Key features include:

- **Wireless Rechargeable Battery:** Equipped with a long-lasting battery that can be recharged wirelessly. A single charge can last 4-6 months, with the battery maintaining functionality for up to 5 years.
- **MFi Certified for iOS:** Fully compatible with Apple's Find My app, allowing you to locate your items directly from your iPhone, iPad, or Mac.
- **Slim and Compact Design:** Designed to fit easily into wallets, phone cases, and other small compartments without adding significant bulk.
- **IP65 Waterproof Rating:** Resistant to dust and water splashes, capable of withstanding immersion in water up to 1 meter deep for 30 minutes.



Image 1: The Mili MiCard Wireless Rechargeable Wallet Tracker, showcasing its sleek, black, credit card-sized design with the Mili logo and a small indicator light.

MiCard, Keep an Eye on Your Valuables



Image 2: The Mili MiCard shown being placed in a purse, a job card bag, a passport book, and a card case, highlighting its versatility and slim profile.

3. SETUP INSTRUCTIONS

Follow these steps to set up your Mili MiCard with your Apple device:

1. **Power On:** Ensure your MiCard is charged. The device typically powers on automatically or can be activated by a short press of the power button (if present).
2. **Open Find My App:** On your iPhone, iPad, or Mac, open the 'Find My' application.
3. **Add Item:** Navigate to the 'Items' tab and tap the '+' icon. Select 'Add Other Item'.
4. **Pairing:** Your device will begin searching for nearby items. Place your MiCard close to your Apple device. Once detected, follow the on-screen prompts to name your MiCard and register it to your Apple ID.
5. **Confirmation:** After successful pairing, your MiCard will appear in the 'Items' list within the Find My app.

MiLi

Works with the Apple Find My App



Image 3: An illustration showing the Mili MiCard integrated with the Apple Find My app, indicating compatibility with Apple Find My, NFC, and Siri for location tracking.

4. OPERATING INSTRUCTIONS

Once your MiCard is set up, you can use the Find My app to locate your items:

- **Locate on Map:** Open the Find My app and select your MiCard from the 'Items' list. Its last known location will be displayed on a map.
- **Play Sound:** If your MiCard is nearby, you can tap 'Play Sound' in the Find My app to make it emit an audible alert, helping you pinpoint its exact location.
- **Directions:** For items further away, you can get directions to its last known location through the Find My app.
- **Notify When Found/Left Behind:** Configure notifications in the Find My app to alert you if your item is found by another Apple device user or if you leave your item behind at a known location.

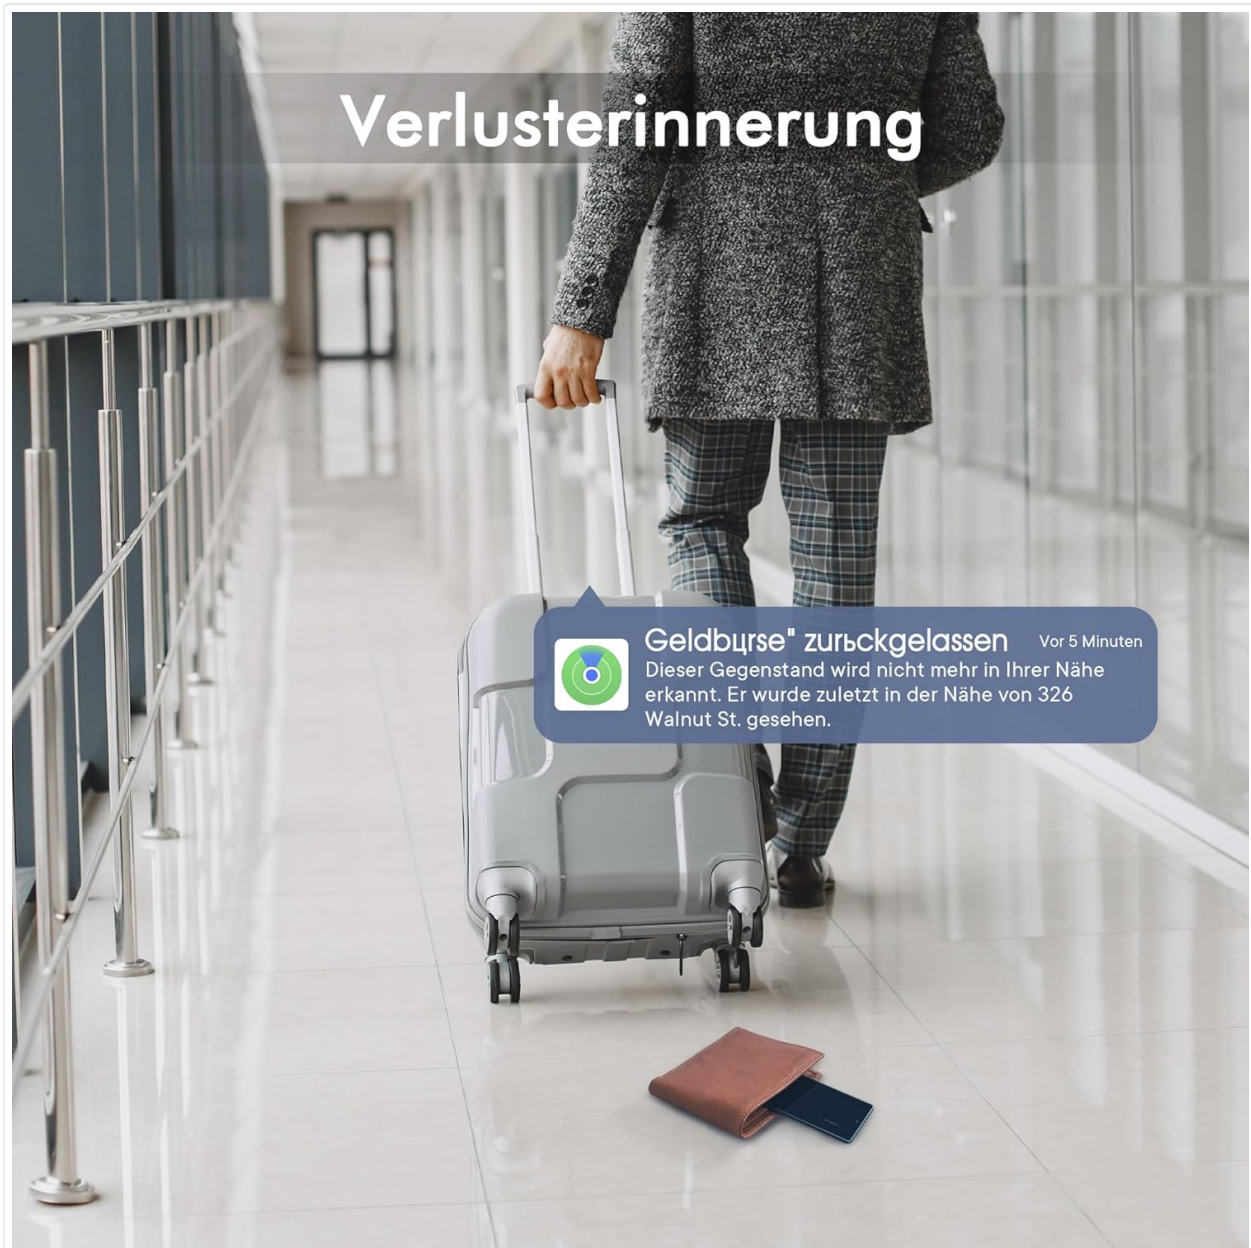


Image 4: An illustration depicting a person walking away from a suitcase with a wallet tracker, and a phone displaying a 'Left Behind' notification for the wallet, indicating the tracker's ability to alert users when an item is separated from them.

5. LOST MODE AND NFC FUNCTION

If your MiCard-equipped item is lost, you can activate Lost Mode:

1. **Activate Lost Mode:** In the Find My app, select your MiCard and enable 'Lost Mode'. You can enter a phone number or email address where you can be contacted.
2. **NFC Functionality:** If someone finds your lost item, they can tap their NFC-enabled smartphone on your MiCard. This will display the contact information you provided in Lost Mode, allowing them to return your item.



Image 5: A visual representation of the MiCard's Lost Mode and NFC function, showing a smartphone displaying contact information after being tapped against the MiCard, enabling a finder to return a lost item.

6. CHARGING

The Mili MiCard features a wireless rechargeable battery:

- **Charging Method:** Place the MiCard on a compatible wireless charging pad.
- **Charging Indicator:** A small LED light on the MiCard will indicate its charging status.
- **Charging Time:** A full charge typically takes approximately 1 hour.
- **Battery Life:** A single full charge provides 4-6 months of usage. The internal battery is designed for a lifespan of up to 5 years.

Wireless Charging No Frequent Battery Waste



1 Charge, Lasts
4-6 Months



Battery Life
Up to 5 Years



**1H FULL
CHARGE**

Image 6: The Mili MiCard being wirelessly charged on a charging pad, with text indicating '1 Charge, Lasts 4-6 Months', 'Battery Life Up to 5 Years', and '1H Full Charge'.

7. WATER RESISTANCE

The MiCard has an IP65 rating, meaning it is:

- **Dust Tight:** Fully protected against dust ingress.
- **Water Resistant:** Protected against low-pressure water jets from any direction and can withstand immersion in water up to 1 meter for 30 minutes.

While resistant, it is not recommended for prolonged submersion or use in extreme water conditions.



IP65 Waterproof

It can last in water for **30** minutes at a depth of **1** meter

Image 7: The Mili MiCard partially submerged in water, illustrating its IP65 waterproof capability and stating it can last in water for 30 minutes at a depth of 1 meter.

8. MAINTENANCE

To ensure the longevity and optimal performance of your MiCard:

- **Cleaning:** Wipe the device with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the MiCard in a cool, dry place when not in use for extended periods.
- **Avoid Extreme Conditions:** Do not expose the device to extreme temperatures, direct sunlight for prolonged periods, or corrosive liquids.

9. TROUBLESHOOTING

If you encounter issues with your Mili MiCard, consider the following:

- **Not Connecting to Find My:**
 - Ensure Bluetooth is enabled on your iOS device.

- Make sure the MiCard is charged.
- Try restarting your iOS device and the MiCard (if applicable).
- Ensure the MiCard is within range of your iOS device or other Apple devices in the Find My network.
- **MiCard Not Charging:**
 - Verify that your wireless charging pad is functional and properly connected to a power source.
 - Ensure the MiCard is correctly placed on the charging pad.
 - Remove any obstructions between the MiCard and the charging pad.
- **Accidental Button Presses:** The MiCard may have a button that can be accidentally pressed when in a tight wallet, potentially affecting its status (e.g., turning off or entering pairing mode). If you experience unexpected behavior, check the device's status in the Find My app and reposition it in your wallet if necessary to prevent accidental presses.
- **Inaccurate Location:** The accuracy of the location depends on the proximity of other Apple devices in the Find My network. In areas with fewer Apple devices, location updates may be less frequent or precise.




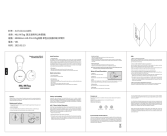


10. SPECIFICATIONS

Feature	Detail
Model Number	HD-P16-C
Dimensions (L x W x Thickness)	8.5 x 5.3 x 0.26 cm (3.35 x 2.09 x 0.10 inches)
Weight	23 Grams (0.81 ounces)
Battery Type	1 Lithium Polymer battery (included)
Battery Life (per charge)	4-6 months
Total Battery Lifespan	Up to 5 years
Charging Time	Approximately 1 hour (wireless charging)
Waterproof Rating	IP65
Compatibility	iOS devices only (MFi Certified)

11. WARRANTY AND SUPPORT

Mili products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your product or visit the official Mili website. For technical support or further assistance, please contact Mili customer service through the contact information provided on their official website or product packaging.

Related Documents - HD-P16-C

	MiLi MiTag User Manual User manual for the MiLi MiTag, a smart tracker device that uses Google's Find My Device service to locate personal items. Includes setup instructions, features, battery replacement, safety information, warranty, and contact details.
	MiLi MiTag User Manual: Locate and Track Your Items Comprehensive user manual for the MiLi MiTag, a Bluetooth tracker compatible with Apple's Find My network. Learn how to set up, use, and maintain your MiTag for item location and security.
	MiLi MiTag User Manual: Features, Setup, and Warranty Comprehensive user manual for the MiLi MiTag, a smart locator compatible with Apple's Find My network. Learn about its main functions, quick setup, battery replacement, safety guidelines, and warranty information.
	MiLi MiTag User Manual and Specifications Comprehensive user manual for the MiLi MiTag, detailing its main functions, quick instructions, battery replacement, safety guidelines, warranty information, and FCC compliance. Learn how to locate items, play sounds, and manage your MiTag using the Apple Find My app.
	MiTag Duo: Instrukcja Obsługi i Informacje o Produkcje Kompleksowa instrukcja obsługi dla lokalizatora MiTag Duo firmy MiLi. Dowiedz się, jak sparować urządzenie z iOS i Androidem, zapoznaj się z informacjami o baterii, bezpieczeństwie i gwarancji.
	MILI Mag-Soundmate Mini MagSafe Bluetooth Speaker HD-M12 User Manual User manual for the MILI Mag-Soundmate Mini MagSafe Bluetooth Speaker (Model HD-M12), detailing setup, features, troubleshooting, and warranty information.