

[Manuals.plus](#) /

> [Flooyes](#) /

> Flooyes 8-Button Electronic Dance Mat Instruction Manual (Model Dance-08)

## Flooyes Dance-08

# Flooyes 8-Button Electronic Dance Mat Instruction Manual

Model: Dance-08 | Brand: Flooyes

## INTRODUCTION

This manual provides essential information for the safe and effective use of your Flooyes 8-Button Electronic Dance Mat. Please read it thoroughly before operating the product and retain it for future reference.

## SAFETY INFORMATION

**Choking Hazard - Small Parts:** This product contains small parts and is not suitable for children under 3 years of age due to potential choking hazards. Adult supervision is recommended during use.

Ensure the dance mat is placed on a flat, stable surface to prevent slips and falls. The mat features anti-slip stripes on the bottom for enhanced safety.

## WHAT'S IN THE BOX

- 1 x Flooyes 8-Button Electronic Dance Mat
- (Batteries not included - Requires 4 x AA batteries)

## SETUP

1. **Battery Installation:** Locate the battery compartment on the underside of the control unit. Using a screwdriver, open the compartment. Insert 4 new AA batteries, ensuring correct polarity (+/-). Close the compartment securely.
2. **Unfold the Mat:** Carefully unroll and lay the dance mat flat on a clean, dry, and level surface. Ensure there are no wrinkles or creases that could interfere with play or cause tripping.
3. **Power On:** Press the power button on the control unit to turn on the dance mat. The LED display will light up, indicating the mat is ready for use.



Figure 1: Rear view of the control unit showing the battery compartment and overall dimensions of the dance mat (95cm/37.4in x 86cm/33.8in).

## OPERATING INSTRUCTIONS

### Control Unit Overview

# Upgraded Dance Mat

8 Keys & 9 Levels & 3 Difficulties

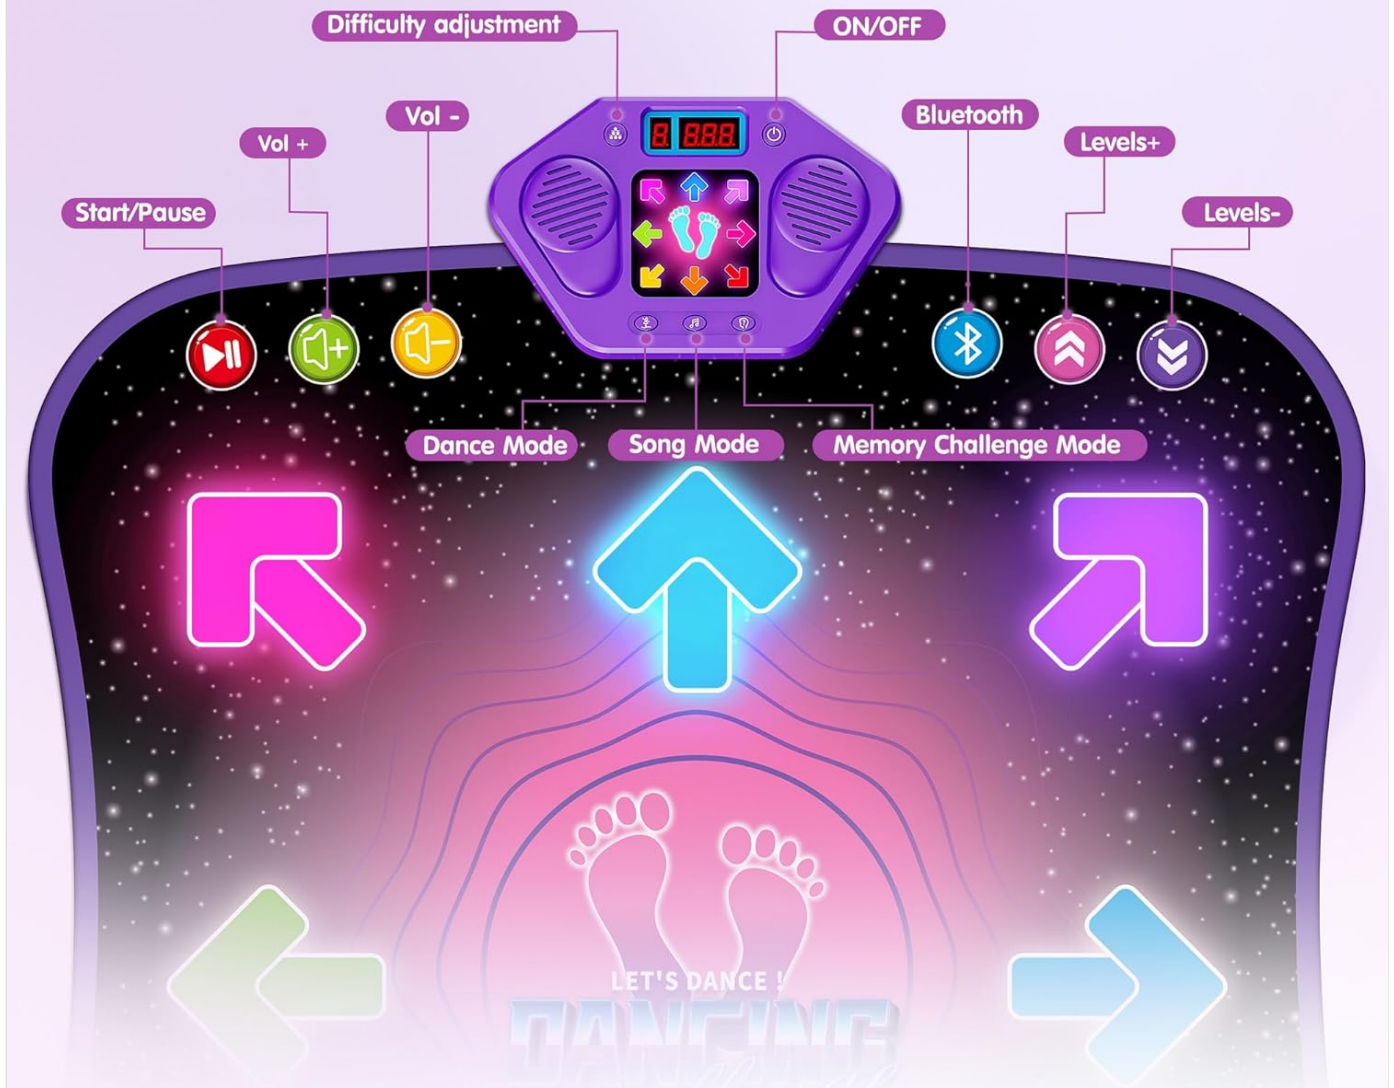


Figure 2: Detailed view of the control unit and its functions, including ON/OFF, Difficulty Adjustment, Volume, Bluetooth, Levels, Start/Pause, Dance Mode, Song Mode, and Memory Challenge Mode.

## Game Modes

The dance mat offers 5 interactive game modes to enhance coordination and provide entertainment:

- **Dance Mode:** Follow the flashing arrows on the mat by stepping, hopping, and jumping to the rhythm. Features 8-button dance modes with varying difficulty levels.
- **Song Mode:** Play along with built-in melodies.
- **Memory Challenge Mode:** Test your memory by repeating sequences of flashing lights.
- **Jazz Drum Mode:** Use the mat to play drum instrument sounds.
- **Bluetooth Mode:** Connect your device to play your own music.



Figure 3: Visual representation of the 5 available game modes.

## Basic Controls

- **Power Button:** Located on the control unit to turn the mat ON/OFF.
- **Volume Control:** Use the 'Vol+' and 'Vol-' buttons on the mat to adjust the sound level.
- **Start/Pause:** The play/pause button allows you to start or temporarily stop a game or music.
- **Difficulty Adjustment:** Use the dedicated button on the control unit to cycle through easy, medium, and hard difficulty levels.
- **Level Selection:** Use the 'Levels+' and 'Levels-' arrows on the mat to select different levels within a game mode.

## Bluetooth Connection

1. Ensure the dance mat is powered on.
2. Press the Bluetooth button on the control unit. The Bluetooth indicator light will flash.
3. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "Dance Mat" (or similar name) from the list of devices to pair.

5. Once connected, the Bluetooth indicator light on the mat will stop flashing and remain solid. You can now play music from your device through the dance mat's speakers.

Your browser does not support the video tag.

Video 1: Demonstration of the dance mat's Bluetooth connectivity and various modes.

## FEATURES OVERVIEW

---

- **Light-up 8-Button Design:** Features 8 illuminated buttons that guide players through dance sequences.
- **5 Fun Challenging Games:** Includes Dance Mode, Song Mode, Memory Challenge, Jazz Drum, and Bluetooth Mode.
- **Bluetooth Connectivity:** Allows connection to external devices for playing custom music.
- **Built-in Melodies:** Includes 3 multilingual melodies (English, German, Spanish).
- **Non-Slip Material:** Made from soft non-woven fabric with anti-slip stripes on the bottom for safety and durability.
- **LED Scoreboard:** Automatically tracks and displays scores.
- **Waterproof Surface:** Easy to clean and maintain.



Figure 4: The Flooyes 8-Button Electronic Dance Mat in its entirety.



Figure 5: The dance mat connected via Bluetooth, allowing users to dance to their own music.

## MAINTENANCE

- **Cleaning:** The mat is made of waterproof material and is easy to clean. Use a damp cloth to wipe down the surface. Do not immerse the control unit in water.
- **Storage:** After each use, it is recommended to remove the AA batteries from the control unit to prevent damage from battery leakage. Fold the mat neatly for compact storage.

## TROUBLESHOOTING

- **Mat not turning on:** Check if the batteries are correctly installed and are new. Ensure the power button is pressed firmly.
- **No sound or low volume:** Adjust the volume using the 'Vol+' button. Ensure your Bluetooth device is connected and its volume is turned up if using Bluetooth mode.
- **Buttons not responding:** Ensure the mat is laid flat without creases. Check for any obstructions on the buttons.
- **Bluetooth connection issues:** Ensure the mat is in Bluetooth mode and your device's Bluetooth is enabled. Try restarting

both the mat and your device.

## SPECIFICATIONS

---

<b>Product Dimensions</b>	4.5 x 12 x 10 inches
<b>Item Weight</b>	2.88 pounds
<b>Item Model Number</b>	Dance-08
<b>Manufacturer Recommended Age</b>	3 years and up
<b>Manufacturer</b>	Flooyes

## WARRANTY AND SUPPORT

---

For warranty information or customer support, please refer to the product packaging or contact Flooyes customer service directly.