



Manuals.plus /

› PRONEXT /

› PRONEXT Karaoke Machine User Manual

PRONEXT P08

PRONEXT Karaoke Machine User Manual

Model: P08 | Brand: PRONEXT

1. INTRODUCTION AND OVERVIEW

The PRONEXT Karaoke Machine (Model P08) is a versatile and portable entertainment system designed for adults and families. It features a 14-inch touchscreen display, an 800W peak power Bluetooth speaker, and dynamic DJ lights. The system includes two rechargeable UHF wireless microphones, offering a comprehensive solution for karaoke and music playback. Its integrated Android 12 tablet with 32GB storage allows for seamless access to various applications and content.

This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your PRONEXT Karaoke Machine to ensure optimal performance and enjoyment.



Figure 1.1: PRONEXT Karaoke Machine (Model P08) main unit.

Official Product Video: Introducing the Arpeggio P08 Karaoke Machine

Your browser does not support the video tag.

Video 1.1: An introductory video showcasing the features and functionality of the Arpeggio P08 Karaoke Machine, including its design, microphones, and display capabilities. Duration: 0:53.

2. SETUP GUIDE

2.1. Unboxing and Component Check

Carefully remove all components from the packaging. Ensure the following items are present:

- PRONEXT P08 Smart Karaoke Machine
- 2 Rechargeable UHF Wireless Microphones
- Power Adapter

- Speaker Stand (included)
- User Manual (this document)

2.2. Initial Power-Up and Charging

Connect the power adapter to the DC 13.5V input port on the karaoke machine and plug it into a wall outlet. The internal 7200 mAh battery will begin charging. For first use, it is recommended to fully charge the unit.

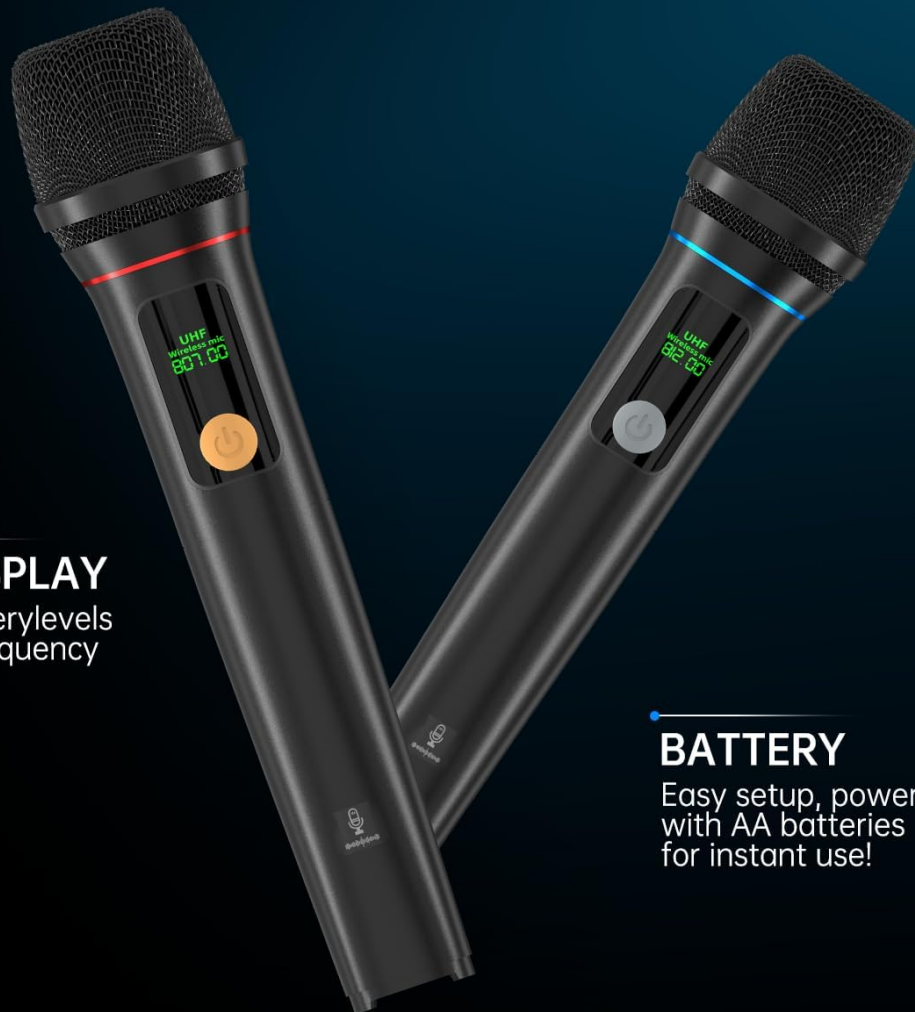


Figure 2.1: Multifunctional control panel with various input/output options.

2.3. Microphone Setup

The two UHF wireless microphones are pre-paired with the machine. Insert the included AA batteries into each microphone. Power on the microphones using their respective power buttons. They should automatically connect to the karaoke machine. An LED display on each microphone indicates battery levels and mic frequency.

TWO UHF RECHARGEABLE CORDLESS MICROPHONES



LED DISPLAY

Track battery levels and mic frequency

BATTERY

Easy setup, power with AA batteries for instant use!

Figure 2.2: Rechargeable UHF wireless microphones.

2.4. Speaker Stand Assembly

Assemble the provided speaker stand according to its separate instructions. Once assembled, securely mount the PRONEXT Karaoke Machine onto the stand. This allows for adjustable height and optimal sound projection.

PERFORMADUET

With the ones you love



Figure 2.3: Karaoke machine on its stand, ready for use.

2.5. Network Connection (Wi-Fi)

To access online content and streaming services, connect the machine to a Wi-Fi network. Navigate to the "Settings" icon on the touchscreen display, then select "Wi-Fi" and choose your network. Enter the password if prompted.

THE P08 TABLET



Figure 2.4: The P08 tablet interface, showing Wi-Fi and other features.

3. OPERATING INSTRUCTIONS

3.1. Touchscreen Tablet Operation

The PRONEXT Karaoke Machine features a responsive 14-inch touchscreen running on Android 12 with 32GB of internal storage. Navigate through applications and settings by tapping and swiping. You can install various karaoke apps or use pre-installed ones like YouTube for unlimited song choices.

3.2. Playback Modes

The system supports 7 different playback modes:

- **Tablet Mode:** Utilize the built-in Android tablet for streaming and app usage.
- **Bluetooth 5.2:** Connect wirelessly to your smartphone, tablet, or other Bluetooth-enabled devices.
- **USB:** Play media files from a USB flash drive.

- **AUX-out:** Connect to external audio systems.
- **Micro-SD:** Insert a Micro-SD card for media playback.
- **HDMI:** Connect to a TV or PC for larger display.
- **Guitar Input:** Plug in a guitar for accompaniment.

MULTIFUNCTIONAL CONTROL PANELS



GTIN FOR GUITAR



BLUETOOTH 5.0



AUX



MICRO-SD SLOT



USB



HDMI FOR TV/PC



Figure 3.1: Overview of available input and output ports.

3.3. Lyrics Display

Lyrics can be displayed directly on the 14-inch tablet screen. For a larger viewing experience, connect the machine to an external TV or monitor via the HDMI port. This feature enhances the singing experience by providing synchronized subtitles.

UHF METAL CORDLESS DYNAMIC MIC SYSTEM

UHF microphones have a more stable connection compared to Very High Frequency (VHF) microphones.



Figure 3.2: Lyrics display on the tablet screen.

3.4. Sound Effects and Equalizer Settings

The machine offers 6 EQ sound effects (Normal, Jazz, Rock, Classical, Pop) to customize your audio experience. Utilize the advanced equalizer settings accessible through the tablet interface to fine-tune the sound to your preference. The system features 4 powerful speakers, including two 6.5-inch woofers and two 2.0-inch tweeters, delivering 360° stereo quality sound.

EXCELLENT SOUND POWERFUL BEATS

TWO 6.5"
WOOFER



40W
PEAK POWER

TWO 2.0"
TWEETER

Figure 3.3: Internal speaker configuration for powerful sound.

3.5. DJ Lights Modes

Enhance the party atmosphere with 7 multiple kinds of light display modes. These LED light effects can be changed to match the mood of your music or event.



Figure 3.4: Seven different light display modes.

3.6. Portability

The PRONEXT Karaoke Machine is designed for portability, featuring a delicate leather wristband for easy carrying. Its compact size and built-in 7200 mAh battery allow for up to 6 hours of continuous playback, making it suitable for on-the-go entertainment.

PORTABLE AND CLASSIC TV STYLING

Easy to carry, a sturdy carrying handle that you can take it to any corner you want!



Figure 3.5: Portable design with carrying strap.

4. MAINTENANCE

4.1. Cleaning

To clean the exterior of the karaoke machine, use a soft, dry cloth. For the touchscreen, use a microfiber cloth specifically designed for electronic displays. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the device.

4.2. Battery Care

The internal Lithium-Ion battery should be fully charged before first use. For optimal battery life, avoid completely draining the battery frequently. If storing the machine for an extended period, charge it to approximately 50% every few months to prevent deep discharge.

4.3. Storage

Store the karaoke machine in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Ensure the microphones are stored safely to prevent damage.

5. TROUBLESHOOTING

If you encounter issues with your PRONEXT Karaoke Machine, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Sound from Speaker	Volume too low; incorrect input mode; loose connections.	Increase master volume. Ensure correct input mode is selected (e.g., Bluetooth, AUX). Check all cable connections.
Microphones Not Connecting	Microphones not powered on; low microphone battery; interference.	Ensure microphones are powered on. Replace or recharge microphone batteries. Move closer to the main unit.
Slow Wi-Fi Connection / App Performance	Weak Wi-Fi signal; background apps running; limited tablet processing power.	Move the machine closer to your Wi-Fi router. Close unnecessary background applications. Restart the machine.
Lyrics Not Displaying on TV	Incorrect HDMI connection; TV input not set to HDMI.	Ensure HDMI cable is securely connected to both the machine and the TV. Select the correct HDMI input on your TV.
Distorted Sound	Volume too high; audio source issue; microphone feedback.	Reduce volume levels. Check the audio source for distortion. Adjust microphone gain or distance from speakers to prevent feedback.

6. SPECIFICATIONS

Feature	Detail
Brand	PRONEXT
Model	P08
Item Weight	22 pounds
Product Dimensions	10.2 x 13.3 x 12.9 inches
Display	14-inch Touch Screen
Operating System	Android 12
Storage	32 GB
Peak Power	800W (implied from product title, though specifications list 40W peak power for speakers) <i>Note: Product title states 800W Peak Power, while speaker details mention 40W Peak Power. Please refer to manufacturer for clarification if needed.</i>
Speaker Configuration	4 speakers (Two 6.5" Woofers, Two 2.0" Tweeters)
Microphones	2 Rechargeable UHF Wireless Microphones
Connectivity	Bluetooth 5.2, Wi-Fi, USB, HDMI, AUX, Micro-SD, Guitar Input
Battery Type	Lithium Ion (7200 mAh)
Max Playback Time	Up to 6 hours
Special Features	Built-In Microphone, Lyric Display, PA System, Portable, Touch Screen, DJ Lights (7 modes)
Included Components	P08 smart karaoke machine



Figure 6.1: Product dimensions.

7. WARRANTY AND SUPPORT

For information regarding warranty coverage, technical support, or service inquiries, please refer to the warranty card included with your product or contact PRONEXT customer service directly. Keep your purchase receipt as proof of purchase.

For the most up-to-date support information, please visit the official PRONEXT website or contact their customer support channels.