



[Manuals.plus](#) /

> [PRONEXT](#) /

> Karaoke Machine with Lyrics Display Screen for Adults, Portable Bluetooth Speaker with 2 Rechargeable UHF Mics, Built-in 14" Tablet & WiFi, LED Lights, PA System for Party(Stand Included)

## PRONEXT GD-AP08

# PRONEXT GD-AP08 Karaoke Machine User Manual

Portable Bluetooth Speaker with Lyrics Display Screen

## 1. PRODUCT OVERVIEW

The PRONEXT GD-AP08 Karaoke Machine is a versatile portable entertainment system designed for adults and families. It features a built-in 14-inch tablet with Wi-Fi connectivity for lyrics display, powerful speakers for 360-degree stereo sound, and two rechargeable UHF wireless microphones. The machine also includes multiple LED light display modes to enhance the party atmosphere. Its portable design and included stand make it suitable for various indoor and outdoor events.



Figure 1: PRONEXT GD-AP08 Karaoke Machine

## 2. WHAT'S IN THE BOX

- PRONEXT GD-AP08 Karaoke Machine
- 2 x Rechargeable UHF Wireless Microphones
- Adjustable Stand
- Type-C Charging Cable (for microphones)
- Power Adapter (for main unit)
- User Manual (this document)

## 3. SETUP GUIDE

### 3.1 Initial Charging

Before first use, ensure the karaoke machine and microphones are fully charged.

1. Connect the main unit to a power outlet using the provided power adapter. The charge indicator light will illuminate.
2. Charge the two UHF wireless microphones using the supplied Type-C cable. A Type-C port is located at the bottom of each microphone.

### 3.2 Assembling the Stand

Attach the karaoke machine securely to the adjustable stand for optimal viewing and sound projection.



Figure 2: Karaoke Machine with Stand for Party Use

### 3.3 Connecting to Wi-Fi

The built-in 14-inch tablet requires a Wi-Fi connection to access online content and streaming services.

1. Power on the karaoke machine.
2. Navigate to the "Settings" icon on the tablet's home screen.
3. Select "Wi-Fi" and choose your desired network from the list.
4. Enter the Wi-Fi password if prompted.

# THE P08 TABLET



Figure 3: The P08 Tablet Interface with Wi-Fi and App Access

## 3.4 Microphone Pairing

The UHF wireless microphones automatically connect to the main unit when powered on.

1. Ensure the karaoke machine is powered on.
2. Turn on each microphone using its power button. The microphone's LED display will show its status.
3. The microphones should automatically pair with the main unit. If not, refer to the troubleshooting section.

# TWO UHF RECHARGEABLE CORDLESS MICROPHONES



## LED DISPLAY

Track battery levels and mic frequency

## BATTERY

Easy setup, power with AA batteries for instant use!

Figure 4: Two UHF Rechargeable Cordless Microphones

## 5. OPERATING INSTRUCTIONS

### 5.1 Playing Karaoke Songs

The machine supports various methods for playing karaoke content:

- **Built-in Karaoke App:** Use the pre-installed "Karaoke Lite" app to search and play songs with lyrics.
- **YouTube:** Access YouTube directly from the tablet to find karaoke versions of songs. The lyrics will display on the screen.
- **Spotify:** Play music from Spotify. While primarily for audio, some songs may have synchronized lyrics display.
- **External Display:** Connect the machine to an external TV screen via HDMI for a larger lyrics display.
- **USB/Micro SD:** Load audio or video files from a USB drive or Micro SD card.

### 5.2 Adjusting Sound and Microphone Settings

The control panel on the side of the unit allows for fine-tuning of audio output.

- **Music Volume:** Adjust the overall music volume using the dedicated knob.
- **Microphone Volume:** Control the volume of each microphone independently.
- **Echo/Reverb:** Add echo effects to the microphone audio for a professional karaoke sound.
- **Bass/Treble:** Adjust the bass and treble levels for both music and microphone audio to suit your preference.
- **EQ/Vocal:** Use the EQ/Vocal button to switch between different equalizer presets or vocal modes.



Figure 5: Speaker Configuration for Powerful Sound

### 5.3 LED Light Modes

The machine features 7 multiple kinds of light display modes to create a dynamic atmosphere.

- Use the "LED SW" switch on the control panel to turn the lights on/off.
- Press the "LED MODE" button to cycle through the different light patterns and colors.

## 6. MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the karaoke machine in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, fully charge the unit and microphones before long-term storage and recharge them every 3-6 months.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound from microphones.	Microphones are off or not charged. Not paired correctly. Microphone volume too low.	Ensure microphones are powered on and charged. Re-pair microphones if necessary. Increase microphone volume on the unit.
Poor sound quality (music or vocal).	Volume levels too high/low. EQ settings incorrect. Microphone too far from mouth.	Adjust music and microphone volume. Experiment with Bass/Treble/Echo settings. Hold microphone closer to your mouth for clearer audio pickup.
Wi-Fi connection issues.	Weak Wi-Fi signal. Incorrect password. Router issues.	Move closer to your Wi-Fi router. Double-check password. Restart your Wi-Fi router.
Tablet is slow or unresponsive.	Too many apps running in background. Low storage.	Close unused applications. Clear cache or uninstall unnecessary apps to free up storage. Restart the unit.

## 8. SPECIFICATIONS

- **Model:** GD-AP08
- **Brand:** PRONEXT
- **Display:** Built-in 14-inch Tablet with Lyrics Display
- **Connectivity:** Bluetooth, Wi-Fi, USB, HDMI Out
- **Microphones:** 2 x Rechargeable UHF Wireless Microphones
- **Speakers:** 2 x 6.5" Woofers, 2 x 2" Tweeters (4 Powerful Speakers)
- **Sound Technology:** High-performance audio drivers, advanced digital signal processors, automatic adjustment of high/low bass, intelligent noise reduction.
- **LED Lights:** 7 Multiple Kinds of Light Display Modes
- **Dimensions:** 10.2 x 13.3 x 12.9 inches
- **Weight:** 23.7 pounds
- **Power:** DC 13.5V (Rechargeable Battery Included)
- **Compatible Devices:** Smartphone, Tablet, Television



Figure 6: Product Dimensions

## 9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the contact details provided on the product packaging or visit the official PRONEXT website. Keep your purchase receipt as proof of purchase for any warranty claims.