

KAFF CTC694B

KAFF CTC 69 4B Gas Stove/Cooktop User Manual

Model: CTC694B | Brand: KAFF

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference. Improper installation, adjustment, alteration, service, or maintenance can cause injury or property damage. Refer to this manual. For assistance or additional information, consult a qualified installer, service agency, or the gas supplier.

- **Gas Safety:** Ensure proper ventilation. Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- **Children Safety:** Never leave children unattended in the area where the appliance is in use. Do not allow children to play with the appliance.
- **Hot Surfaces:** Burners and surrounding areas become hot during use. Avoid touching hot surfaces until they have cooled down.
- **Proper Use:** Use the appliance only for its intended purpose of cooking. Do not use it as a space heater.
- **Ventilation:** Always ensure adequate ventilation in the kitchen when operating the gas stove.
- **Gas Leaks:** If you smell gas, immediately turn off the gas supply, open windows, and do not operate any electrical switches or appliances. Contact your gas supplier or a qualified technician.

2. PRODUCT OVERVIEW

The KAFF CTC 69 4B Gas Stove/Cooktop is designed for efficient cooking with its four high-efficiency brass burners and durable tempered glass surface.

2.1 Components

- **Black Tempered Glass Top:** 8mm thick, providing a sleek and easy-to-clean surface.
- **Brass Burners:** Includes one Jumbo burner, two Big burners, and one Small burner for varied cooking needs.
- **Enamelled Pan Supports:** Sturdy supports designed to accommodate heavy and large utensils.
- **Metal Knobs:** For precise control over flame intensity.
- **Stainless Steel Drip Tray:** Collects spills for easier cleaning.

KAFF
Pride Built-In

Advance features for **Hassle-Free** cooking



Black Tempered
Glass



Easy Grip
Knobs



Brass Burners



Matt Enamelled
Pan Support

Image: Overview of the KAFF CTC 69 4B Gas Stove, highlighting its black tempered glass, easy grip knobs, brass burners, and matt enamelled pan supports.

Enjoy an effortless cooking Experience, **Everytime**

With Four Burner Power

Jumbo Burner, 2 Big Burner & Small Burner



Image: Top-down view of the 4-burner KAFF CTC 69 4B Gas Stove, showing the arrangement of the brass burners and the tempered glass surface.

3. INSTALLATION

Professional installation by a qualified technician is highly recommended for gas appliances to ensure safety and proper functioning.

3.1 Unpacking

- Carefully remove the appliance from its packaging.
- Check for any damage during transit. Report any damage to the retailer immediately.
- Ensure all components listed in the 'What's in the Box' section are present: 1x Cooktop, 1x Warranty Card, 1x User Manual.

3.2 Placement

- Place the cooktop on a stable, level, and heat-resistant surface.
- Ensure adequate clearance from walls and overhead cabinets as per local regulations.
- The area should be well-ventilated.

3.3 Gas Connection

- Connect the gas stove to the gas supply using a certified gas hose and regulator.
- Ensure all connections are tight and leak-free. Use soapy water to check for leaks (bubbles indicate a leak).
- The gas pressure must be compatible with the appliance's requirements.

3.4 Burner Assembly

- Place the brass burners correctly onto their respective gas outlets.
- Position the enamelled pan supports securely over the burners.

4. OPERATING INSTRUCTIONS

4.1 Before First Use

- Wipe the cooktop surface and burners with a damp cloth to remove any dust or packaging residue.
- Ensure all burner components are correctly seated.

4.2 Lighting a Burner (Manual Ignition)

1. Place your cooking utensil on the pan support over the desired burner.
2. Push down and turn the corresponding knob counter-clockwise to the 'High' flame position.
3. Immediately apply a flame from a gas lighter or matchstick to the burner.
4. Once the burner ignites, release the knob.

4.3 Adjusting Flame

After ignition, you can adjust the flame intensity by rotating the knob between the 'High' and 'Low' flame settings. For optimal cooking, adjust the flame so it does not extend beyond the base of your cooking utensil.

4.4 Turning Off

To turn off a burner, rotate the knob clockwise until it clicks into the 'OFF' position.



Image: Close-up view of the metal control knobs, indicating their positions for flame adjustment and turning off.

5. CARE AND MAINTENANCE

Regular cleaning and maintenance will prolong the life and efficiency of your gas stove.

5.1 Cleaning the Glass Top

- Allow the cooktop to cool completely before cleaning.
- Use a soft cloth or sponge with mild detergent and warm water.
- For stubborn stains, use a non-abrasive glass cleaner. Avoid harsh chemicals or abrasive scrubbers that can scratch the tempered glass.
- Wipe dry with a clean cloth to prevent water spots.



Image: Side profile of the gas stove, illustrating the matt black finish and the edge of the black toughened glass, emphasizing its cleanability.

5.2 Cleaning Burners and Pan Supports

- Remove the pan supports and burners when cool.
- Wash brass burners and enamelled pan supports with warm soapy water. For burnt-on food, soak them before scrubbing.
- Ensure burner holes are clear of any food debris. Use a soft brush if necessary.
- Dry all parts thoroughly before reassembling them to prevent corrosion and ensure proper ignition.

Brass Burners Matt Enamelled Pan Support



Image: A close-up of a brass burner in operation, with a cooking pan on the enamelled pan support, demonstrating the components that require cleaning.

5.3 Regular Checks

- Periodically check the gas hose and connections for any signs of wear, damage, or leaks.
- Ensure the burner caps are always placed correctly on the burner bases.

6. TROUBLESHOOTING

If you encounter issues with your gas stove, refer to the following common troubleshooting steps:

- **Burner not lighting:**
 - Check if the gas supply is on.
 - Ensure the burner cap and base are correctly aligned and free from debris.
 - Verify that the gas lighter is functioning.

• **Uneven flame:**

- Clean the burner holes to remove any blockages.
- Ensure the burner cap is seated properly.

• **Gas smell:**

- Immediately turn off the gas supply.
- Open windows for ventilation.
- Do not operate any electrical switches or appliances.
- Contact your gas supplier or a qualified technician immediately.

If the problem persists after attempting these steps, contact customer support or a qualified service technician.

7. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	CTC694B
Type	Glasstop Gas Stove/Cooktop
Size	69 CM
Ignition Type	Manual Ignition
Glass Type	8mm Thick Black Tempered Glass
Color	Black
Pan Support	Enamelled
Burners	4 Brass Burners (1 Jumbo, 2 Big, 1 Small)
Material	Stainless Steel (body), Brass (burners), Tempered Glass (top)
Controls Type	Knob
Item Dimensions (D x W x H)	73.7D x 61W x 17.8H Centimeters
Item Weight	16.8 Kilograms
Included Components	1x Cooktop, 1x Warranty Card, 1x User Manual



Image: Diagram illustrating the dimensions of the KAFF CTC 69 4B Gas Stove, including length, width, and height.

8. WARRANTY AND CUSTOMER SUPPORT

8.1 Warranty Information

The KAFF CTC 69 4B Gas Stove/Cooktop comes with the following manufacturer's warranty:

- **1 Year:** Pan Supports, Bypass, Ignition, Generator
- **2 Years:** Glass
- **5 Years:** Burners

Please retain your purchase receipt and warranty card for any warranty claims.

8.2 Customer Support

For any queries, service requests, or technical assistance, please contact KAFF Customer Care:

- **Toll-Free Number:** 18001802221
- **Manufacturer:** KAFF Appliances India Private Limited

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question