

[Manuals.plus](#) /

› [Pure Silk](#) /

› Pure Silk Body Hair Trimmer for Women, Rechargeable, Model CPT1-8008-SIG User Manual

Pure Silk CPT1-8008-SIG

Pure Silk Body Hair Trimmer for Women (Model CPT1-8008-SIG) User Manual

INTRODUCTION

This manual provides instructions for the safe and effective use of your Pure Silk Body Hair Trimmer for Women, Model CPT1-8008-SIG. Please read all instructions carefully before first use and retain this manual for future reference.

Important Safety Information

- Avoid using the trimmer near water sources when charging.
- Keep the blades away from eyes and sensitive areas.
- Always unplug the trimmer and allow it to cool before cleaning.
- Do not use this product on infants or children.
- Follow all recommended charging and maintenance procedures to ensure product longevity and safety.
- Do not attempt to disassemble or repair the trimmer yourself. Contact customer support for assistance.

PACKAGE CONTENTS

Verify that all items are present in the package:

- One (1) Pure Silk Body Hair Trimmer
- Four (4) Guide Combs (various lengths)
- One (1) USB Charging Cable
- One (1) Cleaning Brush
- One (1) Blade Oil bottle
- One (1) Charging Stand
- One (1) User Manual (this document)



Image: The Pure Silk Body Hair Trimmer, its charging stand, and product packaging.

PRODUCT FEATURES

- **Hypoallergenic Ceramic Blades:** Designed for smooth, irritation-free trimming.
- **Four Guide Combs:** Allows for precise control over hair length.
- **LCD Screen:** Displays battery status and trimming settings.
- **Built-in Light:** Illuminates hard-to-see areas for thorough hair removal.
- **Waterproof Design:** Suitable for wet or dry use and easy cleaning under running water.
- **Rechargeable Battery:** Provides up to 90 minutes of cordless operation on a single charge.







Image: A close-up view of the trimmer's body, highlighting the LCD screen and the built-in light near the blade.

SETUP

Charging the Trimmer

1. Insert the USB charging cable into the charging stand.
2. Place the trimmer onto the charging stand, ensuring it is seated correctly.
3. Connect the USB cable to a compatible USB power adapter (not included) or a USB port.
4. The LCD screen will indicate charging status. A full charge provides up to 90 minutes of cordless use.
5. For first use, charge the trimmer for at least 2 hours.





Image: The Pure Silk Body Hair Trimmer resting in its white charging stand.

Attaching Guide Combs

1. Ensure the trimmer is turned off before attaching or removing guide combs.
2. Select the desired guide comb for your preferred hair length. The trimmer includes four guide combs for various lengths.
3. Align the guide comb with the trimmer blade and gently push it down until it clicks into place.
4. To remove, gently pull the comb upwards from the blade.



Image: A detailed view of the trimmer head, showing the guide comb mechanism and length settings (1, 2, 3).

OPERATING THE TRIMMER

Basic Trimming

1. Ensure the trimmer is fully charged.
2. Press the power button to turn the trimmer on. The built-in light will activate.

3. Hold the trimmer at a slight angle against the skin and move it slowly against the direction of hair growth.
4. Use the built-in light to illuminate areas for precise trimming.
5. After use, press the power button to turn the trimmer off.

Wet and Dry Use

The Pure Silk Body Hair Trimmer is designed to be waterproof, allowing for both wet and dry use. You can use it in the shower for convenience. Always ensure the charging port is dry before connecting to the charger.



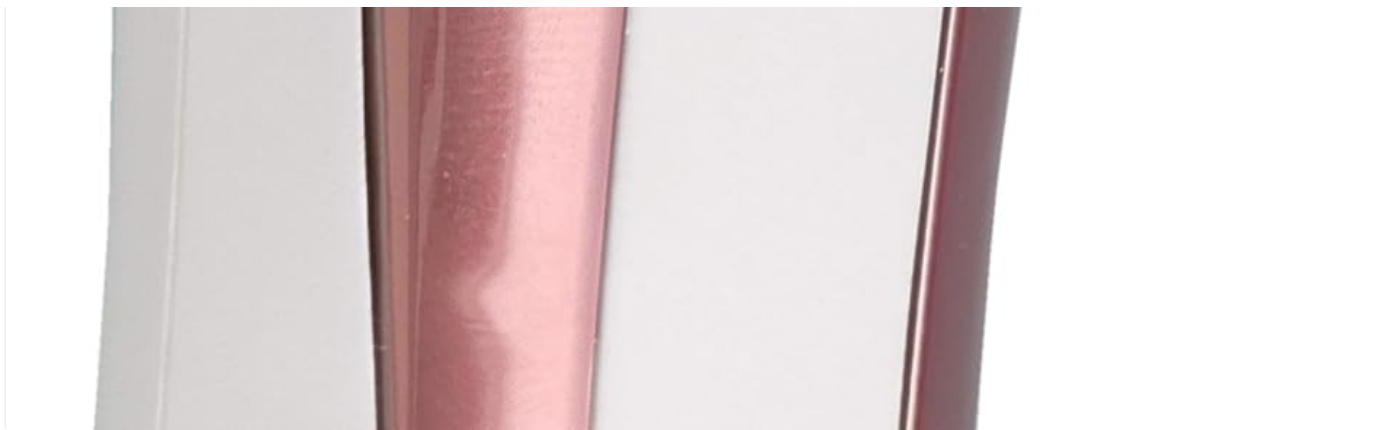


Image: A close-up of the trimmer's blade area, showing the built-in light turned on, providing illumination.

MAINTENANCE

Cleaning the Trimmer

1. Turn off the trimmer and disconnect it from any charging source.
2. Remove the guide comb (if attached).
3. Use the provided cleaning brush to remove loose hairs from the blades and trimmer body.
4. Since the trimmer is waterproof, you can rinse the blade head and body under running water. Ensure the charging port cover is securely closed if rinsing the entire unit.
5. Allow the trimmer to air dry completely before storing or recharging.

Blade Care

To maintain optimal performance and blade sharpness, apply a few drops of the included blade oil to the trimmer blades after every few uses, or as needed. Turn the trimmer on for a few seconds to distribute the oil evenly.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully.
Trimmer pulls hair or cuts poorly.	Blades are dirty or dull.	Clean the blades thoroughly and apply blade oil. If problem persists, blades may need replacement (contact support).
Trimmer is not charging.	Charging cable or stand not connected properly; faulty power source.	Ensure all connections are secure. Try a different USB power adapter or port.
LCD screen not displaying.	Trimmer is off or battery is completely drained.	Turn on the trimmer or place it on the charger.

SPECIFICATIONS

Model Number	CPT1-8008-SIG
Brand	Pure Silk
Power Source	Battery Powered (Rechargeable)
Operating Time	Up to 90 minutes (fully charged)
Blade Material	Hypoallergenic Ceramic
Waterproof	Yes
Included Accessories	4 Guide Combs, USB Charging Cable, Cleaning Brush, Blade Oil, Charging Stand
Item Weight	0.6 Pounds (approximately 272 grams)
Color	White

WARRANTY AND SUPPORT

This Pure Silk product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact Pure Silk customer service. Contact information can typically be found on the product packaging or the official Pure Silk website.

Note: Statements regarding dietary supplements have not been evaluated by the FDA and are not intended to diagnose, treat, cure, or prevent any disease or health condition. This disclaimer is provided as per product information, though it is not directly relevant to the operation of a body hair trimmer.

