

## AlfaBot S2

# AlfaBot S2 Cordless Electric Mop User Manual

Model: S2 | Brand: AlfaBot

## IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the AlfaBot S2 Cordless Electric Mop. Keep this manual for future reference.

- Do not immerse the main unit or charger in water.
- Use only the original charger provided with the device.
- Keep the mop away from heat sources and direct sunlight.
- Do not use the mop on wet electrical outlets or near flammable liquids.
- Ensure the water tank cap is securely closed before operation to prevent leaks.
- Keep out of reach of children and pets.

## PACKAGE CONTENTS

Please verify that all the following items are included in your package:

# Package Contents

- ① Mop Head Attachment
- ② Mop Handle
- ③ Extendable Pipe
- ④ Charger
- ⑤ Measuring Cup
- ⑥ Mopping Pads
- ⑦ User Manual
- ⑧ Quick Start Guide



Image: All components included in the AlfaBot S2 package, including the mop head, handle, extension pipe, charger, measuring cup, mopping pads, user manual, and quick start guide.

- Mop Head Attachment
- Mop Handle
- Extendable Pipe
- Charger
- Measuring Cup
- Mopping Pads (various types)
- User Manual
- Quick Start Guide

## SETUP

### Assembly

Follow these steps to assemble your AlfaBot S2 mop:

*Video: Step-by-step guide on how to assemble the AlfaBot S2 Cordless Electric Mop.*

1. **Assemble Extension Rod with Handle:** Connect the extendable pipe to the mop handle until it clicks into place.
2. **Connect the Power Cord:** Carefully connect the internal power cord from the handle to the mop head attachment.
3. **Assemble Extension Rod with Mop Head Attachment:** Attach the assembled handle and pipe to the mop head, ensuring a secure connection.
4. **Install the Mop Pads:** Align the mopping pads with the spinning discs on the underside of the mop head and press firmly to attach them using the Velcro.

## Initial Charging

Before using your AlfaBot S2 for the first time, ensure it is fully charged. Connect the charger to the mop and a power outlet. The indicator light will show charging status.

**2600mAh**  
**Rechargeable Battery**  
**for Cordless Use**

clean up to 2500 sq.ft area

2600mAh

60  
Max 60  
mins

*Image: The AlfaBot S2 mop connected to its charger, illustrating the charging process. A full charge takes approximately 4-5 hours and provides up to 60 minutes of runtime.*

## OPERATING INSTRUCTIONS

## Filling the Water Tank

The AlfaBot S2 features a 400ML water tank. To fill, open the water tank cap located on the top of the mop head and pour in clean water or a suitable floor cleaning solution using the provided measuring cup. Close the cap securely after filling.

# 400ML Big Water Tank

For entire house cleaning



# One-click Water Spray

To cleaning all the stains  
easily

*Image: Demonstrates how to fill the 400ML water tank of the AlfaBot S2 mop, highlighting the large capacity for extended cleaning sessions.*

## Dual Spin Head & Water Spray

The mop is equipped with a dual-motor spinning at up to 200r/min, which automatically propels the mop head forward, making cleaning effortless. Press the water spray button on the handle to dispense water or cleaning solution as needed for effective stain removal.

# Powerful and Quite Spin Motor



*Image: Close-up of the AlfaBot S2's powerful dual spin head in action, illustrating its high-speed rotation and quiet operation for efficient cleaning.*

## **Versatile Floor Cleaning**

The AlfaBot S2 is designed to effectively clean various hard floor surfaces, including wood, tile, marble, and laminate, removing common stains and dirt.

# Remove Stains from Different Types Of Floors



Wood floor



Tile floor



Marble floor



Laminate floor



*Image: Visual representation of the AlfaBot S2's effectiveness on different floor types, including wood, tile, marble, and laminate, demonstrating its versatility.*

## Adjustable Length and Angle

The mop's handle can be adjusted in length from 37.4 inches to 48.4 inches, allowing users of different heights to operate it comfortably without bending. The mop head offers a 180° left-to-right swivel and a 90° front-to-back pivot, enabling easy access to hard-to-reach areas and under furniture.

# LED Headlight and Adjustable Angles

Easily reach hard-to-clean corners



*Image: Illustrates the adjustable length of the AlfaBot S2 handle and the flexible angles of the mop head, showing how it can reach under furniture and into corners.*

## LED Headlight

The integrated LED headlight illuminates dark areas, making it easier to spot dust and dirt under furniture and in dimly lit corners for a more thorough clean.

## Mop Pads

The AlfaBot S2 comes with three types of mopping pads, each designed for specific cleaning tasks:

# Package Contents

- ① Mop Head Attachment
- ② Mop Handle
- ③ Extendable Pipe
- ④ Charger
- ⑤ Measuring Cup
- ⑥ Mopping Pads
- ⑦ User Manual
- ⑧ Quick Start Guide



Image: Displays the three different types of mopping pads included with the AlfaBot S2, each suited for various cleaning needs.

Pad Type	Purpose
Gray Mopping Pads	For daily cleaning and waxing, effective for dust and general dirt.
White/Gray Mopping Pads	For deep cleaning and spot cleaning, especially for larger dirty stains.
Pink Mopping Pads	Ideal for hair cleaning, wet cleaning, and edge cleaning.

## MAINTENANCE

### Cleaning Mop Pads

The mopping pads are reusable and can be cleaned either by hand or in a washing machine. For best results, rinse pads immediately after use to remove loose dirt, then machine wash with similar colors and air dry.

### Water Tank Care

After each use, empty any remaining water or cleaning solution from the tank. Rinse the tank with clean water to prevent buildup and odors. Allow it to air dry completely before storing.

## Battery Care

To maximize the lifespan of your mop's rechargeable battery, avoid storing the product in excessively humid environments. Always use the original AlfaBot charger for optimal charging and to prevent damage to the battery.

## TROUBLESHOOTING

If you encounter any issues with your AlfaBot S2 mop, please refer to the table below for common problems and solutions:

Problem	Possible Cause	Solution
Mop not turning on	Low battery; Improper assembly	Charge the battery fully; Ensure all parts are securely connected.
Weak or no water spray	Empty water tank; Clogged nozzle	Refill water tank; Clean the spray nozzle.
Pads not spinning effectively	Obstruction; Pads not securely attached	Remove any debris; Reattach pads firmly to the Velcro.
Water leaking	Loose water tank cap; Damaged tank/seal	Ensure cap is tightly closed; Inspect tank for cracks or damage. Contact support if damaged.

## SPECIFICATIONS

Feature	Detail
Brand	AlfaBot
Model Name	S2
Power Source	Battery Powered
Tank Volume	400 Milliliters
Runtime	Up to 60 minutes
Charging Time	4-5 hours

Feature	Detail
Item Weight	5.21 pounds
Product Dimensions	12.8 x 4.8 x 16.97 inches
Included Components	User Manual, Measuring Cup, Cleaning Pad

## WARRANTY AND SUPPORT

For any product-related inquiries, technical support, or warranty claims, please refer to the contact information provided in your product packaging or visit the official AlfaBot website. Protection plans are also available for purchase to extend coverage for your device.