



Manuals.plus /

› SoBuy /

› SoBuy BZR97-SN Laundry Unit Instruction Manual

SoBuy BZR97-SN

SoBuy BZR97-SN Laundry Unit Instruction Manual

Model: BZR97-SN

1. INTRODUCTION

This manual provides essential information for the safe assembly, operation, and maintenance of your SoBuy BZR97-SN Laundry Unit. Please read these instructions carefully before beginning assembly or use to ensure proper function and longevity of the product.

The SoBuy BZR97-SN Laundry Unit is designed to provide additional storage and organization for your bathroom or laundry room. It features a dedicated space for laundry bags behind a hinged door and three drawers for various accessories. Constructed from durable wood chipboard and wood fibers, it is suitable for high-humidity environments. The unit includes an anti-tip mechanism for safety and foot pads to protect against moisture.

2. SAFETY INFORMATION

- Always read and understand all instructions before assembly and use.
- Keep small parts and packaging materials away from children to prevent choking hazards.
- Ensure the anti-tip mechanism is securely installed to a wall to prevent accidents, especially in households with children or pets.
- Do not overload the drawers or the laundry compartment. Refer to specifications for weight limits.
- Use the product only for its intended purpose as a storage unit.

3. PACKAGE CONTENTS

The SoBuy BZR97-SN Laundry Unit is delivered in two packages. Please verify that all components and hardware are present before starting assembly. Refer to the detailed parts list included in your assembly instructions.

- Cabinet panels and components
- Three drawers and their components
- Hinged door for laundry compartment

- Folding laundry bags (polypropylene non-woven fabric)
- Assembly hardware (screws, dowels, etc.)
- Anti-tip safety kit
- Foot pads
- Detailed assembly instructions

4. SETUP AND ASSEMBLY

The SoBuy BZR97-SN Laundry Unit requires assembly. It is recommended to assemble the unit on a soft, clean surface to prevent scratches. Two people may be required for certain assembly steps.



Image 1: Fully assembled SoBuy BZR97-SN Laundry Unit.

4.1 Pre-Assembly Checks

- Unpack all components and lay them out.

- Compare all parts with the included parts list to ensure nothing is missing or damaged.
- Gather necessary tools (e.g., screwdriver, hammer).

4.2 Assembly Steps

1. Follow the step-by-step diagrams and instructions provided in the separate assembly manual.
2. Begin by assembling the main frame of the cabinet.
3. Install the drawer slides onto the cabinet frame and then assemble the three drawers.
4. Attach the hinged door for the laundry bag compartment. Ensure hinges are aligned for smooth operation.
5. Securely attach the foot pads to the bottom of the unit.
6. **Important:** Install the anti-tip mechanism. This involves securing a bracket to the back of the cabinet and then to a wall stud using appropriate hardware. This step is crucial for stability and safety.



Image 2: Product dimensions for planning placement.

5. OPERATING INSTRUCTIONS

The SoBuy BZR97-SN Laundry Unit is designed for straightforward use.

5.1 Using the Laundry Compartment

The laundry compartment is located behind the hinged door. Simply open the door by pulling the handle to access the folding laundry bag. Place dirty laundry inside the bag. When full, remove the bag for washing. The bag is made of polypropylene non-woven fabric.



Image 3: Laundry compartment with hinged door open.

5.2 Using the Drawers

The three drawers provide additional storage space for various bathroom or laundry accessories such as care products, creams, towels, or cleaning supplies. Pull the handles to open and push to close. Ensure items are placed neatly to allow smooth drawer operation.



Image 4: An open drawer displaying storage capacity.

6. MAINTENANCE AND CARE

Proper maintenance will ensure the longevity and appearance of your SoBuy BZR97-SN Laundry Unit.

- **Cleaning Surfaces:** Wipe all surfaces with a soft, damp cloth. For stubborn marks, a mild soap solution can be used, followed by wiping with a clean, dry cloth. Avoid abrasive cleaners, harsh chemicals, or solvents, as these can damage the finish.
- **Moisture Protection:** The unit is equipped with foot pads to protect against moisture. While suitable for high-humidity environments, avoid prolonged exposure to excessive water. Promptly wipe up any spills.
- **Drawer Maintenance:** Periodically check drawer slides for smooth operation. If needed, clean any dust or debris from the tracks. Do not force drawers if they stick.
- **Laundry Bag Care:** The polypropylene non-woven fabric laundry bag can be wiped clean with a damp cloth. Do not machine wash or tumble dry. Allow to air dry completely before reuse.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Retighten if necessary.

7. TROUBLESHOOTING

If you encounter any issues with your SoBuy BZR97-SN Laundry Unit, refer to the following common solutions:

- **Drawers not closing smoothly:** Check if the drawer slides are properly aligned and free of obstructions. Ensure the drawer is assembled correctly and not overloaded.
- **Unit wobbles:** Verify that all assembly screws are tightened securely. Ensure the unit is placed on a level surface. If necessary, adjust the foot pads or use shims. Confirm the anti-tip mechanism is correctly installed and secured to the wall.
- **Hinged door not closing properly:** Check hinge alignment and ensure no items inside the compartment are obstructing the door's path. Adjust hinges if needed, following the assembly instructions.
- **Missing parts:** If you discover missing parts during assembly, do not proceed. Contact customer support immediately.

8. SPECIFICATIONS

Feature	Specification
Brand	SoBuy
Model Number	BZR97-SN
Color	Natural Clear
Material	Wood chipboard, wood fibers, polypropylene non-woven fabric (basket)
Product Dimensions (W x D x H)	80 x 35 x 89 cm (31.5"W x 13.78"D x 35.04"H)
Item Weight	30.3 Kilograms (approx. 32 kg packaged)
Tested for Weight Capacity	51 kg (total)
Number of Drawers	3
Mounting Type	Floor Mount (with wall anchor for anti-tip)
Required Assembly	Yes
Number of Pieces (Cabinet)	5 (main cabinet components)

9. WARRANTY INFORMATION

Specific warranty details for the SoBuy BZR97-SN Laundry Unit may vary by region and retailer. Please refer to your purchase documentation, the product packaging, or the official SoBuy website for comprehensive warranty terms and conditions.

10. CUSTOMER SUPPORT

For further assistance, inquiries about missing parts, or warranty claims, please contact SoBuy customer support. You can typically find contact information on your purchase receipt, the product packaging, or by visiting the official

SoBuy website.

When contacting support, please have your model number (BZR97-SN) and proof of purchase readily available.