

[Manuals.plus](#) /

> [Yoidesu](#) /

> Yoidesu Body Camera User Manual

Yoidesu L7wifi

Yoidesu 1080P Body Camera User Manual

Model: L7wifi

1. INTRODUCTION

Thank you for choosing the Yoidesu 1080P Body Camera. This compact and versatile device is designed for various recording needs, offering high-definition video, a built-in hotspot for remote access, and a convenient back clip for hands-free operation. Please read this manual carefully to ensure proper use and optimal performance of your camera.

2. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Yoidesu Body Camera.



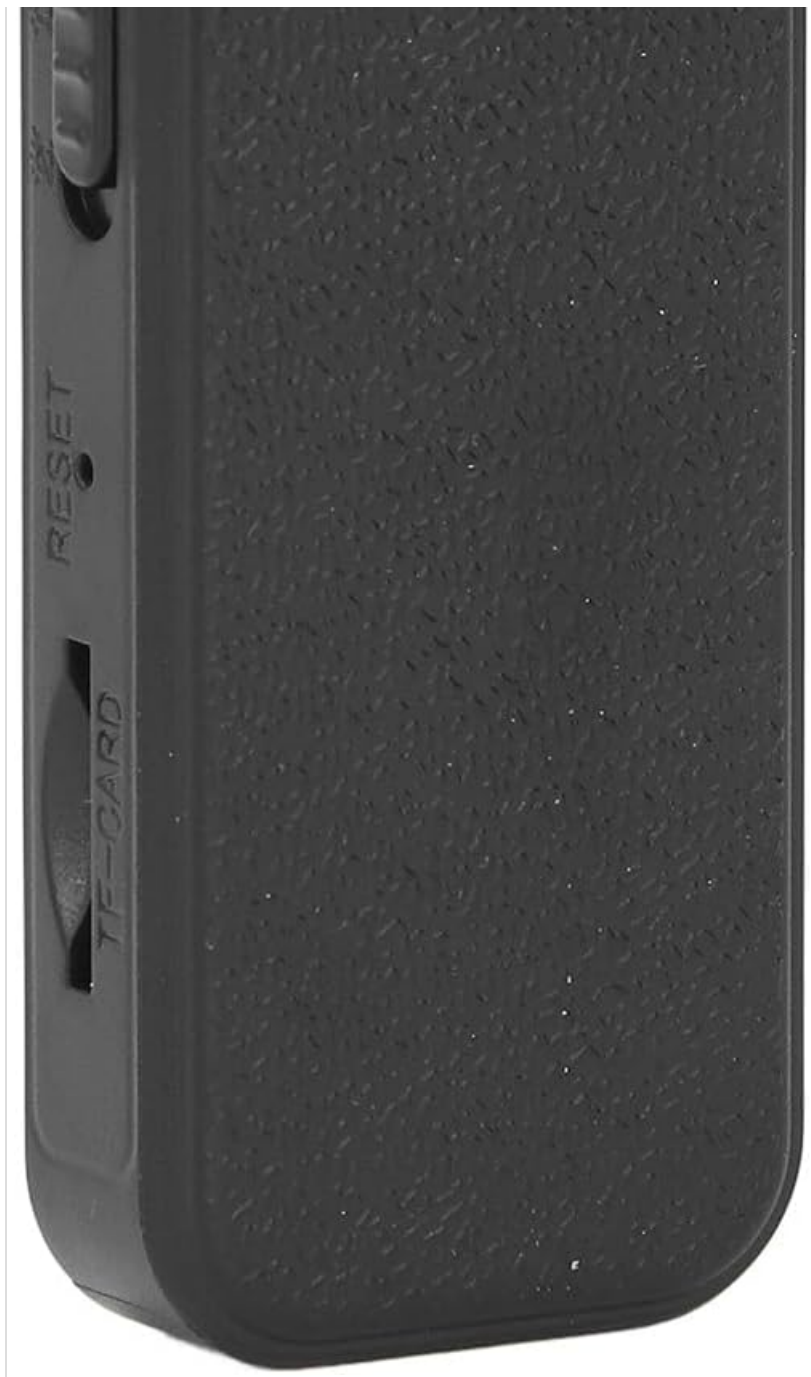


Figure 2.1: Front view of the Yoidesu Body Camera, showing the lens at the top and textured body.





Figure 2.2: Side view of the Yoidesu Body Camera with labeled controls including Night Vision ON/OFF, WiFi ON/OFF, Video/Save, ON/OFF, Reset button, and TF-Card slot.



Figure 2.3: The Yoidesu Body Camera demonstrating its 180-degree rotatable HD lens, shown at 0°, 90°, and 180° positions.

2.1. Camera Components

- **HD Lens:** The main camera lens, capable of 180-degree rotation for flexible recording angles.
- **Back Clip:** A sturdy clip for attaching the camera to clothing or gear.
- **TF-Card Slot:** For inserting a MicroSD memory card (up to 128GB, not included).
- **USB Port:** For charging and data transfer.
- **Indicator Lights:** Provide status feedback (e.g., recording, charging, Wi-Fi status).

2.2. Controls

- **ON/OFF Switch:** Powers the camera on or off.
- **Video/Save Button:** Initiates and stops video recording, and saves the current recording.
- **WiFi ON/OFF Switch:** Activates or deactivates the camera's built-in Wi-Fi hotspot.
- **Night Vision ON/OFF Switch:** Toggles night vision mode.

- **Reset Button:** Used to reset the device if it becomes unresponsive.

3. SETUP

3.1. Charging the Camera

Before first use, fully charge the camera. Connect the camera to a USB power source (e.g., computer, wall adapter) using the provided USB cable. The indicator light will show charging status and turn off or change color when fully charged.

- The camera has a built-in 500mAh lithium battery.
- It supports recording while charging, allowing for extended operation.

3.2. Inserting a Memory Card

The camera requires a MicroSD (TF) card for storing recordings. It supports cards up to 128GB (not included).

1. Locate the TF-Card slot on the side of the camera (refer to Figure 2.2).
2. Gently insert the MicroSD card into the slot with the gold contacts facing down until it clicks into place.
3. To remove, push the card in slightly until it springs out.

***Note:** Ensure the camera is powered off before inserting or removing the memory card to prevent data corruption.*

4. OPERATING INSTRUCTIONS

4.1. Powering On/Off

- **To Power On:** Slide the ON/OFF switch to the 'ON' position. The indicator light will illuminate.
- **To Power Off:** Slide the ON/OFF switch to the 'OFF' position. The indicator light will turn off.

4.2. Video Recording

One Click Video Button



Figure 4.1: The Yoidesu Body Camera in use, highlighting its one-click video recording capability.

1. Ensure the camera is powered on and a memory card is inserted.
2. Press the **Video/Save Button** once to start recording. The indicator light will change to indicate recording is in progress.
3. Press the **Video/Save Button** again to stop recording and save the video file.

The camera supports 1080P video resolution and one-mute recording (audio can be disabled).

4.3. Using the Wi-Fi Hotspot and Smartphone App

The built-in Wi-Fi hotspot allows you to connect your smartphone to the camera for live view, file management, and settings adjustments.

WiFi Remote Live View



Figure 4.2: A smartphone screen showing a live remote view from the Yoidesu Body Camera, demonstrating the Wi-Fi remote live view feature.

1. Slide the **WiFi ON/OFF Switch** to the 'ON' position to activate the camera's hotspot.
2. On your smartphone, go to Wi-Fi settings and connect to the camera's Wi-Fi network (SSID and password can usually be found in the camera's settings or manual, or on a sticker on the device).
3. Download and install the dedicated smartphone application (refer to the packaging or manufacturer's website for app details).
4. Open the app to access live view, browse recorded files, and modify camera settings.

4.4. Night Vision

To enable or disable night vision, slide the **Night Vision ON/OFF Switch** to the desired position.

4.5. Advanced Features

- **Loop Recording:** When enabled, the camera will continuously record, overwriting the oldest files when the memory card is full.

- **Motion Detection:** The camera can be set to start recording automatically when motion is detected.

These advanced settings are typically configured via the smartphone application.

5. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use for extended periods.
- **Firmware Updates:** Check the manufacturer's website periodically for any available firmware updates to improve performance and add features.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Low battery; device frozen.	Charge the camera. If unresponsive, press the Reset button with a thin object (e.g., paperclip).
Cannot record video.	No memory card; memory card full or corrupted; camera not powered on.	Insert a MicroSD card. Format or replace the card. Ensure camera is on.
Wi-Fi connection issues.	Wi-Fi hotspot not enabled; incorrect password; app issues.	Ensure Wi-Fi switch is ON. Verify Wi-Fi password. Restart camera and phone. Reinstall app.
Poor video quality.	Dirty lens; low light conditions; incorrect settings.	Clean the lens. Ensure adequate lighting or enable night vision. Check video resolution settings in the app.
Camera gets warm during operation.	Normal operation.	It is normal for electronic devices to generate some heat during use, especially during continuous recording or charging. If it becomes excessively hot, power off and contact support.

7. SPECIFICATIONS

- **Model:** L7wifi
- **Video Resolution:** 1920x1080P
- **Video File Format:** AVI
- **Photo Format:** JPG
- **Memory Card Support:** Maximum 128GB MicroSD (TF) card (not included)
- **Battery Type:** Built-in 500mAh Lithium Battery
- **Battery Life:** Approximately 7-8 hours of continuous video recording
- **Connectivity:** Wi-Fi Hotspot
- **Features:** Loop Recording, Motion Detection, Night Vision, 180° Rotatable Lens, Back Clip

- **Dimensions:** Approximately 5.51 x 2.76 x 1.18 inches (Package Dimensions)
- **Item Weight:** Approximately 2.4 ounces
- **Color:** Black

8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or contact the retailer/manufacturer directly. Keep your proof of purchase for warranty claims.

Manufacturer: Yoidesu

© 2024 Yoidesu. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0D838JNJW>

More documents and user manuals: <https://manuals.plus/>