

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [EagleStone](#) /

› [EagleStone ES78 Large Kids Play Tent Instruction Manual](#)

EagleStone ES78

EagleStone ES78 Large Kids Play Tent Instruction Manual

Model: ES78 | Brand: EagleStone

1. INTRODUCTION

Thank you for choosing the EagleStone ES78 Large Kids Play Tent. This indoor playhouse is designed to provide a spacious and comfortable environment for children aged 36 months to 15 years. It features star lights, a padded mat, and breathable windows, creating an engaging space for play and relaxation.

2. SAFETY INFORMATION

- Always supervise children while they are using the play tent.
- Keep the tent away from open flames, heat sources, and electrical heaters.
- Ensure all components are securely assembled before use.
- Do not hang heavy objects from the tent frame.
- Regularly inspect the tent for any damage or wear. Discontinue use if damaged.

3. WHAT'S IN THE BOX

Please check that all the following components are included in your package:

- Tent Fabric Cover
- Padded Mat (with non-slip backing)
- PVC Poles (various lengths for frame assembly)
- Connectors (for assembling poles)
- Star Lights (battery-operated, 2 AA batteries not included)
- Bunting Flags (decoration)
- User Manual

4. SETUP AND ASSEMBLY

Assembly is designed to be straightforward and tool-free. Follow the steps below for proper setup.

4.1 Frame Assembly

1. Unpack all PVC poles and connectors. Sort them by length and type as indicated in the user manual diagrams.
2. Begin by connecting the base poles using the appropriate connectors to form the rectangular base of the tent.
3. Attach the vertical poles to the base connectors, ensuring they are firmly inserted.
4. Connect the upper horizontal poles to the top of the vertical poles to form the upper frame.
5. Assemble the roof frame by connecting the angled poles to the top connectors, forming the A-frame structure.
6. **Important Tip:** Ensure all poles are fully inserted into the connectors. If poles are difficult to insert, a rubber mallet can be used gently to secure them. This ensures the tent fabric fits correctly and the structure is stable.

4.2 Fabric and Mat Installation

1. Carefully drape the tent fabric cover over the assembled frame, aligning the roof and sides.
2. Secure the fabric to the frame using the ties located at various points on the tent cover.
3. Place the padded mat inside the tent, ensuring it lies flat on the base. The mat has a non-slip backing to prevent movement.

4.3 Decorative Elements

1. Install 2 AA batteries (not included) into the battery pack of the star lights.
2. Drape the star lights along the roofline or inside the tent as desired, securing them with the provided ties.
3. Thread the bunting flags onto the provided string using the needle, then hang them as a decorative accent.



Figure 1: Tent frame assembly diagram.



Figure 2: Fabric and mat installation.



Figure 3: Decorative elements installation.

Spacious Space



Figure 4: Fully assembled play tent.

4.4 Assembly Video

Video 1: Detailed assembly process for the EagleStone Kids Play Tent.

5. OPERATING INSTRUCTIONS

- Doors:** The tent features a large double-door opening at the front and a smaller entrance at the back. These can be tied open or closed using the fabric ties.
- Windows:** Four breathable windows with mesh curtains allow for air circulation and visibility. The curtains can be tied back for an open feel or left down for more privacy.
- Star Lights:** Turn the star lights on/off using the switch on the battery pack to create a magical ambiance.
- Padded Mat:** The thick, soft mat provides a comfortable surface for sitting, lounging, or napping. Its non-slip design ensures it stays in place during play.



Figure 5: Interior view of the tent with a child playing.



Figure 6: Tent interior with star lights providing a cozy atmosphere.

6. MAINTENANCE

- Cleaning the Fabric:** The tent fabric can be spot cleaned with a damp cloth and mild soap. Allow to air dry completely.
- Cleaning the Mat:** The padded mat is washable. Refer to the care label on the mat for specific washing instructions.
- Frame Care:** Wipe down PVC poles with a damp cloth as needed.
- Storage:** When not in use, disassemble the tent and store all components in a dry, cool place away from direct sunlight.

7. TROUBLESHOOTING

- Tent fabric does not fit:** Ensure all PVC poles are fully inserted into their connectors. Sometimes, extra force or a rubber mallet may be needed to secure them completely.
- Tent is unstable:** Double-check that all pole connections are tight and the frame is correctly assembled according to the diagrams.
- Star lights not working:** Verify that fresh 2 AA batteries are correctly installed in the battery pack and that the switch is in the 'ON' position.

8. SPECIFICATIONS

Brand	EagleStone
Model Number	ES78
Product Dimensions (Assembled)	Approximately 50 inches (Height) x 39 inches (Width) x 47 inches (Depth)
Item Weight	6.98 pounds
Recommended Age	36 months - 15 years
Material	Soft, skin-friendly fabric, PVC poles

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact EagleStone customer service directly. Refer to the product packaging or the official EagleStone website for contact details.

