

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Glitzhome](#) /

› [Glitzhome 7.5ft Prelit Artificial Christmas Tree Emerald Elegance Slim Fir User Manual](#)

Glitzhome Emerald Elegance Slim Fir Tree

Glitzhome 7.5ft Prelit Artificial Christmas Tree Emerald Elegance Slim Fir User Manual

Model: Emerald Elegance Slim Fir Tree

Brand: Glitzhome

Introduction	Safety Information	Maintenance	Troubleshooting	Package Contents	Setup	Operation Specifications	Support
------------------------------	------------------------------------	-----------------------------	---------------------------------	----------------------------------	-----------------------	--	-------------------------

1. INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Glitzhome 7.5ft Prelit Artificial Christmas Tree. Please read these instructions carefully before assembly and retain for future reference.



Image 1: The Glitzhome 7.5ft Prelit Artificial Christmas Tree, shown unlit with wrapped gifts around its base.

2. SAFETY INFORMATION

To ensure safe operation and prevent injury or damage, please observe the following safety guidelines:

- Keep all electrical components away from water or moisture.
- Do not overload electrical outlets.
- Ensure all connections are secure before plugging in the tree.
- Keep children and pets away from the tree during assembly and while it is powered on.
- Do not place the tree near heat sources or open flames.
- Unplug the tree when not in use or before performing any maintenance.
- This product is for indoor use only.

3. PACKAGE CONTENTS

Verify that all components are present before beginning assembly:

- Tree Sections (3 sections)
- Folding Metal Stand

- Remote Controller for LED Lights
- Power Adapter
- White Gloves (for handling branches)

Easy to Assemble



Image 2: Visual representation of the tree components and assembly steps.

4. SETUP INSTRUCTIONS

Follow these steps to assemble your artificial Christmas tree:

1. **Assemble the Stand:** Open the folding metal stand and place it on a stable, level surface. Tighten the screws on the stand to secure it.

Easy to Assemble



Image 3: Step 1 of assembly, illustrating how to set up the tree stand.

2. **Insert Tree Section 1 (Bottom):** Carefully insert the bottom section of the tree trunk into the assembled stand. Ensure it is firmly seated.

Easy to Assemble



3. **Insert Tree Section 2 (Middle):** Place the middle tree section onto the bottom section. Align the sections carefully.
4. **Insert Tree Section 3 (Top):** Place the top tree section onto the middle section.
5. **Connect Electrical Cords:** Locate the red ribbon labels on the electrical cords between each tree section. Connect the corresponding male and female connectors. Ensure all connections are snug.

Easy to Assemble



Image 5: Detail of connecting the electrical cords between tree sections.

- Shape the Branches:** Begin unfolding the hinged branches, starting from the lowest section and working your way up. Gently spread out each branch tip to achieve a full and natural appearance. Wear the provided white gloves to protect your hands.
- Plug In:** Connect the power adapter to the tree's main power cord and then plug it into a standard electrical outlet.

Setup Video Guide:

Your browser does not support the video tag.

Video 1: A step-by-step guide demonstrating the assembly process for the Glitzhome 7.5ft Prelit Artificial Christmas Tree.

5. OPERATING INSTRUCTIONS

Your Glitzhome Christmas tree features 400 LED lights with 9 different lighting modes, controlled by the included remote.

NINE FUNCTION

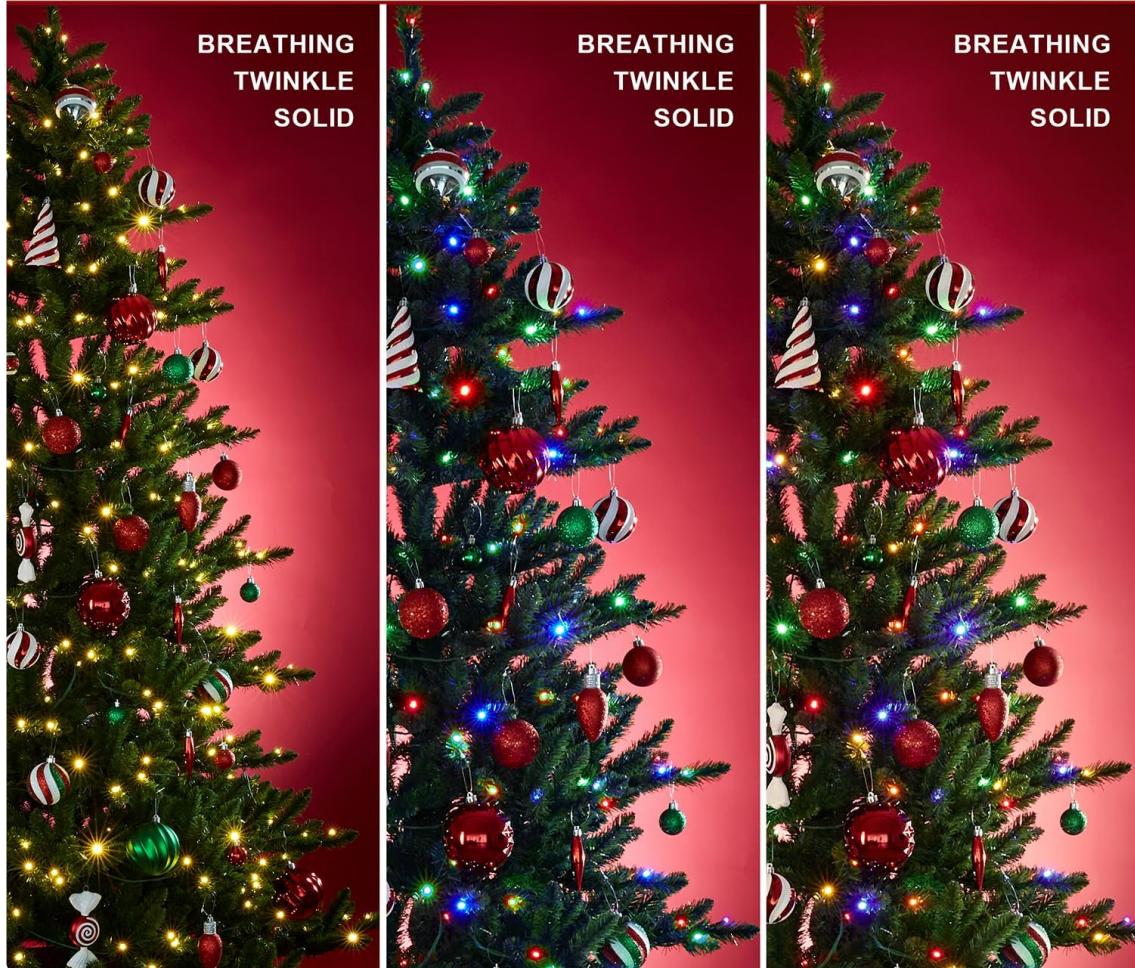


Image 6: Illustration of the nine light functions available, including breathing, twinkle, and solid modes.

Remote Control Functions:

- **ON/OFF:** Press to turn the lights on or off.
- **MODE:** Cycle through the 9 different lighting modes (e.g., Combination, Warm white steady on, Color light steady on, Warm white Slo-Glo, Color light Slo-Gol, Warm white and Color light sequential, Warm white and Color light twinkle, Warm white and Color slow fade, Single light Slo-Glo).
- **Timer:** (If applicable, refer to remote for specific timer functions)
- **Brightness:** Adjust the brightness of the lights.



Image 7: The Christmas tree illuminated with vibrant multi-color LED lights, surrounded by wrapped presents.

6. MAINTENANCE

Proper care will extend the life of your artificial Christmas tree:

- **Cleaning:** Dust the branches gently with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Storage:** Before storing, ensure the tree is completely unplugged and dry. Disassemble the tree in reverse order of assembly. Gently compress the branches. Store all sections and the stand in their original packaging or a suitable storage bag in a cool, dry place.
- **Light Care:** If a light bulb burns out, replace it promptly to maintain the integrity of the light string. Refer to the power adapter for bulb specifications.

7. TROUBLESHOOTING

If you encounter issues with your tree, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lights do not turn on.	<ul style="list-style-type: none"> Power cord not plugged in. Loose electrical connections between sections. Faulty outlet. Remote control battery depleted. 	<ul style="list-style-type: none"> Ensure the power cord is securely plugged into a working outlet. Check all red-labeled electrical connections between tree sections. Test the outlet with another device. Replace the remote control battery.
Some sections of lights are off.	<ul style="list-style-type: none"> Loose connection between tree sections. Damaged bulb or wire in that section. 	<ul style="list-style-type: none"> Verify the electrical connection for the affected section. Inspect bulbs for damage and replace if necessary.
Tree is unstable.	<ul style="list-style-type: none"> Stand not fully opened or screws not tightened. Tree sections not properly seated. 	<ul style="list-style-type: none"> Ensure the metal stand is fully extended and all screws are tightened. Re-seat tree sections to ensure they are firmly in place.

8. SPECIFICATIONS

Feature	Detail
Brand	Glitzhome
Model	Emerald Elegance Slim Fir Tree
Height	7.5 feet (90 inches)
Base Diameter	4.2 feet (50 inches)
Branch Tips	1336
LED Lights	400, Color Changing
Light Modes	9 (controlled by remote)
Material	Polyvinyl Chloride (PVC), Metal
Item Weight	23.5 Pounds
Special Feature	Prelit, Hinged Branches

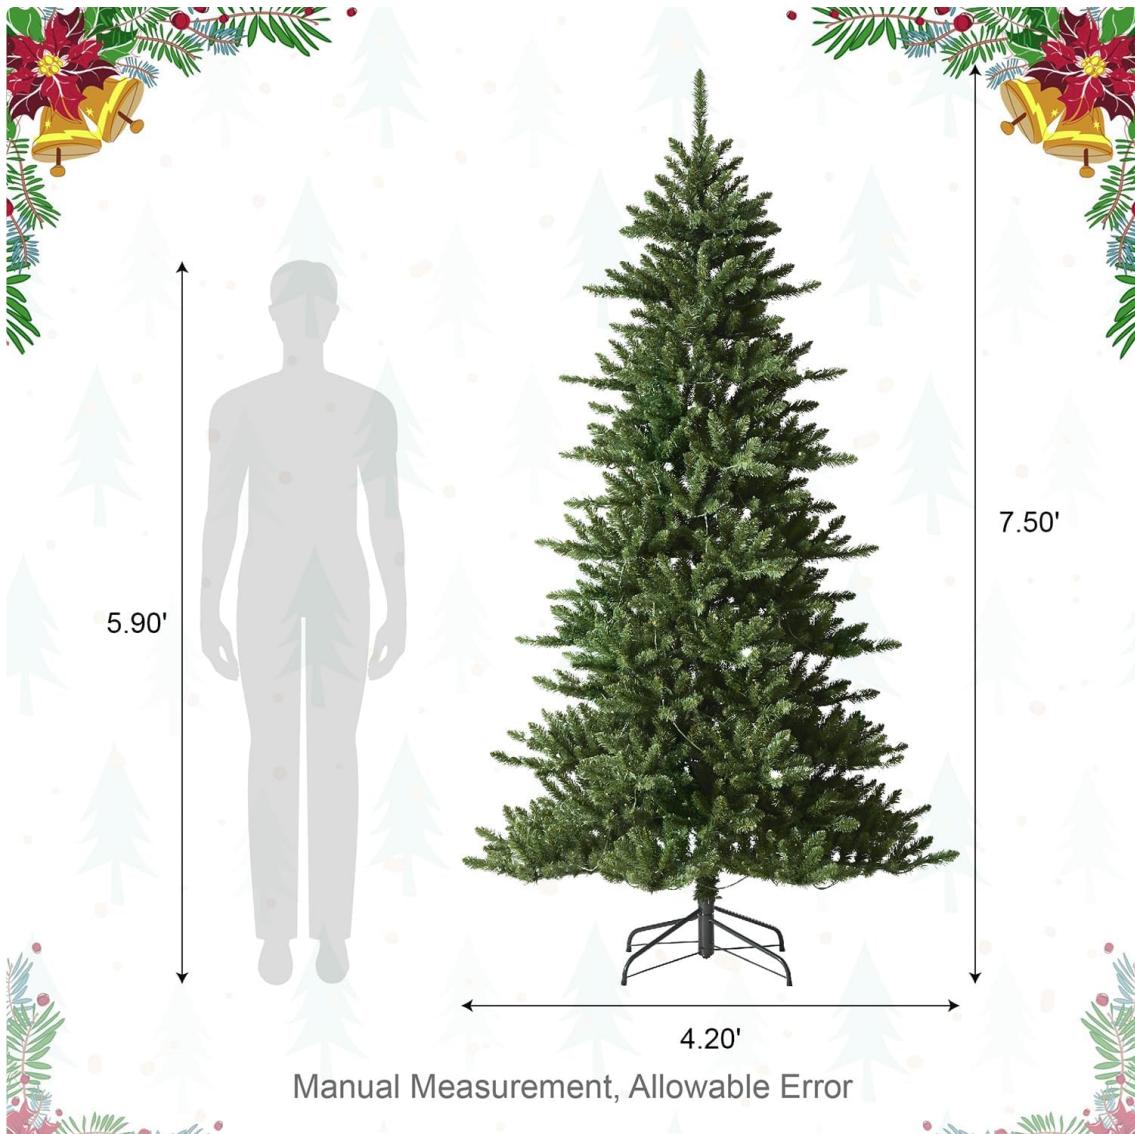


Image 8: Dimensions of the Glitzhome 7.5ft Prelit Artificial Christmas Tree.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Glitzhome customer service. Refer to your purchase documentation for specific contact details or visit the official Glitzhome website.

Online Resources:

- Visit the [Glitzhome Store on Amazon](#) for more products and information.

© 2024 Glitzhome. All rights reserved.

Related Documents - Emerald Elegance Slim Fir Tree



[Glitzhome 6ft Pre-Lit Snow Flocked Fir Christmas Tree Assembly Instructions](#)

Assembly instructions for the Glitzhome 6ft Pre-Lit Snow Flocked Fir Christmas Tree with 300 Warm White Lights. Includes disassembly, storage, and step-by-step assembly guidance.

	<p>9ft Deluxe Pre-Lit Flocked Pine Artificial Christmas Tree Assembly Instructions</p> <p>Assembly and disassembly instructions for the Glitzhome 9ft Deluxe Pre-Lit Flocked Pine Artificial Christmas Tree with 650 Warm White Lights, including parts list, safety precautions, and storage tips.</p>
	<p>Glitzhome 9ft Pre-Lit Flocked Spruce Artificial Christmas Tree Assembly Instructions</p> <p>Assembly and disassembly guide for the Glitzhome 9ft Pre-Lit Flocked Layered Spruce Artificial Christmas Tree with 500 Warm White Lights (Model 2014600099). Includes product specifications, parts list, step-by-step assembly, and safety precautions.</p>
	<p>Glitzhome 9ft Pre-Lit Pencil Green Pine Artificial Christmas Tree with 480 Warm White Lights - Assembly Instructions</p> <p>Assembly and setup guide for the Glitzhome 9ft Pre-Lit Pencil Green Pine Artificial Christmas Tree (Model 2014600092). Features 480 warm white lights and easy setup.</p>
	<p>Glitzhome 7.5ft Pre-Lit Flocked Pencil Spruce Artificial Christmas Tree Assembly Instructions (Model 2014600093)</p> <p>Step-by-step assembly instructions for the Glitzhome 7.5ft Pre-Lit Flocked Pencil Spruce Artificial Christmas Tree with 350 Warm White Lights, model 2014600093. Includes disassembly, storage, and caution information.</p>
	<p>Glitzhome 9ft Pink Pencil Tinsel Artificial Christmas Tree Assembly Instructions</p> <p>Step-by-step assembly guide for the Glitzhome 9ft Pink Pencil Tinsel Artificial Christmas Tree, detailing parts, assembly process, disassembly, storage, and safety precautions.</p>